2SUNDAYS JR1752TX Remote Controller





2SUNDAYS JR1752TX Remote Controller Instruction Manual

Home » 2SUNDAYS » 2SUNDAYS JR1752TX Remote Controller Instruction Manual



Contents

- 1 2SUNDAYS JR1752TX Remote
- Controller
- 2 Specifications
- **3 Product Usage Instructions**
- 4 FAQs
- **5 Product Display**
- **6 Remote Control Instructions**
- 7 FCC
- 8 Documents / Resources
 - 8.1 References



2SUNDAYS JR1752TX Remote Controller



Specifications

• Product: Engineering Vehicle Remote Control Toy

- Control Method: 2.4G Remote Control
- Power Source: 2 AAA batteries (1.5V each)

Product Usage Instructions

• Frequency Binding and Power On/Off

• Frequency binding is required for the first use. To turn on or off the remote control, use the POWER key.

· Connecting to the Vehicle

- To establish a connection, long press the Connect key for 3 seconds until the first LED flickers. Turn on the vehicle power.
- When the LED stops flickering, the connection is successful.

Controlling Fork Lift Movement

 Use the Lift up and Lift down keys to control the movement of the forks. Press the Brake key to enter the braking state; all LEDs will flicker. Press the key again to exit the braking state.

Battery Safety Guidelines


- · Follow these guidelines for battery safety:
- Load two AAA (1.5V) batteries according to the diagram.
- Do not recharge non-rechargeable batteries.
- Avoid mixing different types of batteries or new and used batteries.
- Ensure correct battery polarity during insertion.
- · Remove exhausted batteries from the toy promptly.
- · Avoid short-circuiting the supply terminals.
- Retain the packaging for important information.

FAQs

Q: Is this toy suitable for children under 3 years?

• A: No, this toy is not suitable for children under 3 years old due to small parts and choking hazards.

Product Display

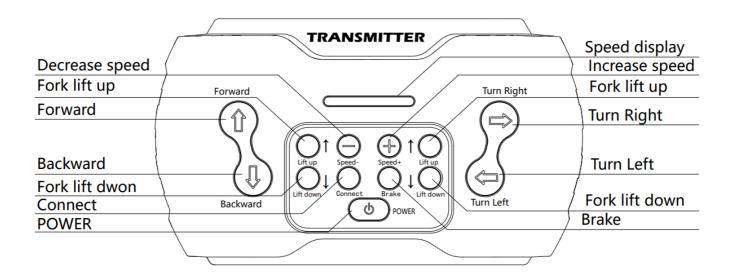

Remote Control Instructions

2.4G Remote control instructions for Engineering vehicle Frequency binding is required for the first use

- 1. "POWER" key for turning on or turning off this remote control.
- 2. Long press the "Connect" key for 3 seconds to start Connect, until the first LED flickers, Turn on the vehicle power now, The LED stop flickers, Description connect is successful.
- 3. Press the Lift up and lift down keys, Control the lift up or lift down of forks.
- 4. Press the "Brake" key to Enter the braking state, All LEDs flicker, Press this key again to exit the braking state.

WARNING! Not for children under 3 years. Small parts. Choking hazard

- Load two AAA (1.5V) batteries according to the diagram.
- Non-rechargeable batteries are not to be recharged.
- Different types of batteries or new and used batteries are not to be mixed.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- The packaging must be retained since it contains important information.

FCC

FCC Caution.

(1)§ 15.19 Labelling requirements.

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference, and
- 2. this device must accept any interference received, including interference that may cause undesired operation.

§ 15.21 Changes or modification warning

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

15.105 Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, under part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used per the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning for Portable devices:

- The device has been evaluated to meet general RF exposure requirements.
- The device can be used in portable exposure conditions without restriction.
- According to §15.247(e)(i) and §1.1307(b)(1), systems operating under the provisions of this section shall be
 operated in a manner that ensures that the public is not exposed to radio frequency energy level more than the
 Commission's guidelines.

Documents / Resources



2SUNDAYS JR1752TX Remote Controller [pdf] Instruction Manual JR1752TX Remote Controller, JR1752TX, Remote Controller, Controller

References

User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.