




3DMAKERPRO Seal Lite Handheld 3D Scanner User Manual

[Home](#) » [3DMakerpro](#) » 3DMAKERPRO Seal Lite Handheld 3D Scanner User Manual 

3DMAKERPRO Seal Lite Handheld 3D Scanner User Manual

V1.2

3DMAKERPRO
store.3dmakerpro.com

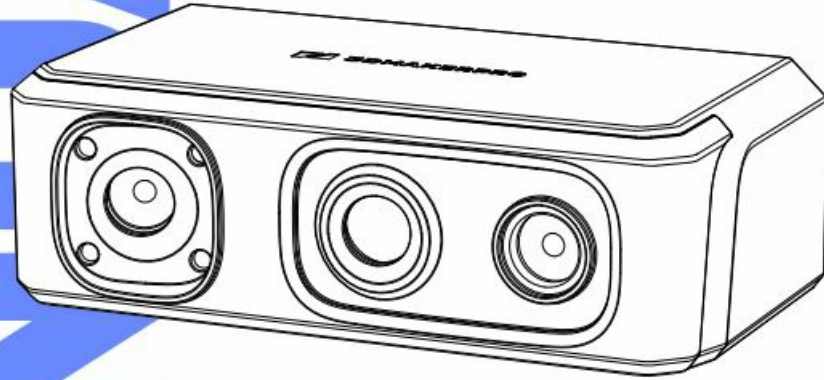

SEAL & SEAL Lite

Download latest :JMStudio from <https://from.jimumeta.com/home/help/download.html>

Get latest Manual from <https://from.jimumeta.com/home/help/manual.html>



<https://forum.jimumeta.com/home/help/download.html>



<https://forum.jimumeta.com/home/help/manual.html>

3DMAKERPRO

f @3DMakerProCares

@official3DMakerPro

@3DMakerPro

<https://store.3dmakerpro.com/>

service@3dmakerpro.com

JimuMeta

f @JimuMeta

@JimuMeta

<https://www.jimumeta.com/>

service@jimumeta.com

[Facebook](#)

[Instagram](#)

[YouTube](#)

<https://store.3dmakerpro.com>
service@3dmakerpro.com

[Facebook](#)

[Twitter](#)

<https://www.jimumeta.com/>
service@jimumeta.com

Contents

1 Hardware Connection


2 Packing List

3 Documents /

Resources


3.1 References

Hardware Connection

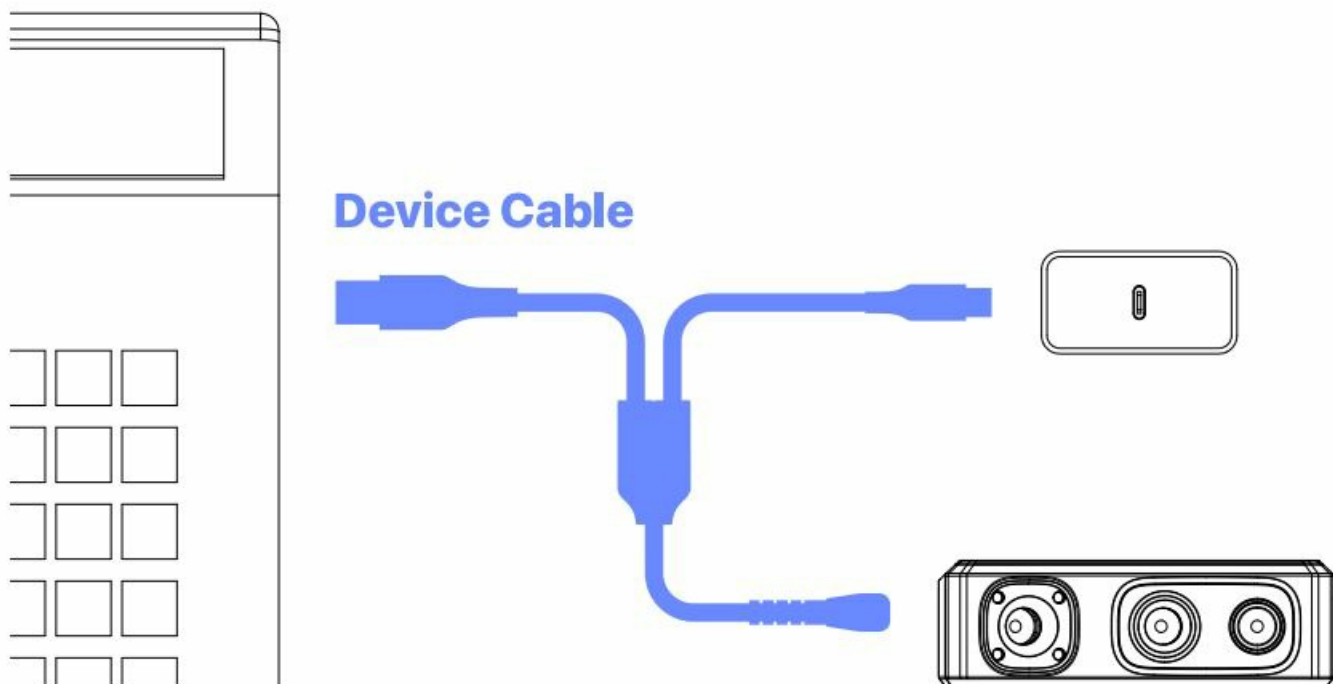


Plug the longer end of the device cable into the scanner, another two shorter ends into the PC and power adapter respectively.


Packing List

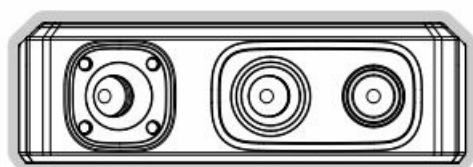

Scanner Body

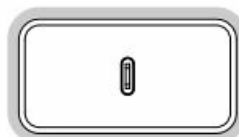

Power Adapter

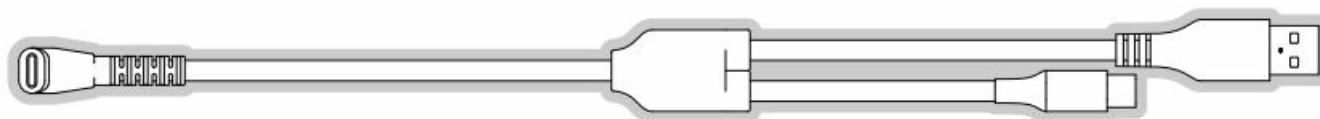

Device Cable

* Product images are for illustrative purposes only.

Operating System Requirement

Minimum Intel Core i5 8th, 16GB RAM, MX250 GPU with 2GB VRAM

Recommended Intel Core i7 8th, 16GB RAM, NVIDIA1060 GPU with 4GB VRAM

⚠ To prevent antivirus software from blocking the driver, AA please uninstall the antivirus software.

Documents / Resources

	3DMAKERPRO Seal Lite Handheld 3D Scanner [pdf] User Manual Seal Lite Handheld 3D Scanner, Seal Lite, Handheld 3D Scanner, 3D Scanner, Scanner
---	---

References

- [User Manual](#)