



Contents [[hide](#)]

- [1 4GLTE K8S Two Way Radio](#)
- [2 Product Usage Instructions](#)
- [3 OVERVEIW](#)
- [4 FOR YOUR SAFETY](#)
- [5 Packing List](#)
- [6 Care and Cleaning](#)
- [7 Accessory Installing/Removing](#)
- [8 Basic Operation](#)
- [9 LED Indicator](#)
- [10 Troubleshooting](#)
- [11 FCC Statement](#)
- [12 FAQ](#)
- [13 Documents / Resources](#)
 - [13.1 References](#)



4GLTE K8S Two Way Radio




Product Usage Instructions

- Follow the provided installation guide to set up the two-way radio properly. Ensure all components are securely connected.
- To power on the device, press and hold the power button until the indicator light turns on. To power off, repeat the same step until the indicator light goes off.
- Use the channel selector to choose the desired communication channel. Refer to the user manual for information on channel frequencies.
- To communicate, press the designated talk button while speaking and release it when done. Ensure clear communication by avoiding obstructions.
- When the battery is low, connect the radio to the charger provided. Allow sufficient time for a full charge before unplugging.

OVERVEIW

Diagram A

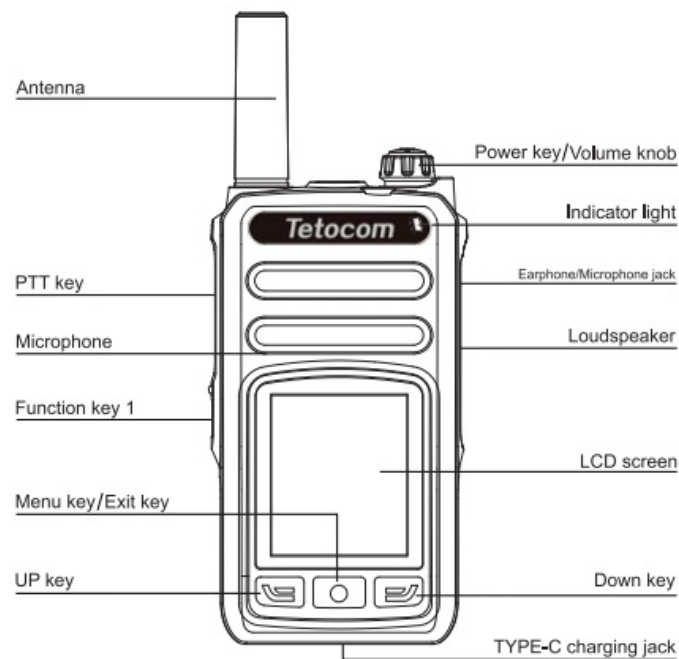

FOR YOUR SAFETY

• **SWITCH ON SAFELY**

- Do not switch the device on when the transceiver use is prohibited or when it may cause interference or danger.

• **ROAD SAFETY COMES FIRST**

- Obey all local laws. Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety.

• **INTERFERENCE**

- All wireless devices may be susceptible to interference, which could affect performance.

• **SWITCH OFF IN HOSPITALS**

- Follow any restrictions. Switch the device off near medical equipment.

• **SWITCH OFF IN AIRCRAFT**

- Follow any restrictions. Wireless devices can cause interference in aircraft.



- **SWITCH OFF WHEN REFUELING**

- Do not use the device at a refueling point. Do not use near fuel or chemicals.



- **SWITCH OFF NEAR BLASTING**

- Follow any restrictions. Do not use the device where blasting is in progress.



- **QUALIFIED SERVICE**

- Only qualified personnel may install or repair this product.



- **ENHANCEMENTS AND BATTERIES**

- Use only approved enhancements and batteries. Do not connect incompatible products.



- **CONNECTING TO OTHER DEVICES**

- When connecting to any other device, read its user manual for detailed safety instructions. Do not connect incompatible products.



- **USE SENSIBLY**

- Use only in the normal position as explained in the product documentation. Do not touch the antenna unnecessarily.

UNPACKING AND CHECKING EQUIPMENT

Carefully unpack the transceiver. We recommend that you identify the items listed in the following table before discarding the packing material. If an item is missing or has been damaged during shipment, file a claim with the carrier immediately!

Packing List

ITEM	Unit	QUANTITY
Unit Radio	PC	1
Battery Pack	PC	1
Adapter	PC	1
Cable	PC	1
Belt Clip	PC	1
User Manual	PC	1
Hand Strap	PC	1
Antenna(Optional)	PC	1

Charging the Battery Pack.

- Please charge your battery only with an approved charger.
- Initially, charging the battery pack after purchase or extended storage (more than 2 months) will not bring the battery pack to its normal operating capacity.
- After repeating the charge/discharge cycle two or three times, the operating capacitance will increase to a normal level.

Please charge the battery pack as follows

1. Insert the battery adapter TYPE-C socket in the rear of the battery. Slide the battery pack or transceiver with battery pack into the 110-220V desktop charger.
2. The charging LED lights red, and charging begins. When the light turns green, it means the battery pack is fully charged. Remove the power adapter AC plug from The AC power output socket.
3. You can charge the battery with the desktop charger. The charger indicator light is green when finished charging.

Kind remind

Please use the battery, ensure it the charging. The extent of the battery's life. Charge the battery in the temperature range of 5-40°C, outside this range, the battery will not be fully charged. Turn off the power when charging the battery. Do not remove the battery cover by yourself. You had better not touch the plug or battery, otherwise it will interfere with the charging process. The battery's usage time is not increase even when fully charged, which means the battery's life I finished. Please replace the battery. The

battery should not be exposed to temperatures above 60°C.

Warning

- Do not put the battery into a fire or a strong external impact, otherwise it will be possible to cause an explosion or harm the human body.
- In any case, the battery electrode terminal cannot be short-circuited.
- Please use the dry towel to wipe the battery surface, and the battery is not recommended to be put (or whole) beside the key or have metal in the pocket or wallet.

Care and Cleaning

To guarantee optimal performance as well as a long service life of your radio, please follow the tips below.

- Do not pierce or scrape the radio with any edged instruments or hard objects.
- Keep the radio far away from substances that can corrode the electronic circuit.
- Do not hold the radio by its antenna or headset cable directly.
- Attach the accessory jack cover when the radio is not in use.
- Clean up the dust and spot particles on the radio surface and charging piece with a clean and dry lint-free cloth or a brush regularly.

Accessory Installing/Removing

1. Installing the Battery Pack

1. The battery of the metal surface connects with the transceiver connector. Then gently push the battery; you will hear a “click” sound, and the battery is installed.

2. Removing the Battery Pack

1. Power off the transceiver first, then press down on the back of the radio and push the battery back to remove the battery pack.

3. Installing the Belt Clip

1. Fix the transceiver and screw the belt clip from the back of transceiver, turning it clockwise until secure.

4. Removing the Belt Clip

1. Counter clockwise the screw from the back of transceiver, until remove.

5. Installing/Removing external

1. Earphones: Pull the headphone/microphone cover and insert the headphone/microphone into the socket.

6. Installing Hand Strap

Pass the transceiver strap through the middle ring of the transceiver back cover.

Basic Operation

Basic Operation [PoC]

Power On / Off

- Clockwise rotation [Power key] to turn on the radio; Counterclockwise rotation [Power key] to turn off the radio. If the SIM card has not been inserted or is not registered, the radio will remind" please insert the card “.

* Adjusting the Volume

In standby mode, you can increase the volume by turning the [volume knob] clockwise, and decrease the volume by turning the [volume knob] counterclockwise.

Menu and Operation

Group Selection Operation

- In standby mode, press the [Menu] key to enter the menu mode; click the [Group] to enter the group selection operation, and press [Up/ Down] key to choose a different group, then press [Menu] key to confirm the enter the group chosen. Long-press [Exit key] to exit.

The current operation.

Member Selection Operation

- In standby mode, press [Menu] key to enter the menu mode; click the [Member]-[Members] to enter the member selection operation, press [Up/Down] key to choose different members, then press [Menu] key to confirm the entry. Long-press [Exit key]

to exit the current operation.

- Enter [Group Members], search for online members, use the [Up] and [Down] keys to have a conversation with friends in the list, and exit related operations. Long-press [Exit key] to exit.
- Enter [Friend Members] and search for online friends. Use the [Up] and [Down] keys to have a conversation with friends in the list and exit related operations. Long-press [Exit key] to exit.
- Go to [Dispatcher] and select the desired dispatcher. Use the [Up] and [Down] keys to converse with friends in the list.
- Settings
 - In standby mode, Press the Menu key to enter menu mode, then click the [settings], and press the [Up/Down] key to choose different settings. Long-press [Exit key] to exit the current operation.
- Different settings
 - Screen: Short press [Menu] to turn on/ off the radio screen.
 - Indicator Light: Short-press [Menu] to turn on/ off the indicator.
 - Keyslight: Short press [Menu] to turn on/off keypad light.
 - TTS broadcast: Short press [Menu] to turn on/Off TTS broadcast.
- Audio Setting
 - Sound quality setting: [Standard sound quality] type and [High definition sound quality] type are available.
- Scene Mode
 - Indoor mode and outdoor mode are available.
- Prompt tone setting
 - Enter the [Prompt tone level], choose level 0-6 by [Up] and [Down] keys.
- Language
 - Short press [Menu] to choose [Chinese] or [English].
- Time Zone Setting
 - Enter the [Time zone setting], choose the time zone you need by [Up] and [Down] keys, then Press [Menu] to confirm.
- Backlight time
 - Set up backlight time by [Up] and [Down] key, then Press [Menu] to confirm.
- Backlight brightness
 - Adjust the brightness of the screen from level 1-8 by the [Up] and [Down] keys.

- Power Saving Settings
 - [Normal mode] or [Saving mode] is available.
- Network Setting
 - Choose the relevant network type according to the actual needs.
- SIM Card Switching
 - Switch the SIM card by [Up] and [Down] keys, then short-press [Menu] to confirm.
- Firmware Upgrade
 - Firmware upgrade operation.
- Information of the Unit
- In standby mode, click the [Menu] key to enter the menu mode; click [Host Info], and there are [User Info],[Firmware],[Version], [Positioning] in this menu. Press [Menu] key to confirm.

Enter Transmitting Status

Press the [PTT] key, the red indicator light is on, and speak into the microphone with a normal voice when the 'DI' sound is heard. Please keep your mouth 3-5 cm away from the microphone to get the best voice quality.

Enter Receiving Status

- When the channel is called, the green indicator light will be on. Please release the [PTT] key to receive the call.

Low Electric Prompt Function

- When the battery voltage is too low, the voice broadcast 'power is insufficient'. When the battery power is too low, the interphone will shut down automatically to protect the module





Other Operations

Long press[Function key 1] to broadcast current User name/Group name/Battery electricity percentage. Short press[Function key 1] to turn on/off screen backlight.

LED Indicator

- Transmitting or charging, red light is on. Receiving signal, green light is on.

LCD Screen Display

Signal Strength mark		Signal strength
Battery level		The battery is increasing in turn.
Mute mode		It means that it's in mute mode.
SIM Card		SIM Card1、SIM Card2

Troubleshooting

Troubleshooting guide Slution

Problem	Solution
No response after powered on poc radio	1) The battery electricity is not enough: the battery may have run out. Replace the battery or charge; 2) Sim card read failure: Check or replace other mobile phone operator sim cards; 3) Poor battery contact: reinstall batteries or clean battery contacts.
Insufficient standby time	Battery performance degradation: Replace battery;
Charging failure	1) Poor contact: Check contact, replace socket or plug; 2) Battery voltage is too low: It will cause no charging display, charge for about half an hour, then unplug and recharge; 3) Battery failure: Replace battery; 4) Charger failure: replace or repair the charger;
No network connection	1) Bad signal: Move to the open area and try again; 2) Not in the service area: Try to confirm network coverage.

Note: Due to the continuous improvement of technology, the above specifications and technical parameters are for reference only, subject to actual conditions

FCC Statement

Any Changes or modifications not expressly approved by the party responsible for compliance could void\ the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

SAR tests are conducted using standard operating positions accepted by the FCC with the device transmitting at its highest\ certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value. Before a new model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC. Tests for each product are performed in positions and locations as required by the FCC. For body worn operation, this device has been tested and meets the FCC RF exposure guidelines when used with and accessory designated for this product or when used with and accessory that contains no metal. To maintain compliance with FCC RF exposure guidelines, hold the transmitter and antenna at least 1 inch 2.5 centimeters) from your face and speak in a normal voice, with the antenna pointed up and away from the face.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -Reorient or relocate the receiving antenna - Increase the separation between the equipment and receiver.

- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Right Statement

- Without our prior written permission, it is strictly prohibited to copy, deliver, distribute, and store any of the contents of this manual.
- In the continuous improvement and development principle, we reserve the right to


modify and improve any product described in this manual, in the case of non pre notice.

- In any case, we shall not be liable for any loss of data, other aspect, special event, any direct or indirect damage caused by the accident.
- The contents of this manual are provided from us. Unless required by applicable law, we don't guarantee that the content of accuracy, reliability, the contents style or expression, not limited to merchantability and fitness for a particular
- practical guarantee. We reserve the right to amend or take back the use of the manual without prior notice.
- If the manual content description is different from the radio, please refer to the radio.

FAQ

- Q: How do I reset the two-way radio?
- A: To reset the device, locate the reset button (if available) and press it using a small tool like a paperclip. Follow any additional reset instructions in the user manual.
- Q: Can I use the two-way radio in extreme weather conditions?
- A: It is recommended to avoid exposing the radio to extreme weather conditions to ensure optimal performance and longevity. Refer to the user manual for specific operating temperature ranges.

Documents / Resources

	4GLTE K8S Two Way Radio [pdf] User Manual 2BN3L-TS-K8S, 2BN3LTSK8S, K8S Two Way Radio, K8S, Two Way Radi o, Radio
---	---

References

- [User Manual](#)

🔍 2BN3L-TS-K8S, 2BN3LTSK8S, 4GLTE, K8S, K8S Two Way Radio, Radio, Two-Way

📁 4GLTE Radio

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.