



# Home » 5Core » 5Core WM\_SPK\_BLK Wireless Karaoke Microphone Bluetooth Mic Instruction Manual ₹

# Contents [ hide ]

- 1 5Core WM\_SPK\_BLK Wireless Karaoke Microphone Bluetooth Mic
- 2 Technical Specification
- 3 Product Usage Instructions
- 4 Karaoke Treasure Instructions
- 5 Buttons Operation
- 6 CONTACT INFO
- 7 Frequently Asked Questions
- 8 Documents / Resources
  - 8.1 References



5Core WM\_SPK\_BLK Wireless Karaoke Microphone Bluetooth Mic



# **Technical Specification**

- Color- Black
- Operating voltage: 3.7V
- Maximum output power: 5W
- Battery: Non-removable Rechargeable
- TF supports the following music formats: MP3,3, WAV
- TF card maximum capacity: 32GB (Not included) Frequency range: 150Hz-20KHz
- Signal-to-noise ratio: =85dB
- Maximum sound pressure level: 115db 1kHz THD one hundredth
- Bluetooth transmission Distance- 50 Ft(depending on environment)

# **Product Usage Instructions**

# **Charging the Microphone:**

Before first use, charge the microphone using the provided charging cable. The LED indicator will show the charging status.

#### Power On/Off:

To power on the microphone, press and hold the power button. To power off, repeat the same step.

## **Connecting via Bluetooth:**

Turn on the microphone and enable Bluetooth on your device. Search for 'WM SPK GLD' and connect to start using the microphone wirelessly.

### **Inserting a TF Card:**

If you want to play music from a TF card, insert the card (up to 32GB) into the designated slot on the microphone.

# **Adjusting Settings:**

You can adjust volume, echo, and other settings using the control buttons on the microphone.

## **Karaoke Treasure Instructions**



# **Buttons Operation**

1 0

Hold: ON/OFF Press: Mode switching

2. ^.

Press: the previous song under MP3 mode.

Under the set. Press it to enable selfie function x 5 (only for IOS system mobile phone)

3. 💙

4. HI

Press: Play/Pause Under state, hoki for automatic search


5. 8/0

Press: Mike ONIOFF

Hold: Replay function under TF card play mode

6. "+"Increase volume

7. "-"Decrease volume

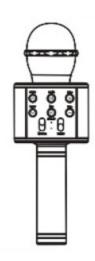

#### 1. Wireless Karaoke

- 1. Supply power: Hold "" button to start the product
- 2. Wireless connection: enable the wireless of the mobile phone, check to connect. 'successful connection if a prompt tone.
- 3. Adjust sound: adjust the sound volume of the microphone and the reverberation to a suitable level.
- 4. Start Karaoke

# Recording with a mobile phone

 Connect the recording wire: insert the MICRO plug of the recording wire into the MICRO

interface of Karacke Treasure, and the 3.5mm eros into the earphone[jack of the mobile  $\boldsymbol{\varsigma}$ 

2. Open the Karaoke software on your mobile phone, such as: USING, Kugou Music, or oth recording apps, select your favoratie ong. Record. he 50ng According 10 the above-

mentioned HNGNg Mead.

3. Test and save the song: operate according to the Instructions of the Karaoke software.

#### Seifie function

1. Press the "U" button to switch from wireless mode to selfie mode:

2. Enable wireless in the mobile phone, search "shutter", click connection:

3. Open the photograph interface of the mobile phone, press the ^" or" > " button to take photos.

**Note:** 4.2.2 or higher version for Android system, 6.0 or higher version for iOS system (it doesn't support other versions temporarily). It doesn't support mobile phones with an independent and solid photograph button.

#### **Technical Parameters**

Output Power. SW

Frequency Range: 100HZ~10KHZ

Max Sound Pressure Level: >11508 1KHZ TOM < 1%</li>

Reverberation Modsound effect reverberation

• Power Supply: Built-in 18650 Li-battery

• Battery Capacity: 1800mAR + Charging Power: DCSV

#### **Professional Bluetooth**

#### KARAOKE MICROPHONE











WM SPK PINK

WM SPK GLD

# **CONTACT INFO**

#### **Customer care:**

- +1(985)306-3921
- customercare@5core.com
- 1221 W Sandusky Ave Bellefontaine, OH, USA. 43311

# Sales support:

- $\bullet$  +1(951)383-6157 s
- ales@5core.com
- www.5core.com

Customer care: +19853063921

Website: www.5core.com

# **Frequently Asked Questions**

• Q: How do I know if the microphone is fully charged?

A: When charging, the LED indicator will turn green once the microphone is fully charged.

• Q: Can I use the microphone while it is charging?

A: Yes, you can use the microphone while it is charging, but it is recommended to charge fully before extended use.

Q: What should I do if the Bluetooth connection is unstable?

A: Ensure there are no obstacles between the microphone and your connected device. You can also try re-pairing the devices.

# **Documents / Resources**



<u>5Core WM\_SPK\_BLK Wireless Karaoke Microphone Bluetooth Mic [pdf] I</u> nstruction Manual

WM\_SPK\_BLK, WM\_SPK\_COPPER, WM\_SPK\_PINK, WM\_SPK\_BLU, WM\_SPK\_GLD, WM\_SPK\_BLK Wireless Karaoke Microphone Bluetooth Mic, WM\_SPK\_BLK, Wireless Karaoke Microphone Bluetooth Mic, Karaoke Microphone Bluetooth Mic, Bluetooth Mic, Mic

#### References

- User Manual
- 5Core
- ◆ 5Core, Bluetooth Mic, Karaoke Microphone Bluetooth Mic, mic, Wireless Karaoke Microphone Bluetooth Mic, WM\_SPK\_BLK, WM\_SPK\_BLK Wireless Karaoke Microphone Bluetooth Mic, WM\_SPK\_BLU, WM\_SPK\_COPPER, WM\_SPK\_GLD, WM\_SPK\_PINK

# Leave a comment

Your email address will not be	published. Required	fields are marked*
--------------------------------	---------------------	--------------------

Comment *			

Name
Email
Website
☐ Save my name, email, and website in this browser for the next time I comment.
Post Comment
Search:

Manuals+ | Upload | Deep Search | Privacy Policy | @manuals.plus | YouTube

e.g. whirlpool wrf535swhz

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.

Search