



## 75F T8045PC Tablet PC User Manual

[Home](#) » [75F](#) » 75F T8045PC Tablet PC User Manual 

### Contents

- 1 75F T8045PC Tablet PC
- 2 ACKNOWLEDGMENT
- 3 PACKAGE CONTENTS
- 4 FEATURES
- 5 SAFETY NOTICE
- 6 Getting To Know The Tablet
- 7 About the Orientation Sensor
- 8 Charging the Tablet
- 9 Inserting a Memory Card
- 10 Getting Started
- 11 Home Screen At A Glance
- 12 About Applications
- 13 Installing Applications
- 14 Documents / Resources
  - 14.1 References
- 15 Related Posts



**75F T8045PC Tablet PC**



## ACKNOWLEDGMENT

Many thanks for choosing our product. The product belongs to MID(Mobile Internet Device), which is a kind of mobile internet device, delicate, small exquisite, and portable. It is also equipped with a piece of touch LCD of high definition, which can be used to watch videos and pictures of high definition. It supports the installation of multiple application programs for office and entertainment. The fantastic operation interface will give you a brand-new user experience.

This manual systematically introduces diversified functions, using skills and matters needing the attention of this MID, please read this manual carefully before using it.

To view PDF documents, download and install the free Adobe Acrobat reader from the Adobe website at [www.adobe.com](http://www.adobe.com)

## PACKAGE CONTENTS

Please make sure that the items shown below are included in the package. If any accessories are missing, please contact the local retailer from where you bought this product. please contact the local retailer from whom you purchased this product.

- Internet Tablet
- USB cable

## FEATURES

- Browse the Web  
Visit your favorite websites
- Check your e-mail  
Keep in touch with friends and family
- Watch Youtube™ videos  
Browse the world's most popular video-sharing community

- Read your favorite books  
Download thousands of books with the included E-book reader
- Discover thousands of apps for Android™ Games, applications, and more with the installed marketplace
- Connect to the internet: wirelessly  
High-speed Wi-Fi 802.11 b/g/n networking
- Enjoy your media library anywhere Portable powerhouse plays popular music, video, and photo formats
- MicroSD memory card reader  
Increase your storage capacity (up to 32 GB Recommended)
- Built-in camera  
Convenient front-facing camera
- Automatic orientation detection  
Read any way you want the display adjusts automatically!

Reading books in the ePub format requires the included E-book reader application.


## **SAFETY NOTICE**

Before using MID, please read the information in this section, and make your children learn about the information. About more detailed information, please refer to safety instructions and matters needing attention. Please don't use MID when you are driving, for fear of hindering safe driving



- Don't use MID when you are driving, for fear of hindering safe driving.
- In medical places, please observe relevant stipulations and regulations. And in regions near the medical devices, please shut down MID.
- Shut down MID or enable the airplane mode when boarding, so that the wireless signals will not interfere control signal of the airplane.
- Don't dismantle the MID and its accessories on yourself, and only the authorized agency can maintain this MID.
- Don't use MID in places with high temperatures and inflammable gas ( such as nearby gas stations).
- Shut down MID neighboring electronic equipment with high accuracy, otherwise, the breakdown of electronic equipment may be brought about.
- Put MID and its accessories in places beyond children's touch, please don't let children use MID without supervision.
- During the use of this MID, please observe related laws and regulations, and respect the privacy and legitimate rights of others.
- Strictly abide by relevant explanations in this manual when using USB data line, otherwise, MID or personal computer may be damaged.
- Don't use the MID in humid environments such as bathrooms, etc., and the MID being soaked or rinsed by liquid must be avoided.

## **Getting To Know The Tablet**

### **Unit At A Glance:**

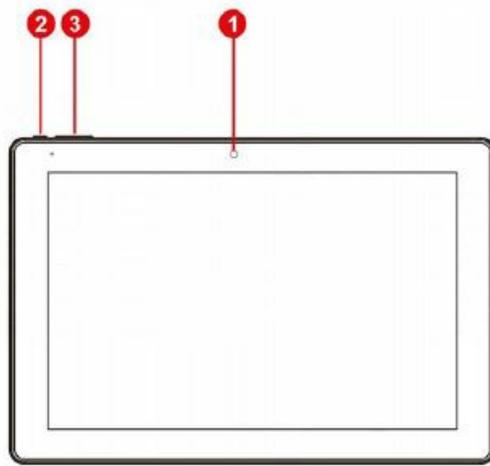

	Name	Description
1	Camera	Front-facing camera
2	Power Key	Press 1o turn the unit on, or to turn the screen on and off.
3	Volume Key	Press 1o increase/decrease the volurre level.

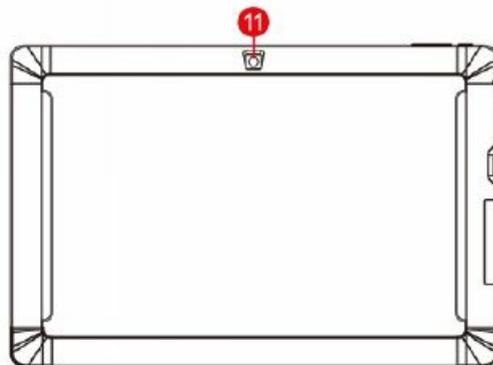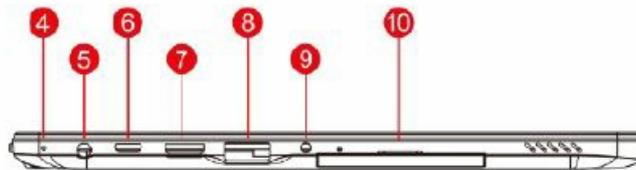

	<b>Name</b>	<b>Description</b>
4	Speaker	Speaker output is automatically muted when using headphonejack.
5	Headphone jack	Audie output connection for head-phones.
6	MicroUSB	Connect a device to the tablet.
7	HDMI	To connect your android tablet to a T'
8	USB	Connect a storage device to the tablet.
9	DC	To charge the Tablet
10	Tf	Load external SD memory cards here.
11	Rear Camera	Rear-facing camera

#### **About the Touchscreen:**

Your tablet comes equipped with an easy-to-use touch screen which allows access to the tablet's functions. Use your fingertip to touch the area of the screen where a control icon is displayed. If you touch and hold the screen, it will register as a continuous button press.

To avoid damaging the screen, do not touch it with excessive force or with any object other than your finger. For best response, make sure your hands are clean before using the touchscreen controls.

#### **Protective Film:**

A thin film has been applied to the touchscreen to protect it during shipping. The protective film should be removed before use. To remove it, simply take a corner of the film and peel it away from the screen.

#### **Touchscreen Actions:**

You can control the functions of the tablet by using the touchscreen combination with the three touch keys located on the bezel. To control the tablet with the touchscreen, use your fingertip to manipulate icons, buttons, menu items, the on-screen keyboard, and other items displayed on the screen. You can perform the following actions on the touchscreen using your fingertip.

<b>Touch:</b>	To activate an on-screen item (e.g., application icons, buttons, menu items and the letter/symbols of the on-screen keyboard), simply touch it with your fingertip.
<b>Touch and hold:</b>	Some on-screen items have an alternate action if you touch and hold it (e.g., opening an alternate menu or to activate the drag function). To touch and hold an item, touch the item and do not lift your fingertip until the action occurs.
<b>drag:</b>	Drag an on-screen item to change its position (e.g., an application icon on the home screen).  To drag an item, touch and hold it for a moment, then without lifting your fingertip, move your fingertip on the screen until the item reaches its target destination.

<b>Swipe:</b>	Swipe up/down on the screen to scroll through a list. On some screens, you may be able to swipe left/right to change the view.  To swipe, touch the screen and then quickly move your fingertip across the screen without lifting your fingertip.  Do not pause on the screen with your fingertip at the initial point of contact or you may accidentally drag an item instead.
<b>double-tap:</b>	Quickly tap the screen twice on a webpage or other application screen to zoom (the application must support the double-tap/zoom function). Within the browser, double-tapping a webpage section will cause the browser to zoom and fit that section to the width of the screen.

## About the Orientation Sensor

The tablet contains a sensor that will automatically change the orientation of most screens as you rotate the tablet. The sensor works best when the tablet is rotated perpendicular to the ground (i.e., when the tablet is held upright and not flat on its back).

The orientation sensor can be turned on and off in the display settings menu.



## Charging the Tablet

The current battery status will be always displayed in the lower right of the screen in the system information bar. The battery icon will change by the battery status.

When connected to the DC charger, the status area on the bottom bar will display the IL charging icon. Note the lightning symbol inside the battery icon.

## To charge the battery.

1. Plug one end of the included power adapter into an AC 100-240V outlet.
2. Plug the other end of the included power adapter into the power jack on the tablet.
3. Disconnect the power adapter when the tablet is fully charged

The battery used in this device may cause a fire or chemical burn if mistreated. Do notv disassemble, incinerate or heat the device. Do not leave the device in direct sunlight or in a car with its windows closed. Do not connect the device to a power source other than that which is indicated here or on the label, as this may result in a fire or electric shock.

## Inserting a Memory Card

1. The tablet accepts microSD memory cards. Insert a memory card into the microSD card slot to:
2. Increase the memory capacity of your tablet
3. Play media files stored on the memory card (e.g. music, video or photo files).

### To insert a memory card:

1. Align the memory card with the card slot. The metal contacts of the memory card should face down and towards the LCD screen.
2. Slide the card into the spring-loaded slot. Push the card in until it clicks into place.  
Do not attempt to insert objects other than a microSD memory card into the card slot. A compatible memory card should fit easily into the card slot. If you encounter resistance, check the alignment of the card. Do not attempt to force the card in.
3. Avoid touching the gold contacts of the memory card.

### To release and remove a memory card:

- UNMOUNT THE MEMORY CARD:
  - In the home screen, tap the Launcher Tab and then touch Settings to show the settings menu.
  - Touch Storage to show the storage settings.
  - Touch Unmount Sd card to prepare the memory card for safe removal.



- Push the card further into the slot until you hear a click. The card will spring out of the slot.
- Grasp the card by its edge to remove it.

To avoid damage and data corruption, do not remove a memory card while data is being written to or read from the card. For example, do not remove a card while playing a music file stored on the card.

### **Resetting the Tablet:**

Reset the tablet if it should freeze and does not respond or otherwise malfunctions.

1. Disconnect your tablet if it is connected to a computer.
2. Push and hold down the power button until the tablet powers off. Then push the power button one more time to restart the tablet.

### **Getting Started**

Turning the Tablet ON and OFF:

#### **To turn the tablet on:**

Press and hold the power key until the LCD screen turns on. Wait until the Home screen appears; the tablet is now ready for use.

#### **To turn the tablet off:**

1. Press and hold the power key until the confirmation message appears.



2. Touch OK to turn OFF the tablet.

### **Turning the Screen On and Off (Standby):**

- When the tablet is on, you can turn off the screen to conserve battery power. Simply press the power key once to turn the screen off. Press the power key again to turn the screen back on.
- To conserve battery power, the screen can be set to turn off automatically when the tablet is not in use (between 15 seconds and 30 minutes). This Sleep option can be found in the display menu.

### **Unlocking the Screen:**

- When the screen turns off, you will have to unlock the screen when you turn it back on.
- To unlock the screen, touch and drag the lock icon to the edge of the circle that appears.




If a password has been set, enter the password to finish unlocking the screen. The Screen Unlock password can be set in the Security settings menu.



**WARNING:** Please write down your password/ pin/lock pattern. Misplacing or forgetting this will lock the user out. Recovering the unit will reset the device back to factory defaults. All Your Data & Programs Will Be Lost.

## Home Screen At A Glance

The Home Screen is the starting point for all of the features of your tablet.

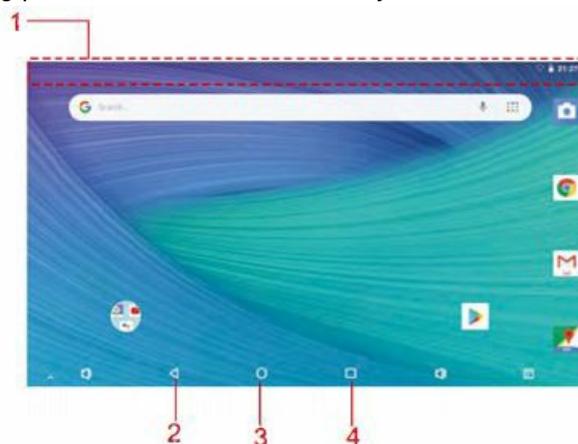


	Name	Description
1	Notification Bar	Shows notification icons such as time, battery level and the network signal strength; touch the bar to open the full Notifications panel. Touch a Notification icon to display more detail.

name		description
2	Back	Touch to go back to the previous screen.
3	Home icon	Touch to go back to the central Home screen.
4	Recent Apps	Touch to display the list of thumbnail images of apps you riave worked o n recently. Touch an App to open it.

## About Applications


To open an application, touch the application icon on the home screen or in the Launcher.


### Launcher screen:

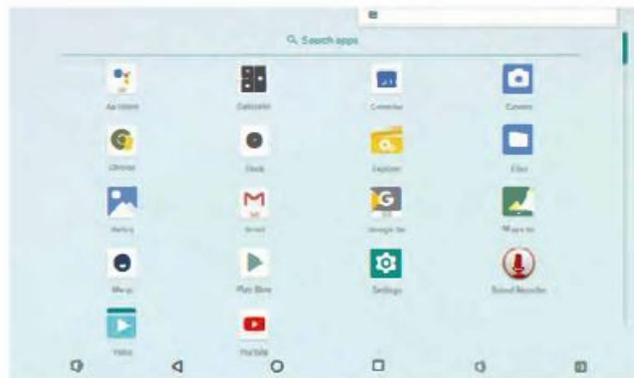

### Preinstalled Applications:

 Some applications have been installed on your tablet for your convenience. These applications include:

 Chrome	Browse the web.
 Calendar	Display the calendar or record events and appointments to manage your schedule.
 Calculator	Perform simple mathematical operations.
 Camera	Take pictures or videos with the front-facing camera.
 Clock	View the current time, or set an alarm.

  Files	View and manage files stored on the tablet.
 Gmail	Check your e-mail.
 Gallery	View photos and videos, plus edit photos.
 Settings	Access the settings menu to adjust the tablet's options.
 Video	View videos.

## Installing Applications

You can also download and install additional applications from the Play Store, the web browser, or other sources. The tablet must be set to allow the installation of applications from non-market sources. The unknown sources option can be set in the Application settings menu.

### About Widgets:

Widgets are self-contained applications that you can place on the Home screens to access your favorite features.

### Adding Widgets to a Home Screen:

1. Navigate to the Home screen on which you want to place the Widget.
2. Touch the Launcher Tab.
3. Touch WIDGETS to show all widgets and then hold on a widget icon to add it to the Home screen.

### Removing Widgets:

Touch and hold the Widget until the Remove icon appears at the top of the screen, then drag the Widget to the Remove icon to remove it.

## Documents / Resources

<small>USER'S MANUAL TABLET PC</small>	<a href="#">75F T8045PC Tablet PC</a> [pdf] User Manual T8045PC Tablet PC, T8045PC, Tablet PC, PC
--	--

## References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)