



8BitDo Ultimate C Wired Controller User Manual

[Home](#) » [8Bitdo](#) » 8BitDo Ultimate C Wired Controller User Manual 

Contents


- [1 8BitDo Ultimate C Wired Controller](#)
- [2 OVERVIEW](#)
- [3 Windows](#)
- [4 Turbo function](#)
- [5 Support](#)
- [6 Documents / Resources](#)
- [7 Related Posts](#)

8BitDo®

8BitDo Ultimate C Wired Controller



OVERVIEW

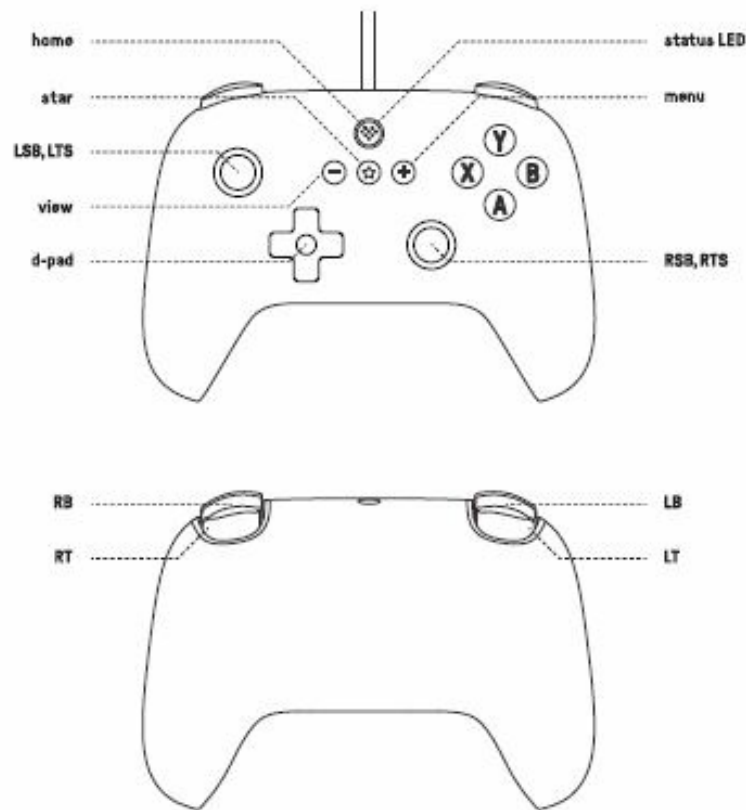

Windows

- required system: Windows 10 (1903) or above hold X button while connecting the controller to the USB port of your device, wait till the controller is successfully recognized by your Windows, Status LED stays solid.
- **Raspberry Pi & Android**
- OTG support is required on your Android device, please contact your manufacturer for more information. hold B button while connecting the controller to the USB port of your device, wait till the controller is successfully recognized by your device, Status LED stays solid.

Turbo function

- status LED blinks continuously when the button with turbo functionality is pressed.
- D-pad, joysticks are not included. hold the button you would like to set turbo functionality to and then press the star button to activate/deactivate its turbo functionality.


Support

- status LED blinks continuously when the button with turbo functionality is pressed.
- D-pad, joysticks are not included. hold the button you would like to set turbo functionality to and then press the star button to activate/deactivate its turbo functionality.

Please visit support.sbitdo.com for further information & additional support.



Documents / Resources

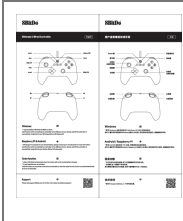

[8BitDo Ultimate C Wired Controller](#) [pdf] User Manual
Ultimate C Wired Controller, Wired Controller, Controller