



Contents [[hide](#)]

- [1 AMP AFL-4010 DiffusePro Flood Light](#)
- [2 Specifications](#)
- [3 IMPORTANT SAFETY INSTRUCTIONS:](#)
- [4 PACKAGE CONTENTS](#)
- [5 PRODUCT DIMENSIONS](#)
- [6 Install Stake](#)
- [7 Remove Cover and Gasket with Lens](#)
- [8 Install Bulb](#)
- [9 Install Gasket with Lens and Cover](#)
- [10 Install Luminaire to Stake](#)
- [11 Wire Connections](#)
- [12 FAQ](#)
- [13 Documents / Resources](#)
 - [13.1 References](#)



AMP AFL-4010 DiffusePro Flood Light



Specifications

- Item: AFL-4010
- Power Supply: Transformer rated maximum of 300 watts (25 AMPS) at 15 volts
- Low Voltage Cable: Shallow burial, less than 6 inches (152 mm)

IMPORTANT SAFETY INSTRUCTIONS:

READ BEFORE INSTALLATION

This luminaire is intended for installation in accordance with local codes and the National Electric Code (NEC). Failure to adhere to these codes and instructions may result in serious injury, property damage and void the warranty.

These instructions do not intend to cover all variations in installation, operation maintenance or mounting situations.

1. Make sure the power is turned OFF before installing or servicing this luminaire.
2. WARNING: risk of electrical shock. Install all luminaires 10 feet (3.05M) or more from pool, spa or fountain.
3. This luminaire is intended to be used only with a power supply (transformer) rated maximum of 300 watts (25 AMPS) at 15 volts.
4. Wiring connections must be made with UL listed wire connectors that are suitable for

outdoor use.

5. Position the low voltage wire and wire connector so that it is located within 6 inches (15.2 cm) from a building structure, a luminaire or fitting.
6. The main low voltage cable is intended for shallow burial – less than 6 inches (152 mm).

INSTRUCTIONS PERTAINING TO A RISK OF FIRE, OR INJURY TO PERSONS

Lighted lamp is HOT!

WARNING – To reduce the risk of FIRE OR INJURY TO PERSONS.

 
1. Turn off/unplug and allow to cool before replacing lamp.
2. Lamp gets HOT quickly! Contact only switch/plug when turning on.
3. Do not touch the hot lens, guard or enclosure.
4. Keep lamp away from materials that may burn.
5. Do not touch lamp at any time. Use a soft cloth. Oil from skin may damage lamp.
6. Do not operate the luminaire fitting with a missing or damaged shield.

SAVE THESE INSTRUCTIONS

PACKAGE CONTENTS

- A. (1) Stake
- B. (1) Luminaire


PRODUCT DIMENSIONS

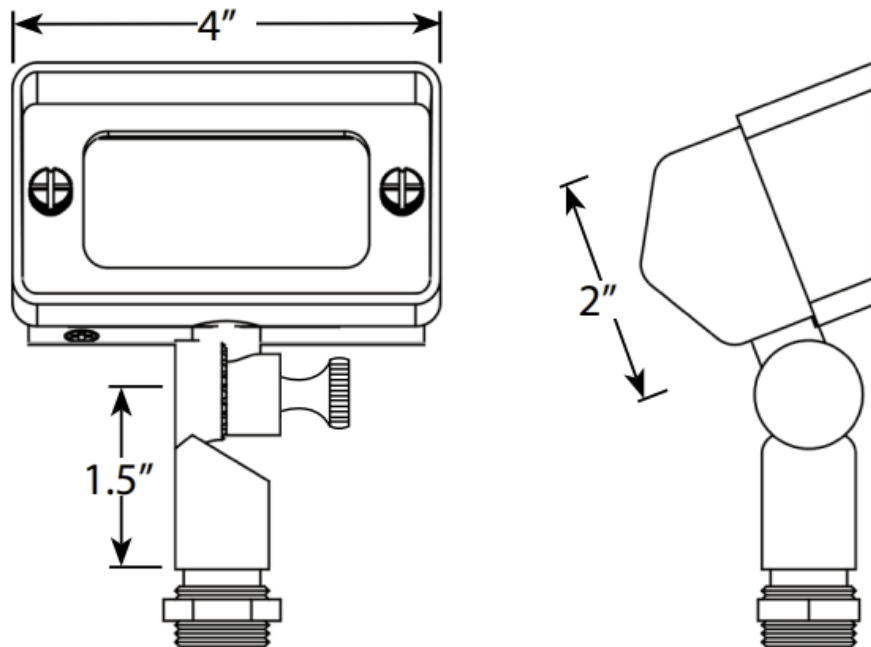


Install Stake

Determine the desired location for mounting the luminaire. Hammer the stake into the ground until the flange of stake is flush to grade. To avoid damage to the stake, place a board on top of stake while hammering.

 NOTE: If the ground is hard and the stake is difficult to install, make a crosscut in ground using a flat shovel.

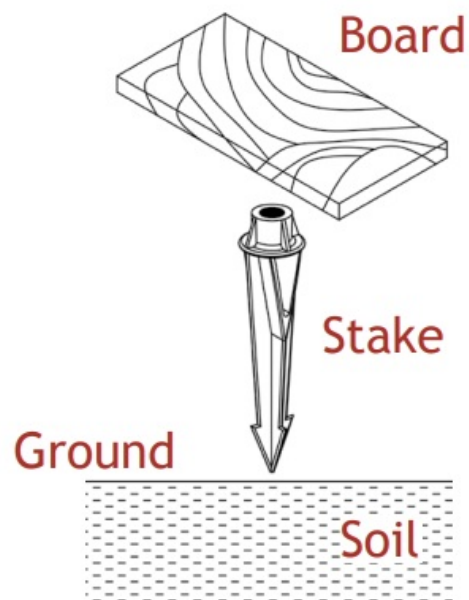

Remove Cover and Gasket with Lens

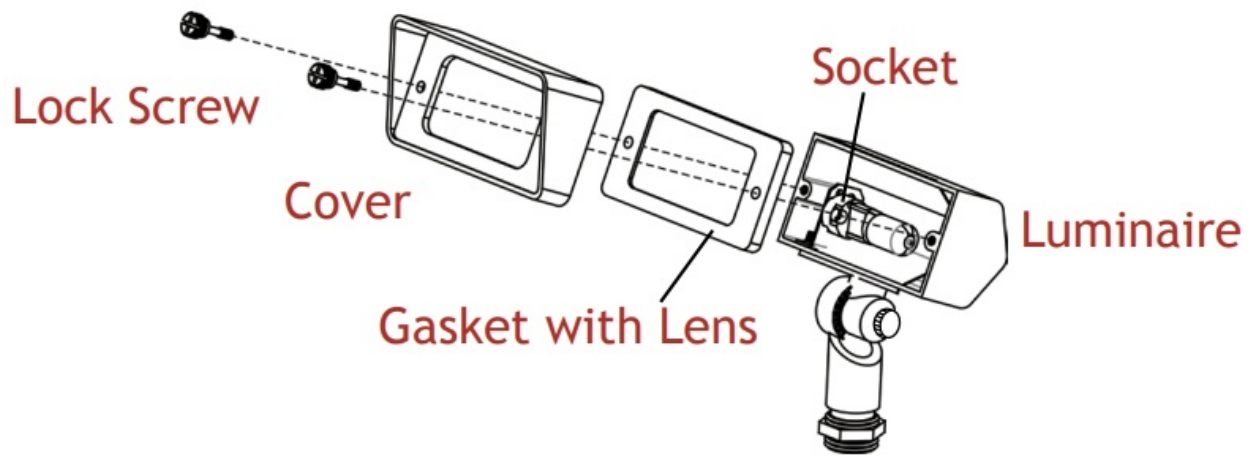 


Loosen the lock screws and remove the cover and gasket with the lens from the luminaire to expose the socket.

Install Bulb


Insert the bulb with correct wattage and type marked on the luminaire label.

CAUTION: Do not exceed maximum wattage marked on luminaire label.

 NOTE: DO NOT touch bulb with bare hands. Use soft cloth to handle lamp.

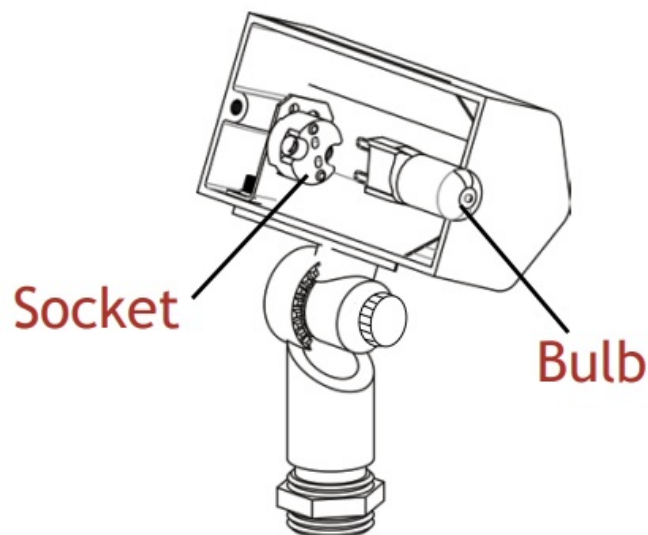


Install Gasket with Lens and Cover

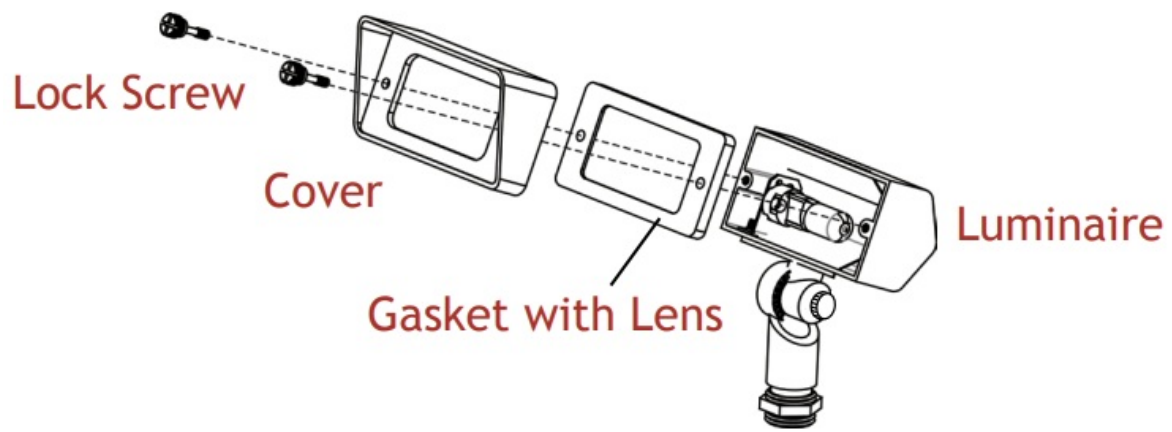 


Decide which lens you would like to use with this fixture. Then install the gasket with your lens of choice back onto the luminaire and secure with the lock screws.

Install Luminaire to Stake

 Clear away an area in the ground at the wireway slot on top of the stake. Lay the luminaire pigtail into the wireway slot and screw the fixture on to the stake. Tighten the hex nut on the luminaire against the stake and tighten until snug.

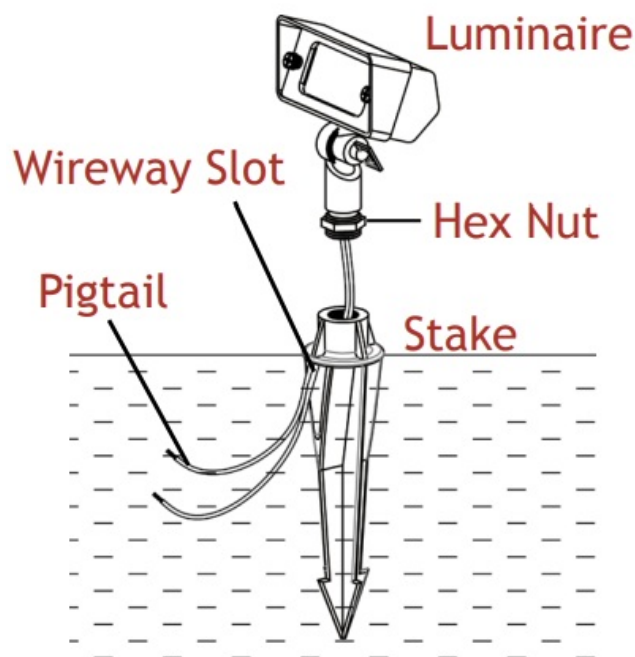

Wire Connections

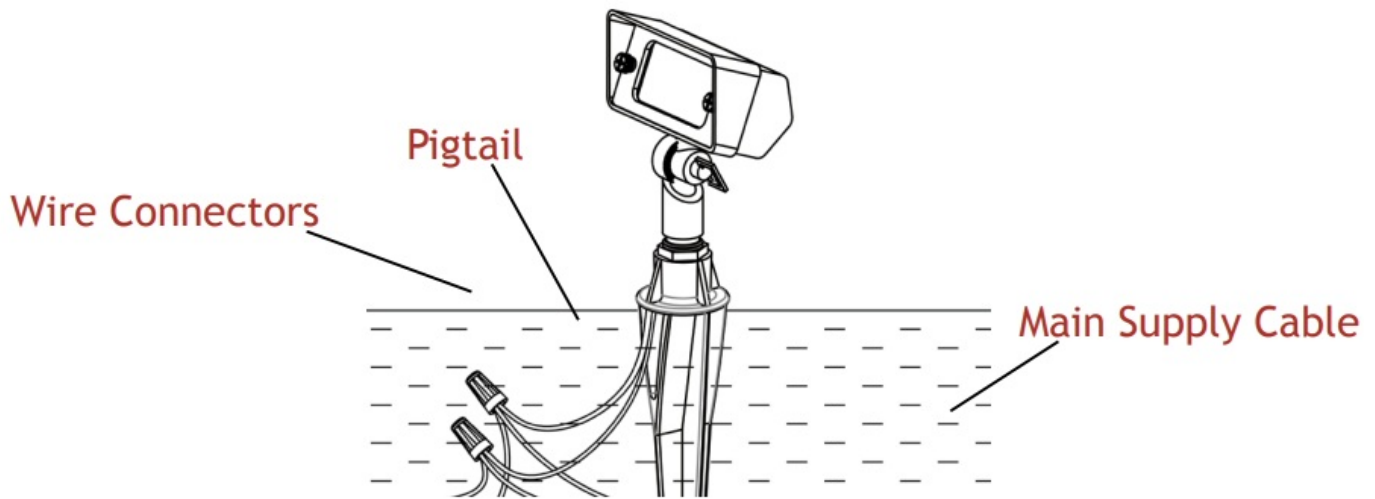 

Strip both leads from the luminaire pigtail. Using two wire connectors (sold separately), connect the leads from the luminaire to the main supply cable leads.

1-[813-978-3900](tel:813-978-3900) • Mon-Fri 9am-6pm (EST)

Specifications and product details subject to change without notice.

© Copyright 2023, AMP® Lighting, Lutz FL USA 33549 • All rights reserved.

customersupport@amplighting.com • amplighting.com

FAQ


- **Q: Can I use a power supply with more than 300 watts?**

A: No, this luminaire is intended to be used only with a power supply (transformer) rated maximum of 300 watts (25 AMPS) at 15 volts. Using a higher wattage power supply may damage the luminaire.

- **Q: How deep should I bury the low voltage cable?**

A: The main low voltage cable is intended for shallow burial – less than 6 inches (152 mm). Ensure it is buried at a depth within this range for proper installation.

Documents / Resources

	<p>AMP AFL-4010 DiffusePro Flood Light [pdf] User Guide</p> <p>AFL-4010 DiffusePro Flood Light, AFL-4010, DiffusePro Flood Light, Flood Light</p>
---	---

References

- [User Manual](#)

🔍 AFL-4010, AFL-4010 DiffusePro Flood Light, Amp, DiffusePro Flood Light, Flood

📁 AMP Light

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos

are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.