



dB FLEXXSYS FM X10 User Manual

 
[Home](#) » [dB](#) » dB FLEXXSYS FM X10 User Manual 



dB Technologies


www.dbtechnologies.com, info@dbtechnologies-aeb.com

FLEXXSYS
FMX10

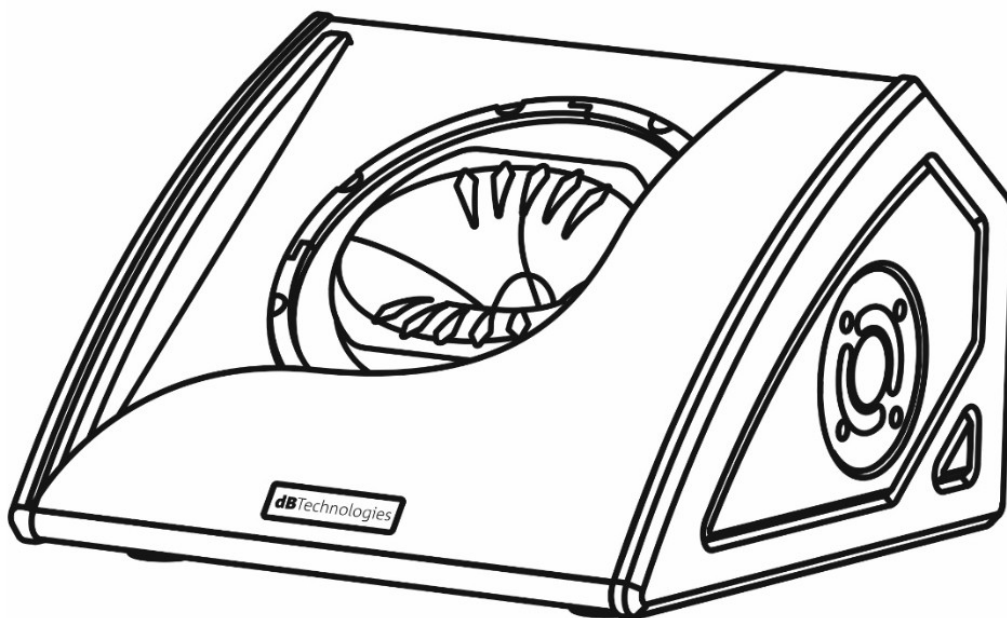

Quick start user manual
Section 1

 The warnings in this manual must be observed together with the “USER MANUAL – Section 2”.



A.E.B. Industriale Srl Via Brodolini, 8 Località Crespellano 40053 VALSAMOGGIA BOLOGNA (ITALIA)
Tel +39 051 969870 Fax +39 051 969725 www.dbtechnologies.com, info@dbtechnologies-aeb.com



Rev 1.2 cod. 420120314Q
FMX 10

Thank you for choosing a dBTechnologies Product!

The FMX 10 is a versatile coaxial active stage monitor. It is equipped with one 1" compression driver (1" voice coil), and one 10" woofer (2" voice coil). The coverage pattern is 60° (H) x 90° (V), (the horn is rotatable) and the mechanical design allows also the vertical usage (36 mm diameter pole mount hole). A powerful DSP can adapt the live or playback performances to different usage scenarios. The balanced audio input allows the usage of a microphone or a line source (a mixer or instrument).

Check the site www.dbtechnologies.com for the complete user manual!

Contents

- [1 Unpacking](#)
- [2 Easy installation](#)
- [3 Connections and controls](#)
- [4 Technical Data](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)

Unpacking

The box contains:

 
N°1 FMX 10

N°1 Mains cable (VDE)

This quick start and warranty documentation

Easy installation


FMX 10 is equipped with:

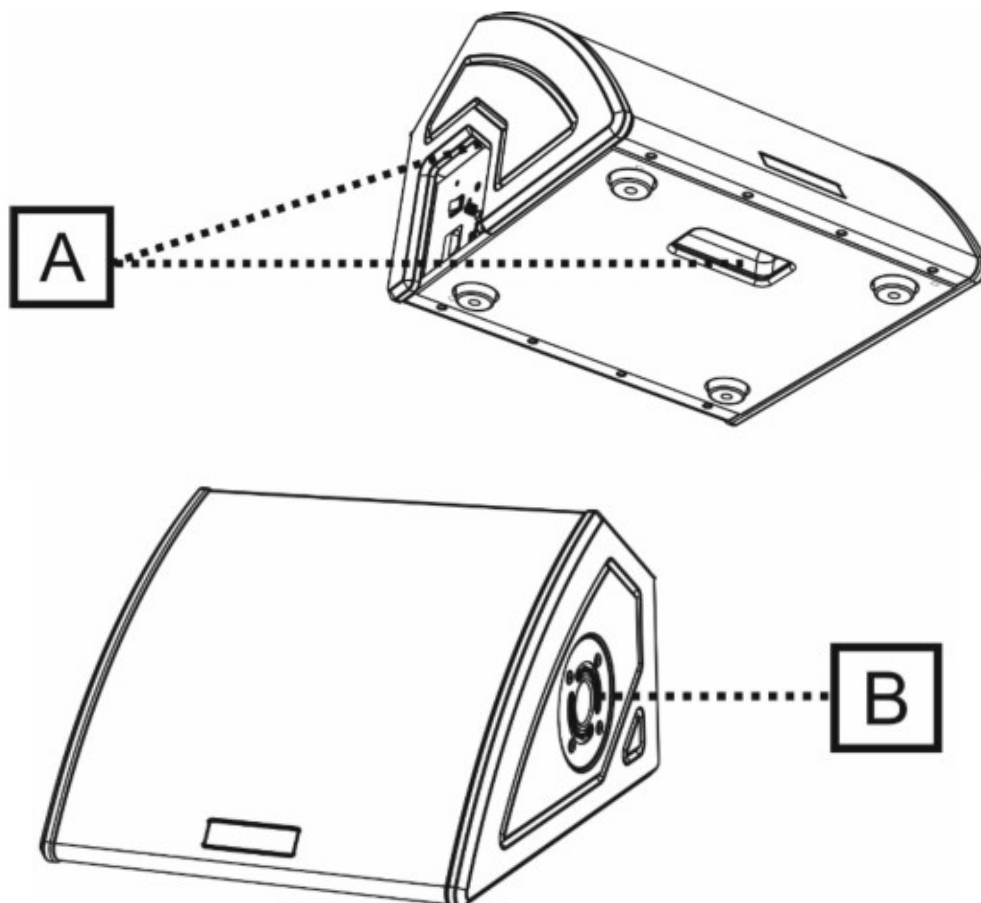

A –Integrated/inner handles

B – 36 mm pole mount

 Those mechanical particulars were thought for easy use and for different configuration needs. In case of vertical usage, please see also the EQ configuration in the “Connections and controls” section.

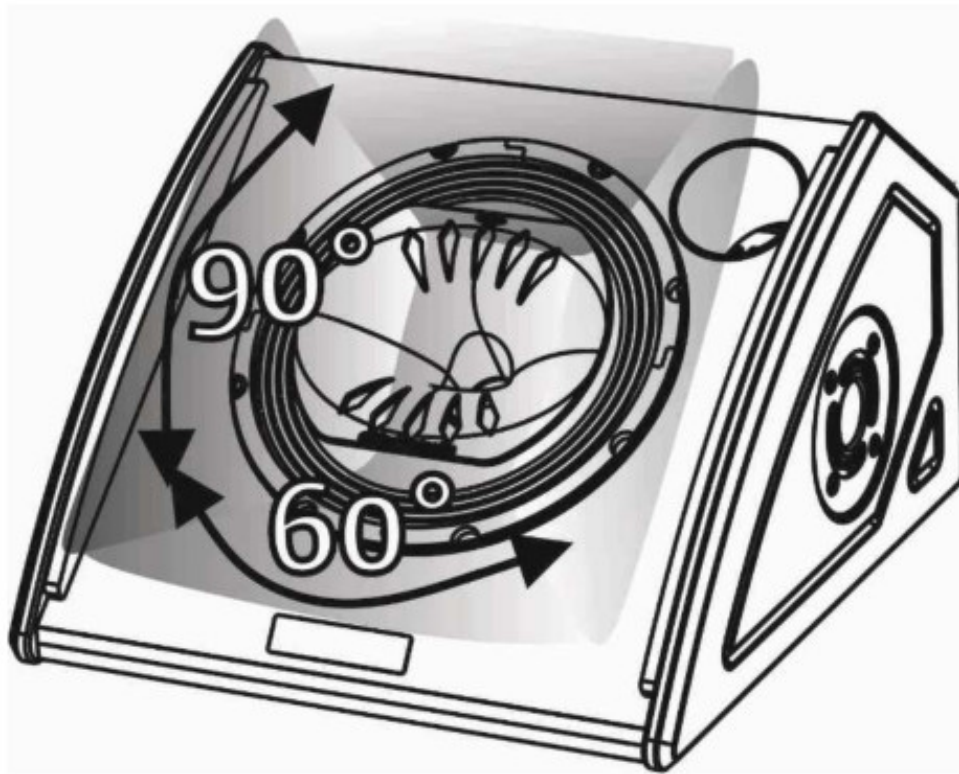

The acoustical design allows facing different environments. The dispersion pattern is shown in the upper picture. As described, the related pattern data are:

- a) vertical coverage: 90°
- b) horizontal coverage: 60°

The horn is rotatable. See other information in the complete user manual.

Connections and controls



Main



4

Input
Sens.

- 1 Live Monitor
- 2 Playback Monitor
- 3 Coupled Monitors
- 4 Male Singer
- 5 Female Singer
- 6 Antifeedback
- 7 Live on Stand
- 8 Playback on Stand



2

Limiter

ON/Signal

5

Balanced Audio

Line

6

PUSH

1

Input

3

Output/Link

Serial
Number


FMX 10
FMX 12
FMX 15



AEB INDUSTRIALE S.R.L.
Via Brodolini, 8
Località Crespellano
40053 VALSAMOGGIA (BO) - ITALY



 This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

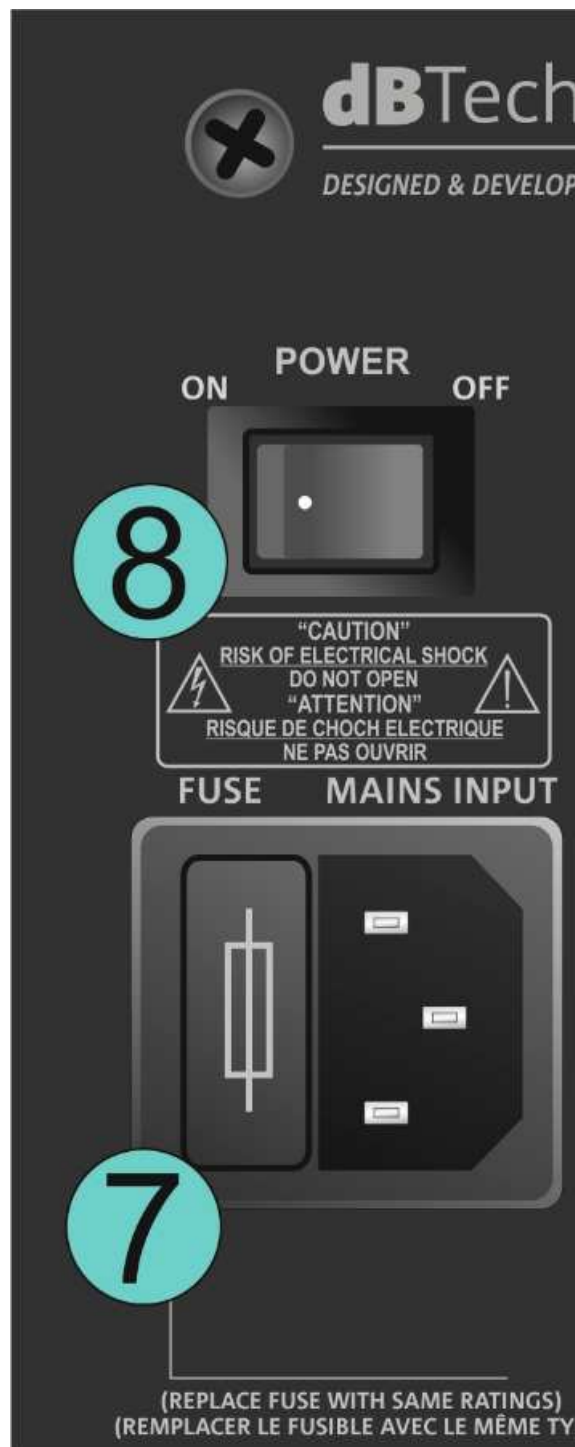

All the connections and controls are in the amplifier panel, on the side of the monitor:

- 1) Balanced Audio Input
- 2) Input sensitivity
- 3) Output/Link
- 4) Main EQ Rotary
- 5) Status LEDs
- 6) Line/Mic switch
- 7) VDE input with fuse
- 8) Power ON/OFF switch

- a) Connect the audio input (1). In the case of a microphone, plug it and select "Mic" in the Input sensitivity switch (6). In the other cases check that the switch is set on "Line". Adjust the level of Sensitivity (2).
- b) If you need to link FMX 10 to another one, please use a cable with XLR connectors (not supplied). Connect the Link output (3) of the first, to the balanced Input (1) of the second one. In the second loudspeaker, please check that the switch (6) is set on "Line" position and that Sensitivity (3) is set to the correct value.
- c) Set properly the DSP preset using the Main EQ Rotary (4). You can choose between:

1. Live Monitor, for a single monitor use on the stage in live performance
2. Playback Monitor, for a single monitor use on the stage in playback performance
3. Coupled Monitors, for a double monitor, live usage
4. Male Singer, to enhance male vocal performance
5. Female Singer, to enhance female vocal performance
6. Anti feedback, to avoid Larsen effect in living performances
7. Live on Stand, for an optimization of the monitor in vertical usage and live performance
8. Playback on Stand for an optimization of the monitor in vertical usage and playback performance

d) Plug properly the mains VDE input cable (supplied) in the related input (7). Then switch the POWER switch (8) to "ON" position. Increase gradually the volume of the audio source to the desired level.

Check the complete user manual on www.dbtechnologies.com for further information about the system and available accessories.

Scarica il manuale completo da www.dbtechnologies.com per ogni ulteriore informazione sul sistema e sugli accessory disponibili.

Für weitere Informationen und verfügbares Zubehör lesen sie bitte die vollständige Bedienungsanleitung unter www.dbtechnologies.com.

Technical Data

Speaker Type: Coaxial Active Stage Monitor Usable Bandwidth [-10 dB]: 57 – 19000 Hz

Frequency Response [-6 dB]: 65 – 16500 Hz

Max SPL (1 m): 125 dB

HF compression driver: 1 " Exit

HF voice coil: 1"

LF: 10"

LF Voice Coil: 2"

Crossover frequency: 1800 Hz (24 dB/oct)

Horizontal dispersion: 60° (rotatable horn)

Vertical dispersion: 90° (rotatable horn)

Amplifier

PSU Technology: SMPS

Amp Class: Class-D

RMS Power: 400 W

Operating voltage (factory internal setup):

220-240V~ (50-60Hz) or

100-120V~ (50-60 Hz)

Processor and user interface

Controller: 28/56 bit DSP

AD/DA Conversion: 24 bit – 48 kHz

Limiter: Peak, thermal, RMS

Controls: DSP programs rotary encoder, Line/Mic switch,

Input Sensitivity level

Input / Output

Mains connections: VDE

Signal Inputs: 1 x balanced XLR connector

Signal Out/Link: 1 x balanced XLR connector

Mechanics

Housing: Wooden Box

Grille: Full metal grille

Pole Mount Hole: Yes, 36 mm

Width: 390 mm (15.35 in)

Height: 268 mm (10.55 in)

Depth: 411 mm (16.18 in)

Weight: 11.3 kg (24.9 lbs)



<http://www.dbtechnologies.com/qrcode/000069/>

Scan with your QR Reader App to download the complete User Manual

POWER SUPPLY SPECIFICATIONS (POWER ABSORPTION)

Draw at 1/3 of full power in maximum use conditions (**): 0.8 A (220-240V-) – 1.4 A (100-120V-;

** INSTALLER NOTES: The values refer to 2/3 of full power, in heavy operating conditions (music program with frequent clipping or activation of the limiter). We recommend sizing according to these values in case of professional installations and tours.

Download the complete user manual from the site: www.dbtechnologies.com/EN/Downloads.aspx

EMI CLASSIFICATION

According to the standards EN 55032 and EN 55035, this equipment is designed and suitable to operate in class B electromagnetic environments.

FCC CLASS B STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.

WARNING: Make sure that the loudspeaker is securely installed in a stable position to avoid any injuries or damages to persons or properties.




For safety reasons do not place one loudspeaker on top of another without proper fastening systems. Before hanging the loudspeaker check all the components for damages, deformations, missing or damaged parts that may compromise safety during installation. If you use the loudspeakers outdoor avoid spots exposed to bad weather conditions. Contact dB Technologies for accessories to be used with speakers. dBTechnologies will not accept any responsibility for damages caused by inappropriate accessories or additional devices.

Features, specifications,s, and appearance of products are subject to change without notice.dBTechnologies reserves the right to make changes or improvements in design or manufacturing without assuming any obligation to change or improve products previously manufactured.

Documents / Resources

	<p>dB FLEXSYS FM X10 [pdf] User Manual FLEXSYS, FM, X10, dB</p>
---	---

References

-  [AEB Software for Global Trade and Logistics](#)
-  [dBTechnologies - Professional Audio Equipment](#)
-  [Download - dBTechnologies](#)