



## eo DECIDER Making Clock with Alarm Instruction Manual

[Home](#) » [eo](#) » eo DECIDER Making Clock with Alarm Instruction Manual 

### Contents

- 1 eo DECIDER Making Clock with Alarm
- 2 DESCRIPTION
- 3 PRODUCT GUIDE
- 4 PRODUCT GUIDE
- 5 OPERATION GUIDE
  - 5.1 Should I have a Pizza tonight?
  - 5.2 Confused about project priorities?
  - 5.3 Stuck on weekend plans?
  - 5.4 Can't pick an outfit?
  - 5.5 Confused about your next travel destination?
  - 5.6 Can't decide on game night options?
  - 5.7 How to set the time?
  - 5.8 How to set the alarm?
  - 5.9 How to switch between C/F?
  - 5.10 How to replace the battery?
- 6 Specifications
- 7 CUSTOMER SUPPORT
- 8 SCAN TO REGISTER WARRANTY
- 9 WARRANTY
- 10 FAQ
  - 10.1 How can I contact customer support?
  - 10.2 How do I register for warranty?
  - 10.3 What should I do with the product at the end of its useful life?
- 11 Documents / Resources
  - 11.1 References
- 12 Related Posts



## INSTRUCTION MANUAL

 
### DESCRIPTION

Introducing eo – Decision Making Clock, a clock with a twist! This desktop essential is designed to add excitement to every moment, thanks to the fun 'Yes,' 'No,' or 'Maybe' decision-making function with a press of a button. This multifunctional device combines an alarm clock, sleek pen holder, card holder and temperature/humidity monitor, making it great for office desks, home study & gifts!

### FUNCTIONS

#### Fun Decision Making

A clock that randomly decides any thought for you with a press of a button

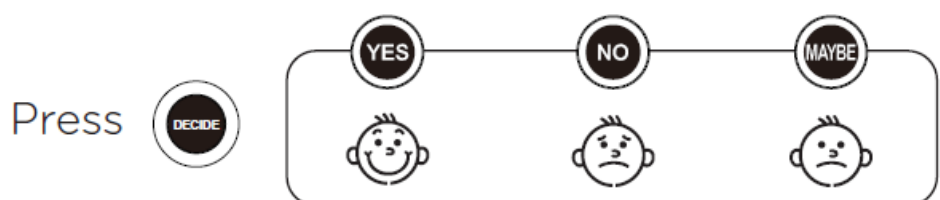

Clock  
with Alarm



Pen  
Stand



Card  
Holder



Ambient  
Temperature




Humidity  
Monitor

## PRODUCT GUIDE

 
### Front


1. Clock Face
2. Decision
3. Hours
4. Minutes
5. Temperature
6. Humidity

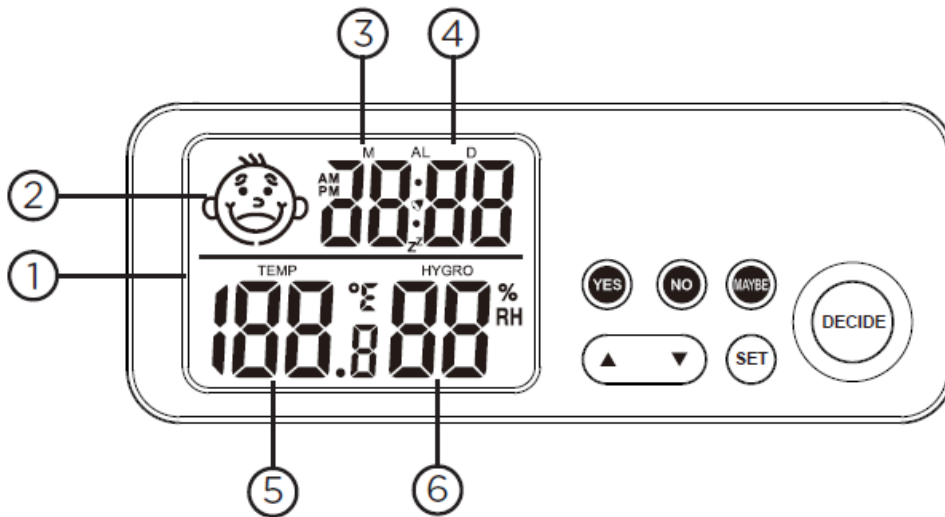

### Top Back & Angle

  
1. Battery Slot
2. Alarm
3. Pen & Pencil Slots
4. Card & Storage

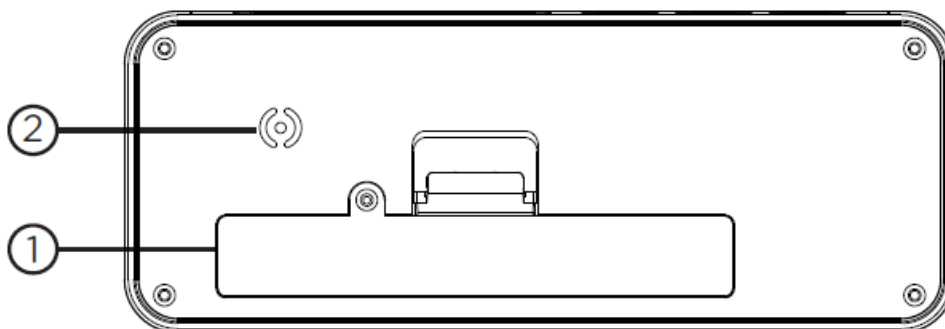

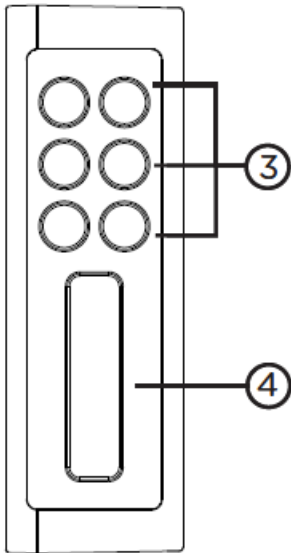

## PRODUCT GUIDE

 1. Decision Making Indicators 2 Start Decision Making
3. Enter Setting
4. Up & Down

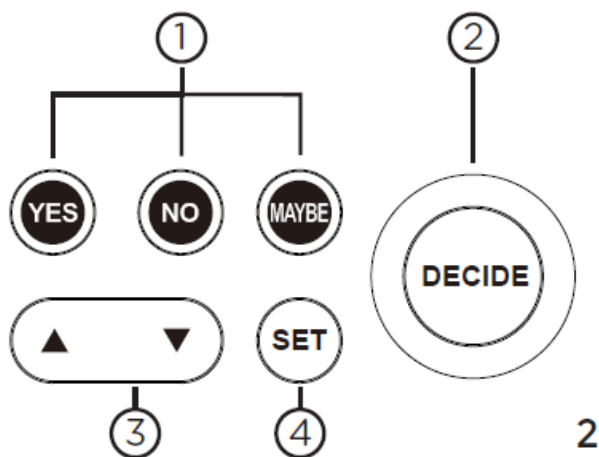

## OPERATION GUIDE

### Make the most out of Decision Making Clock!

An exciting way to decide with eo – Decision Making Clock.

One button, three choices—Yes, No, Maybe! Let's play!

Keep a fun thought in mind that you need to make a decision for and press the DECIDE button and let the clock decide for you!

### A few examples are;

Should I have a Pizza tonight?

- Yes

- No
- Maybe

#### **Confused about project priorities?**

Turn to the Decision Making Clock! Should the focus be on

- Project A (Yes)
- Project B (No)
- Project C (Maybe)?

Let the clock streamline your tasks!

#### **You can even decide on scenarios**

##### **Stuck on weekend plans?**

Press the Decision Making Clock!

- Is it a movie (Yes)
- hiking (No)
- a beach day (Maybe)?

Let the clock guide your thrilling weekend escapade!

##### **Can't pick an outfit?**

Enlist the Decision Making Clock!

- Is it the red dress (Yes)
- jeans (No)
- or the funky shirt (Maybe)?

Let the clock jazz up your style!

##### **Confused about your next travel destination?**

Turn to the Decision Making Clock!

- Will it be Paris (Yes)
- Tokyo (No)
- Bali (Maybe)?

Let the clock plan your dream vacation!













##### **Can't decide on game night options?**

## Resort to the Decision Making Clock!







- Is it board games (Yes)
- charades (No)
- video games (Maybe)?

Let the clock spice up your game night fun!

### How to set the time?

- Press and hold the  button for 2 seconds.
- The 12/24 hour  display starts to flash.
- Now use the  and  buttons to set the correct 12/24 hour.
- Press  to confirm your setting.
- The Hour display starts to flash.
- Now use the  and  buttons to set the correct hour.
- Press  to confirm your setting.
- The Minute displays start to flash.
- Now use the  and  buttons to set the correct minute.
- Press  to confirm your setting and to end the setting procedures, enter the clock mode.
- After 20 seconds without pressing any buttons, the clock switches automatically from Set  to Normal Time mode.

### How to set the alarm?

- Under the time model, Short Press the  button two times to show ALARM time,
- Press and hold down the button for 2 seconds until the Alarm Time icon starts flashing.
- Now use the  and  buttons to select the alarm time you require and press the ALARM button to set this Alarm time.
- The Hour display of the Hour Alarm time starts to flash. Now use the and buttons to set the required hour. Press the button to confirm your setting
- The Minute display of the Alarm time starts to flash. Use the  and  buttons to set the required minute. Press the  button to confirm your settings and to end the setting procedure.

- To activate or deactivate the daily alarms, briefly press the button once the alarm goes oFF
- The alarm will go oFF for 1 minute if you do not stop it by pressing any button.
- In this case, the alarm will be repeated automatically after 24 hours.

#### **How to switch between C/F?**

- Press the “DOWN” button to switch between C and F.

#### **How to replace the battery?**

- Open the battery slot.
- Place 2 x AAA batteries inside. Please ensure that the polarity (+/-) is correct.
- Close the battery compartment.

### **Specifications**

- Product Name: eo – Decision Making Clock
- Functions: Decision Making, Alarm Clock, Pen Stand, Card Holder, Temperature/Humidity Monitor
- Power Source: Battery
- Warranty: 1 year from the date of original invoice

### **CUSTOMER SUPPORT**

If you have any queries, please feel free to reach out to our customer support team.

We will gladly assist you.

Email – [support@xech.com](mailto:support@xech.com)

Whatsapp – +91 88288 44466

### **SCAN TO REGISTER WARRANTY**

Scan the alongside QR code to register for warranty. If you face any issues in registering the warranty, please get in touch with our customer support team by writing to us at [support@xech.com](mailto:support@xech.com) and we will gladly assist you.



This product should not be put / thrown away with regular trash at the end of its useful life. It must be disposed at a central point for recycling of electric and electronic domestic appliances. This symbol on the appliance, instruction manual and packaging is meant to warn you. The materials used in this appliance can be recycled.

### **WARRANTY**

Everyday Organisers warrants that the product will be free from any manufacturing defects & takes responsibility in case the device fails to function for a period of one year from the date of the original invoice.

**The warranty period validity is also subject to the following conditions:**

- The customer has to register the warranty for the product on <https://xech.com/pages/warranty> within 15 days from the date of purchase.
- The product is not given to some external repair personnel.
- It is only valid in the Indian Subcontinent.
- If the device is not immersed in water. It also does not cover natural wear & tear or rough usage.
- If the instruction manual is not followed & the device is not used in an improper manner.
- If the device is not used for its stated functionality.
- If the device is not used by children below 3 years or someone incapable or using the device.
- The customer can claim warranty by visiting our website [www.xech.com](http://www.xech.com) or contacting our customer support team by writing to us at [support@xech.com](mailto:support@xech.com).

**WARRANTY**

Purchasing Date: \_\_\_\_\_

Invoice No: \_\_\_\_\_

Dealer Information: \_\_\_\_\_

[everydayorganisers.com](http://everydayorganisers.com)

---

**FAQ**

**How can I contact customer support?**

If you have any queries, please reach out to our customer support team via Email – [support@xech.com](mailto:support@xech.com) or Whatsapp – +91 88288 44466.


**How do I register for warranty?**

Scan the QR code provided alongside to register for warranty. If you face any issues, contact our customer support team at [support@xech.com](mailto:support@xech.com) for assistance.

**What should I do with the product at the end of its useful life?**




The product should be disposed of at a central point for recycling of electric and electronic domestic appliances.

**Documents / Resources**

	<a href="#">eo DECIDER Making Clock with Alarm</a> [pdf] Instruction Manual DECIDER Making Clock with Alarm, DECIDER, Making Clock with Alarm, Clock with Alarm, Alarm
---	---

**References**



-  [One stop shop for everyday essentials – Everyday Organisers](#)
-  [XECH - Invent the Future](#)
-  [Warranty – XECH](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.