



# FP PostBase Postage Meter User Manual

[Home](#) » [FP](#) » FP PostBase Postage Meter User Manual 

## Contents

- [1 FP PostBase Postage Meter User Manual](#)
- [2 Documents / Resources](#)

## FP PostBase Postage Meter User Manual

### 4 PostBase – Addendum to the Operator Manual

| USA |

#### 1 The Home screen

The Home screen appears after the PostBase was turned on and the start routine has been successfully completed. Depending on the settings, you may have to select a user and enter the PIN.

\* Availability depending on PostBase variant / equipment.

Info panel:

– Date in meter imprint

– Other information

Advert / SMS text \*

Mailing data

(selected USPS services)

Postage

Weight

Current shortcut

Advert / SMS text \*

Open the Menu, access

– Administration functions

– System settings

– Service functions

Open the Product

calculation menu

Select shortcut

Meter labels

Use the Feeder

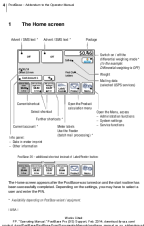
(batch mail processing) \*  
Switch on / off the  
differential weighing mode \*  
(In the example:  
Differential weighing is OFF)  
Further shortcuts \*  
Current account \*

PostBase 20 – additional shortcut instead of Label/Feeder button:

Works Cited:

FP. “Operating Manual.” PostBase Pro (DS) Support, Feb. 2014, download.fp-usa.com/  
product\_docs/PostBase/PostBase-Econ/Documents-Manuals/postbase\_manual\_w\_us\_addendum.pdf.

## Documents / Resources

	<p><a href="#">FP PostBase Postage Meter</a> [pdf] User Manual PostBase Postage Meter, PostBase, Postage Meter, Meter</p>
---	---