


FS Intel 82599ES-Based Ethernet Network Interface Card User Guide

Home » FS » FS Intel 82599ES-Based Ethernet Network Interface Card User Guide 🖺



82599ES-Based Ethernet Network Interface Card User Guide

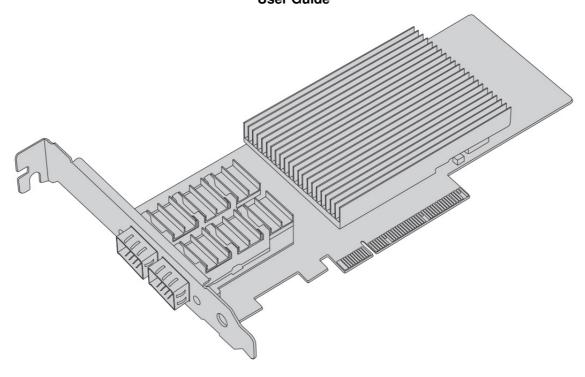


PCIe 2.0/3.0/4.0 ETHERNET NETWORK ADAPTER


Contents


- 1 Product View
- **2 Package Contents**
- **3 Installing the Windows Driver**
- 4 Checking the Status of the Indicator
- **5 Product Warranty**
- **6 Compliance Information**
- 7 Documents / Resources
 - 7.1 References
- **8 Related Posts**


Product View

10G Network Adapter

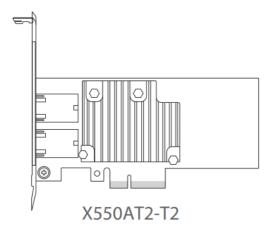


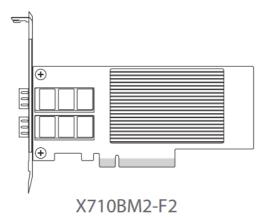

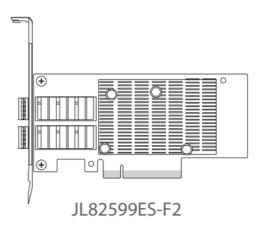


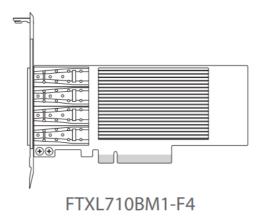

25G/40G Network Adapter

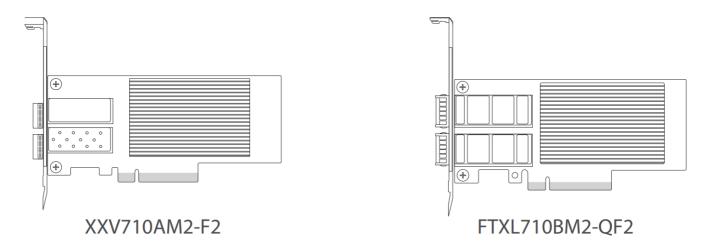

100G Network AdapterE810CAM2-2CP

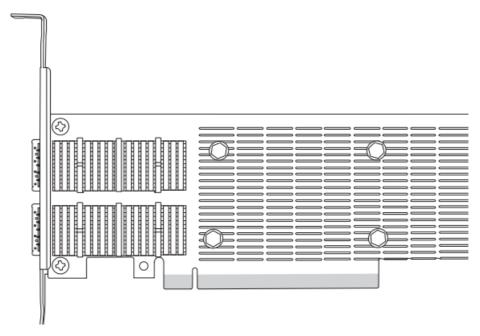

E810CAM2-2CP


Package Contents




1 x low profile bracket

1 x full height bracket 1 x software CD


Pulling the Network Adapter Module Out

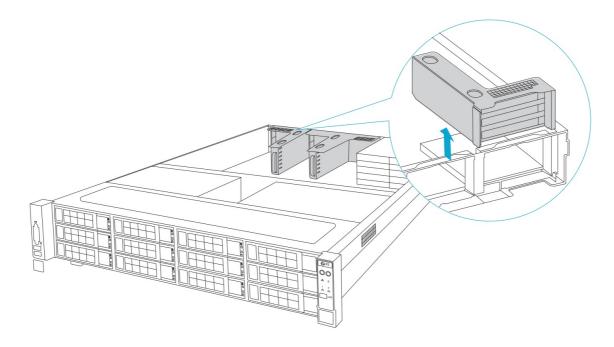


NOTE: Turn off the server and unplug the power cord before pulling the module from the server.

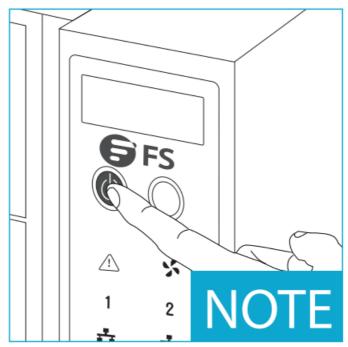


Inserting the Adapter into the Slot

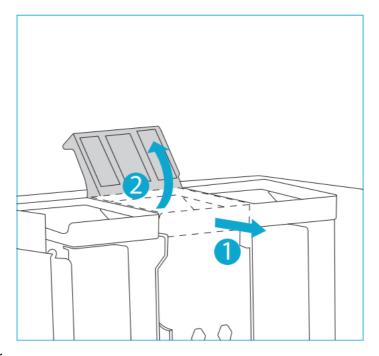


Step I: Unfold Slot Cover

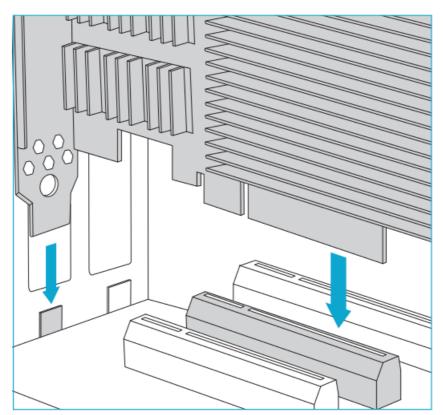


Step 2: Plugin Slot Carefully

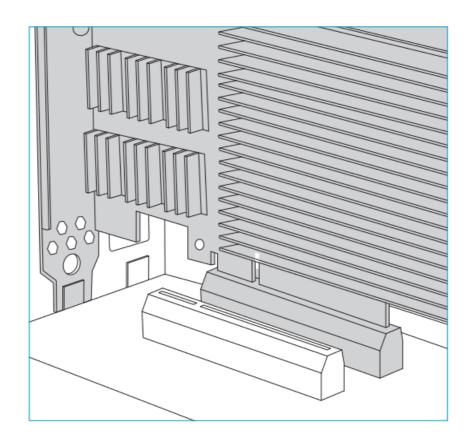

Step 3: Ensure the Adapter Stable

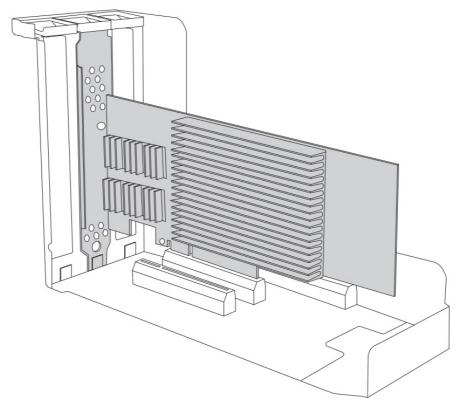


NOTE: Insert the adapter into the PCle slot corresponding to the server (eg: PCle X8).

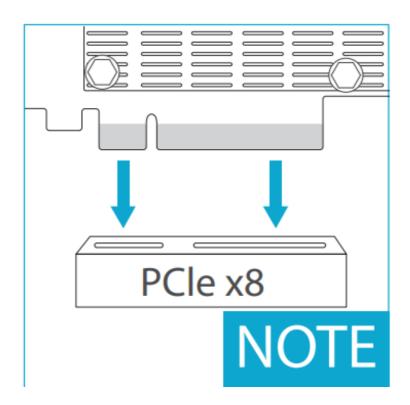

Connecting the Cable

RJ-45 copper cable 10GBASE-T requires Cat6, Cat6a or Cat7 Cable

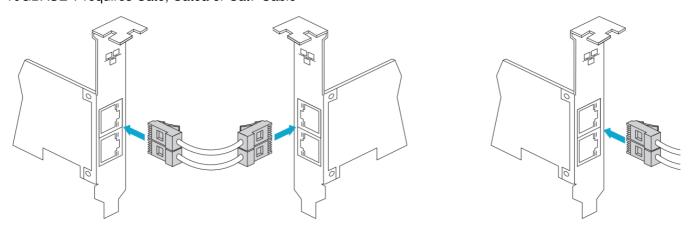


Connect the Copper Cable

Dual Ports

Fiber optical cable

Make sure that the connector is oriented correctly

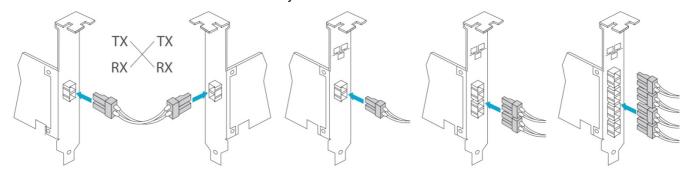


Connect the Fiber Cable

Single Port

Dual Ports

Quad Ports

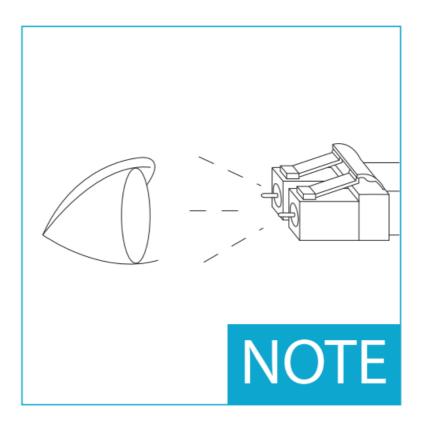

NOTE: The fiber optic port contains a Class 1 laser device. Do not expose the port as this may result in skin or eye injury.

Installing the Windows Driver

First, turn on the computer, and when Windows discovers the new adapter, the "Found New Hardware Wizard" appears. Extract the update package from the CD to a specific path. Open a DOS command box and go to a specific path and type setup at the command prompt to extract the driver.

Checking the Status of the Indicator

Indicator Light	State	Description
LNK (Green/Yellow)	Green light	Run at maximum port speed
	Yellow light	Run at a lower port speed
	No light	No link
ACT (Green)	Flashing green light	Data activity
	No light	No link

Product Warranty

FS ensures our customers that any damage or faulty items due to our workmanship, we will offer a free maintenance service.

Warranty: All Ethernet Network Interface Cards enjoy 3 years limited warranty against defects. materials or workmanship.

For more details about the warranty, please check at https://www.fs.com/policies/warranty.html

(5)

Return: If you want to return the item(s), information on how to return can be found at https://www.fs.com/policies/day return policy.html

Compliance Information

FCC

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment one and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- —Reorient or relocate the receiving antenna.
- —Increase the separation between the equipment and receiver.
- —Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- —Consult the dealer or an experienced radio/TV technician for help.

CAUTION:

Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the equipment.

Responsible party (only for FCC matters)

FS.COM Inc.

380 Centerpoint Blvd, New Castle, DE 19720, United States

https://www.fs.com

FS.COM GmbH hereby declares that this device is in compliance with the Directive 2014/35/EU. A copy of the EU Declaration of Conformity is available at www.fs.com/company/quality_control.html

FS.COM LIMITED

24F, Infore Center, No.19, Haitian 2nd Rd, Binhai Community, Yuehai Street,Nanshan District, Shenzhen City

FS.COM GmbH

NOVA Gewerbepark Building 7, Am Gfild 7, 85375 Neufahrn bei Munich, Germany Copyright © 2022 FS.COM All Rights Reserved.



Documents / Resources



FS Intel 82599ES-Based Ethernet Network Interface Card [pdf] User Guide Intel 82599ES-Based Ethernet Network Interface Card, Intel 82599ES-Based, Ethernet Network Interface Card, JL82599ES-F2, X550AT2-T2, X710BM2-F2

References

- FS.com Data Center, Enterprise, Telecom
- Guality Certification FS.com
- Ein weltweit führender Anbieter von Hochgeschwindigkeits-Konnektivitätsgeräten und -lösungen. FS.com Deutschland
- 6 Fournisseur leader de solutions et matériels de connectivité à haut débit FS France
- **FS.com** Data Center, Enterprise, Telecom
- Fackgaberecht FS.com Deutschland
- <u>Ein weltweit führender Anbieter von Hochgeschwindigkeits-Konnektivitätsgeräten und -lösungen.</u> <u>FS.com Deutschland</u>
- 6 Fournisseur leader de solutions et matériels de connectivité à haut débit FS.com France
- FReturn Policy FS.com
- Froducts Warranty FS.com

Manuals+,