


FS Intel E810-XXVAM2-Based Ethernet Network Adapter User Guide

Home » FS » FS Intel E810-XXVAM2-Based Ethernet Network Adapter User Guide 🖫



Intel E810-XXVAM2-Based Ethernet Network Adapter
User Guide

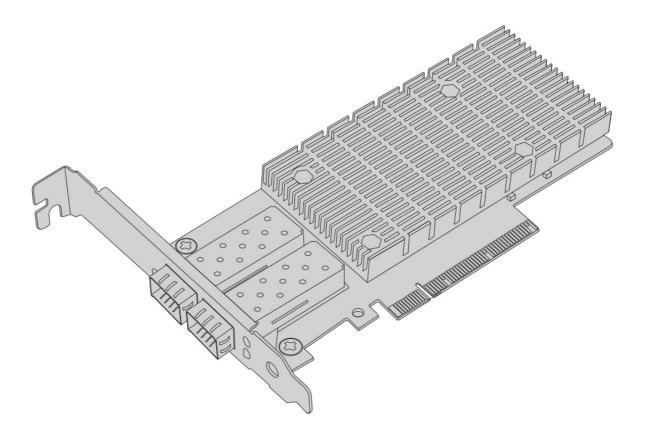

ETHERNET NETWORK ADAPTER

Contents


- 1 Product View
- 2 Package Contents
- **3 Product Warranty**
- 4 Compliance

Information

- **5 Documents / Resources**
- **6 Related Posts**


Product View

25G Network Adapter

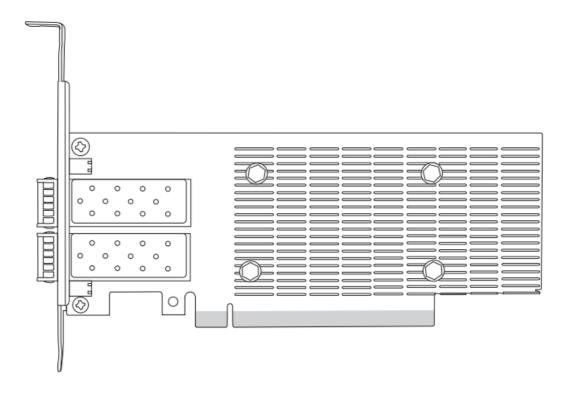

E810XXVAM2-2BP


Package Contents

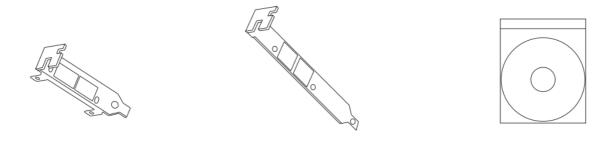


1 x low profile bracket

1 x full height bracket 1 x software CD


Pulling the Network Adapter Module Out

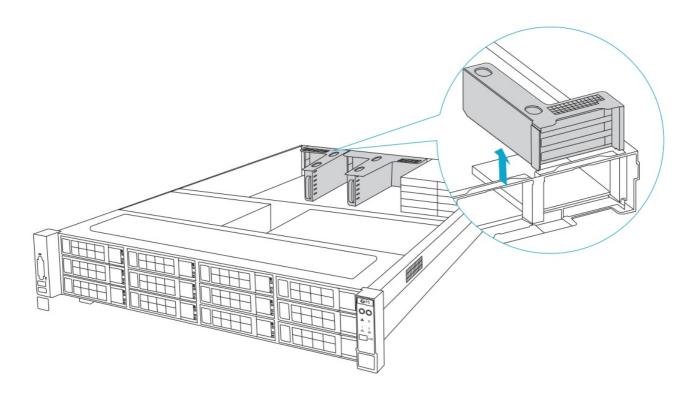


NOTE: Turn off the server and unplug the power cord before pulling the module from the server. **Inserting the Adapter into the Slot**

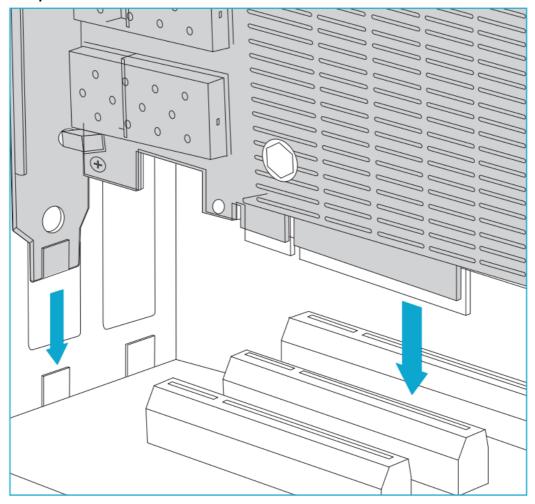


Step 1: Unfold Slot Cover

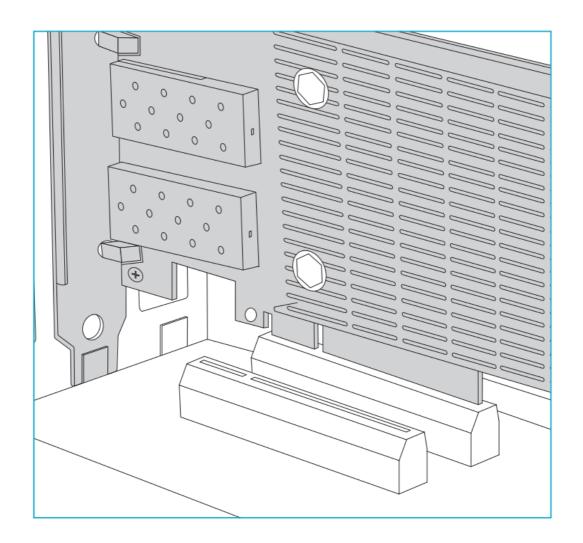

Step 3: Ensure the Adapter Stable

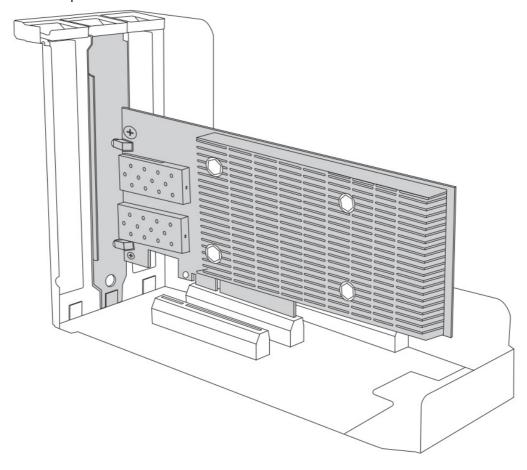

NOTE: Insert the adapter into the PCle slot corresponding to the server (eg: PCle x8).

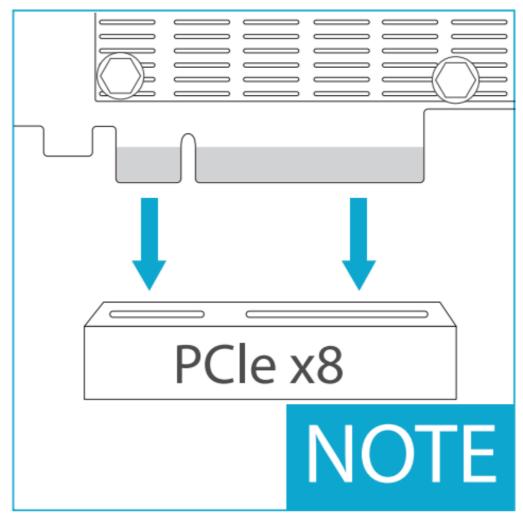

Connecting the Cable

Fiber optical cable

Make sure that the connector is oriented correctly

NOTE: The fiber optic port contains a Class 1 laser device. Do not expose the port as this may result in skin or eye injury.

Installing the Windows Driver

First, turn on the computer, and when Windows discovers the new adapter, the "Found New Hardware Wizard" appears. Extract the update package from the CD to a specific path. Open a DOS command box and go to a specific path and type setup at the command prompt to extract the driver.

Checking the Status of the Indicator

Indicator Light	State	Description
LNK (Green/Yellow)	Greenlight	Run at maximum port speed
	Yellow light	Run at a lower port speed
	No light	No link
ACT (Green)	Flashing green light	Data activity
	No light	No link

Product Warranty

FS ensures our customers that any damage or faulty items due to our workmanship, we will offer a free maintenance service.

- Warranty: All Ethernet Network Interface Cards enjoy 3 years limited warranty against defects in materials or workmanship. For more details about the warranty, please check at https://www.fs.com/policies/warranty.html
- Return: If you want to return the item(s), information on how to return can be found at https://www.fs.com/policies/day_return_policy.html

Compliance Information

FCC

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION:

Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the equipment.

Responsible party (only for FCC matters)

FS.COM Inc. 380 Centerpoint Blvd, New Castle, DE 19720, United States

https://www.fs.com

FS.COM GmbH hereby declares that this device is in compliance with the Directive 2014/30/EU. A copy of the EU Declaration of Conformity is available at www.fs.com/company/quality control.html

FS.COM LIMITED

24F, Infore Center, No.19, Haitian 2nd Rd, Binhai Community, Yuehai Street, Nanshan District, Shenzhen City

FS.COM GmbH

NOVA Gewerbepark Building 7, Am Gfild 7, 85375 Neufahrn bei Munich, Germany

IC

CHOICES-3(A)/NMB-3(A)
Q.C. PASSED
Copyright © 2022 FS.COM All Rights Reserved.

Documents / Resources



<u>FS Intel E810-XXVAM2-Based Ethernet Network Adapter</u> [pdf] User Guide Intel E810-XXVAM2-Based, Ethernet Network Adapter, Intel E810-XXVAM2-Based Ethernet Network Adapter, E810XXVAM2-2BP