



FS S3900-R Series Switch Reset and Recovery System User Guide

[Home](#) » [FS](#) » FS S3900-R Series Switch Reset and Recovery System User Guide 

Contents

- 1 FS S3900-R Series Switch Reset and Recovery System User Guide
- 2 1. Configuration Considerations
- 3 2. Network Topology
- 4 3. Operation Steps
 - 4.1 1. Connection Equipment
 - 4.2 2. Download Configuration Software
 - 4.3 3. Switch on and Use Login Software
- 5 3.4 Restoration System
 - 5.1 *Then prepare tftp
- 6 3.5 Switch to Factory Reset
- 7 Read More About This Manual & Download PDF:
- 8 Documents / Resources
 - 8.1 References
- 9 Related Posts


FS S3900-R Series Switch Reset and Recovery System User Guide



1. Configuration Considerations

Series	Product	Support version
S3900-Rseries	S3900-48T6S-R	
	S3900-24T4S-R	
	S3900-24F4S-R	

2. Network Topology

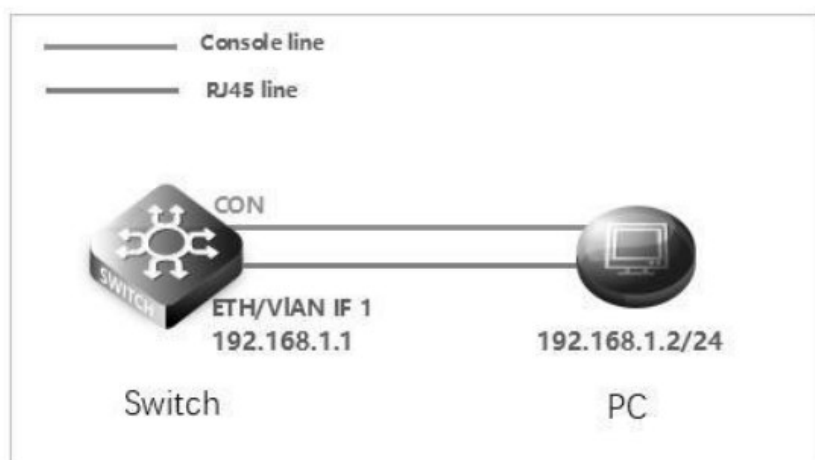

3. Operation Steps

1. Connection Equipment


#According to the way of networking topo to connect PC and switch to network cable and Console. One end of the RJ-45 network cable is connected to the PC NIC, and the other end is connected to the SW's network port. Connect one end of Console line USB to PC's USB interface, and the other end of RJ-45 is connected to console interface of front panel of switch.

2. Download Configuration Software

#After the connection is completed, there we recommend the super terminal, putty or Secure CRT tool to configure the switch

3. Switch on and Use Login Software

#Energizing the switch, then open the installed login software, select the serial port of login mode, port through the device manager todetermine. Baud rate :115200, Data bits: 8, Parity: None, Stop bits: 1. (Reference below)

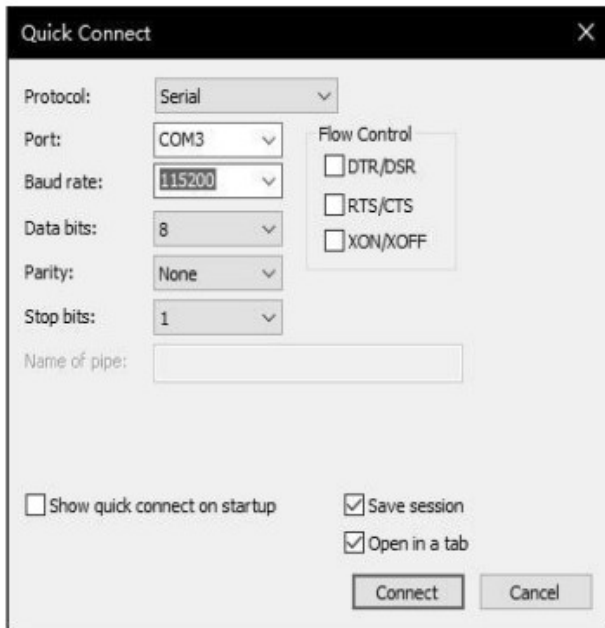


NOTE: COM Number can be viewed through device manager. (right click on my computer.>manage>device manager>port (COMandLPT If it displays an unrecognized USB device, please download and install the corresponding driver.

3.4 Restoration System

*Please use Ctrl + P to enter the monitor # interface when restarting the switch,then configure the switch IP address. monitor#ip address 192.168.1.1 255.255.255.0 *Set PC IP address



*Then prepare tftp

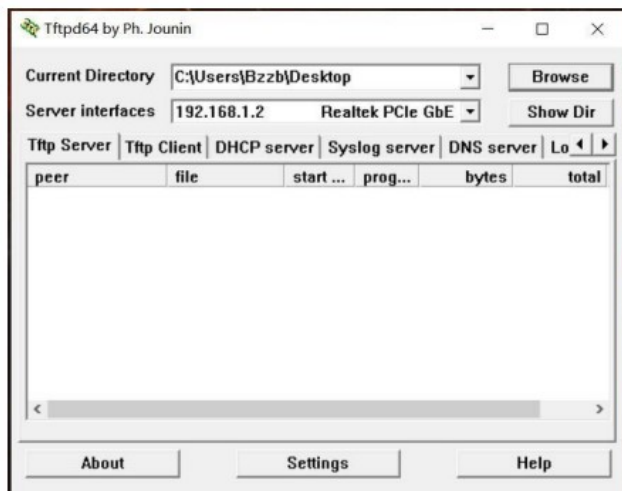

* Then start upgrading the system: run copy tftp flash

Monitor#copy tftp flash //From ftp to flash

Source file name[]? FS-S3900-48T6S-R-FSOS 2.2.0E 95660.bin //Firmware file name Remote-server ip address[]? 192.168.1.2 //TFTP Server IP address Destination file name[FS-S3900-48T6S-R-FSOS 2.2.0E 95660.bin]? //Switch.bin When prompted: TFTP: successfully sent... After the success # reboot justfine

3.5 Switch to Factory Reset

Switch#delete startup-config this file will be erased, are you sure? (y/n)y

Switch#reboot

If the file name is not entered, the startup-config files will be deleted by default

Read More About This Manual & Download PDF:

Documents / Resources

	FS S3900-R Series Switch Reset and Recovery System [pdf] User Guide S3900-R Series Switch Reset and Recovery System, S3900-R Series, Switch Reset and Recovery System, Reset and Recovery System, Recovery System, S3900-48T6S-R, S3900-24T4S-R, S3900-24F4S-R
---	--

References

-  [FS.com - Data Center, Enterprise, Telecom](#)