



FS S5500-48T8SP SNTP Configuration User Guide

[Home](#) » [FS](#) » FS S5500-48T8SP SNTP Configuration User Guide 

Contents

- [1 FS S5500-48T8SP SNTP Configuration](#)
- [2 Overview](#)
 - [2.1 Stipulations](#)
- [3 SNTP Configuration](#)
 - [3.1 SNTP Configuration](#)
 - [3.2 Enabling the SNTP Server](#)
 - [3.3 Setting the IP Address of the SNTP Server](#)
 - [3.4 Setting the Interval of Browsing the SNTP Server](#)
 - [3.5 Disabling the SNTP Server](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)
- [5 Related Posts](#)



FS S5500-48T8SP SNTP Configuration



Overview

Stipulations

Format Stipulation in the Command Line

Syntax	Meaning
Bold	Stands for the keyword in the command line, which stays unchanged and must be entered without any modification. It is presented as a bold in the command line.
{italic}	Stands for the parameter in the command line, which must be replaced by the actual value. It must be presented by the italic in the brace.
<italic>	Stands for the parameter in the command line, which must be replaced by the actual value. It must be presented by the italic in the point bracket.
[]	Stands for the optional parameter, which is in the square bracket.
{ x y ... }	Means that you can choose one option from two or more options.
[x y ...]	Means that you can choose one option or none from two or more options.
{ x y ... } *	Means that you has to choose at least one option from two or more options, or even choose all options.
[x y ...] *	Means that you can choose multiple options or none from two or more options.
&<1-n>	Means that the parameter before the “&” symbol can be entered n times.
#	Means that the line starting with the “#” symbol is an explanation line.

SNTP Configuration

Overview

Simple Network Time Protocol (SNTP) is currently an important method to realize time synchronization on the Internet. SNTP adopts the client-server mode. The server obtains its own time by receiving the GPS signals or takes its own atomic clock as its time standard, while the client, by regularly accessing the time service provided by the server, gets the correct time information and regulates its own clock to synchronize with the time on the Internet. The UDP protocol and port 123 are used for communication between the client and the server.

SNTP Configuration Task List

SNTP settings can be divided into two parts:

one part is for the local switch to take as the SNTP server, and the other is for the local switch to take as the SNTP client.

The local switch takes as the SNTP server:

- Setting the Grade of the SNTP Server
- Enabling the SNTP Server

The local switch takes as the SNTP client:

- Setting the IP Address of the SNTP Server
- Setting the Interval of Browsing the SNTP Server
- Disabling the SNTP Server

SNTP Configuration

Setting the Grade of the SNTP Server

Configuration mode: Global

Command	Purpose
sntp master [Stratum]	Sets the grade of the SNTP server.

Enabling the SNTP Server

Configuration mode: Global

Command	Purpose
sntp master	The SNTP server is enabled by default.

Setting the IP Address of the SNTP Server

Configuration mode: Global

Command	Purpose
sntp server <A.B.C.D> [sntp-version]	Sets the IP address and version of the SNTP server.

Setting the Interval of Browsing the SNTP Server

Configuration mode: Global

Command	Purpose
sntp query-interval < minutes>	Sets the interval for the SNTP client to browse the SNTP server.

Disabling the SNTP Server

Configuration mode: Global


Command	Purpose
no sntp master	Closes the SNTP server.

<https://www.fs.com>.

The information in this document is subject to change without notice. FS has made all efforts to ensure the accuracy of the information, but all information in this document does not constitute any kind of warranty.

Copyright © 2009-2022 FS.COM All Rights Reserved.

Documents / Resources

	<p>FS S5500-48T8SP SNTP Configuration [pdf] User Guide S5500-48T8SP, SNTP Configuration, S5500-48T8SP SNTP Configuration</p>
---	--

References

-  [FS.com - Data Center, Enterprise, Telecom](#)