



GE 48733 Smart Motion Sensing Dimmer Switch User Manual

[Home](#) » [GE](#) » GE 48733 Smart Motion Sensing Dimmer Switch User Manual 

Contents

- [1 GE 48733 Smart Motion Sensing Dimmer Switch](#)
- [2 How fo make moves with your Smart Switch](#)
- [3 Touch Controls & Sensors](#)
- [4 Documents / Resources](#)
- [5 Related Posts](#)




GE 48733 Smart Motion Sensing Dimmer Switch



How to make moves with your Smart Switch


1. Schedule your motion sensor to sleep when you sleep. Go to CYNC app and set the response schedule under room motion sensor.
 2. Automate your lights by enabling ambient light and motion detection. Go to CYNC app and enable the ambient light sensor under room motion sensor.
 3. Preset brightness levels. Dim switch to desired level, then turn off. Use Dim button instead of center on/off button to turn on lights at the preset level.
 4. Control other CYNC bulbs in the room with your switch. Go to CYNC app. Add bulbs and switches to a room under create a room. (sold separately)
- Connect to your Alexa or Hey Google device to control your lights with your voice.
 - Try these voice commands: Amazon Alexa Alexa, turn off the living room. Alexa, good morning. Alexa, set kitchen to 50%. Hey Google Hey Gogle, turn on the lights. Hey Google, set bedroom to 20%. Hey Google, I'm leaving.

Touch Controls & Sensors

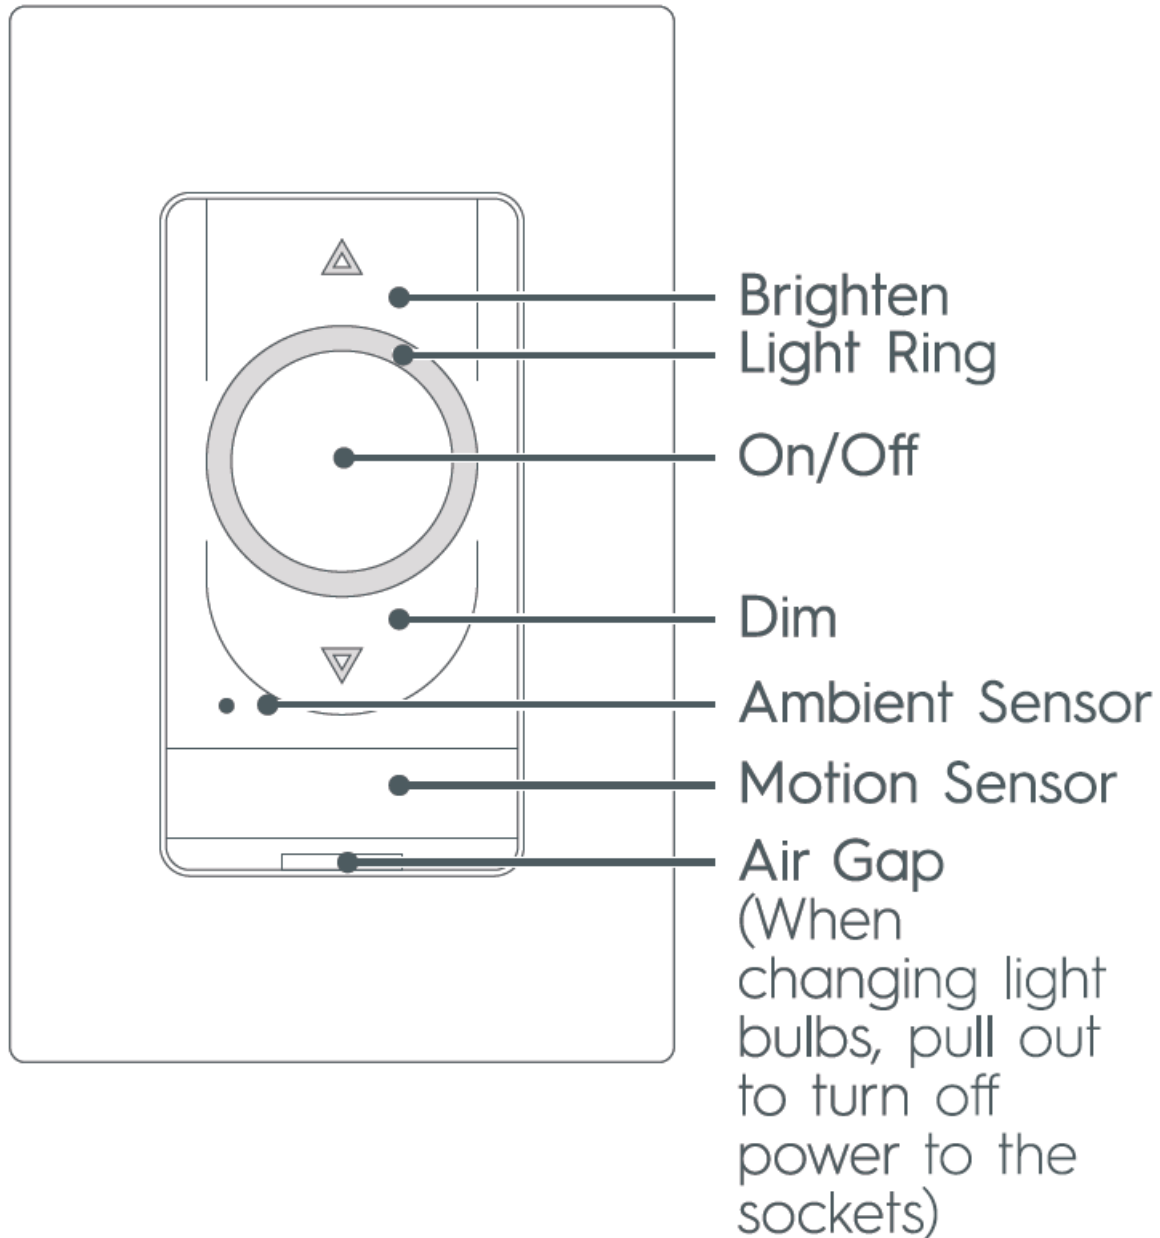

GE and C by GE are trademarks of General Electric Company. Used under trademark license. PK-00100024-3

Documents / Resources

| | |
|---|---|
|  | GE 48733 Smart Motion Sensing Dimmer Switch [pdf] User Manual 48733 Smart Motion-Sensing Dimmer Switch, 48733, Smart Motion-Sensing Dimmer Switch, Motion Sensing Dimmer Switch, Dimmer Switch |
|---|---|