



LG DRP4 Omnidirectional Portable Speaker Instruction Manual

[Home](#) » [LG](#) » LG DRP4 Omnidirectional Portable Speaker Instruction Manual 

Contents

- [1 LG DRP4 Omnidirectional Portable Speaker](#)
- [2 Installing and Using the Product](#)
- [3 Specification](#)
- [4 Declaration of Conformity](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)



LG DRP4 Omnidirectional Portable Speaker



Installing and Using the Product



Please read this manual carefully before operating your set and retain it for future reference. To view the instructions of advanced features, visit <http://www.lg.com> or scan QR code and then download Owner's Manual. Some of the content in this manual may differ from your product.





- Handle
- Controls
- Speaker
- Mood lighting
- Woofer

1. **Connect the power cord to the product and charge it before use. You can find the power socket at the bottom of the product.**

2. **Connecting the Speaker to a Smartphone Using Bluetooth**

1. Press the Power  button to turn on the product.
2. Press and hold the Function  button on the product until you hear a notification sound. Bluetooth LED blinks for 60 seconds.

3. Tap the Settings  button on your smartphone and select Bluetooth.  Turn on the Bluetooth function.



On)

4. From the list of smartphone devices, find and tap on "LG-DRP4(XX)."
5. Once the smartphone is connected to the product via Bluetooth, the Bluetooth LED will turn on. Play a desired track in the music app on your smartphone.


3. **Playing Music from the USB**

1. Open the back cover of the product and plug the USB storage device into the USB terminal.
2. Press the Power button to turn on the product.
3. Press the Function button on the product repeatedly to select the USB function. The USB LED will turn on.
4. Press the Play/Pause button to enjoy the music.

4. Connecting to an External Device

1. Open the back cover of the product and connect the external device to the AUX. IN terminal via a 3.5 mm stereo cable.

2. Press the Power  button to turn on the product.

3. Press the Function  button on the product repeatedly to select AUX. The AUX LED will turn on. If you play music on the connected external device, you can start listening on this product.

5. Connecting to the LG XBOOM App

- Find the LG XBOOM app on the Google Play or App Store and install it on your smartphone.
- Run the LG XBOOM app and use its functions.

6. Power Saving

If there is no playback or button input for 15 minutes, the product turns off automatically. On the LG XBOOM app, you can enable or disable [Auto Power Management].

- Design and specifications are subject to change without notice.

Specification

Power requirements

- Refer to the main label.

Power consumption

- Refer to the main label.
- Networked standby: 0.5 W (If all network ports are activated.) Dimensions (W x H x D): Approx. 247.5 mm x 514.0 mm x 247.5 mm Bus Power Supply (USB): 5 V 0 500 mA Amplifier (Total RMS Output power): 120 W RMS

How to deactivate the wireless network connection(s).

Set up the [Auto power-on.] to off on LG XBOOM app and turn off the product by pressing the Power button.

Battery Life: Approx. 10 hours (Varies by volume level and audio content.)

- This unit contains magnets which can be harmful to some kind of object (Ex: Magnetic card, Pacemaker etc.).
- Internal lithium battery in the unit should not be replaced by user because of danger of explosion if battery is incorrectly replaced, and must be replaced with the same type battery by expert.
- Do not leave the unit on an unstable place such as high shelves. It may fall down because of the vibration of the sound.

CAUTION when using this product in environments of low humidity.

- It may cause static electricity in environments of low humidity.
- It is recommended to use this product after touching any metal object which conducts electricity.

Declaration of Conformity

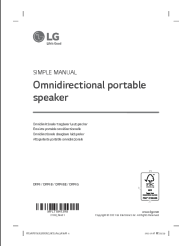
Hereby, LG Electronics declares that the radio equipment type PORTABLE BLUETOOTH SPEAKER is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: <http://www.lg.com/global/support/cedoc/cedoc#> For consideration of the user, this device should be installed and operated with a minimum distance of 20 cm between the device and the body.

- Frequency range
- 2402 to 2480 MHz
- Output power (Max.)
- 10 dBm




Removal of waste batteries and accumulators

(Product with embedded battery ONLY) In case this product contains a battery incorporated within the product that cannot be readily removed by end users, LG recommends that only qualified professionals remove the battery, either for replacement or for recycling at the end of this product's working life. To prevent damage to the product, and for their own safety, users should not attempt to remove the battery and should contact LG Service Helpline, or other independent service providers for advice. Removal of the battery will involve the dismantling of the product case, disconnection of the electrical cables/ contacts, and careful extraction of the battery cell using specialized tools. If you need the instructions for qualified professionals on how to remove the battery safely, please visit <http://www.lge.com/global/sustainability/environment/take-back-recycling>.

Documents / Resources

	<p>LG DRP4 Omnidirectional Portable Speaker [pdf] Instruction Manual DRP4B, DRP4BE, DRP4G, DRP4, Omnidirectional Portable Speaker, DRP4 Omnidirectional Portable Speaker</p>
--	--

References

-  [LG Electronics & Home Appliances | Shop Now | LG USA](#)
-  [CeDoc](#)
-  [LG Electronics & Home Appliances | Shop Now | LG USA](#)