




LG DSPD7Y Wireless Sound Bar User Manual

[Home](#) » [LG](#) » LG DSPD7Y Wireless Sound Bar User Manual 


Contents

- [1 LG DSPD7Y Wireless Sound Bar User Manual](#)
- [2 Replacement of Battery](#)
- [3 Installing and Using the Product](#)
- [4 Specification](#)
 - [4.1 How to disconnect the wireless network connection or the wireless device](#)
 - [4.2 OPEN SOURCE SOFTWARE NOTICE INFORMATION](#)
- [5 Declaration of Conformity](#)
- [6 Read More About This Manual & Download PDF:](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)
- [8 Related Posts](#)

LG DSPD7Y Wireless Sound Bar User Manual

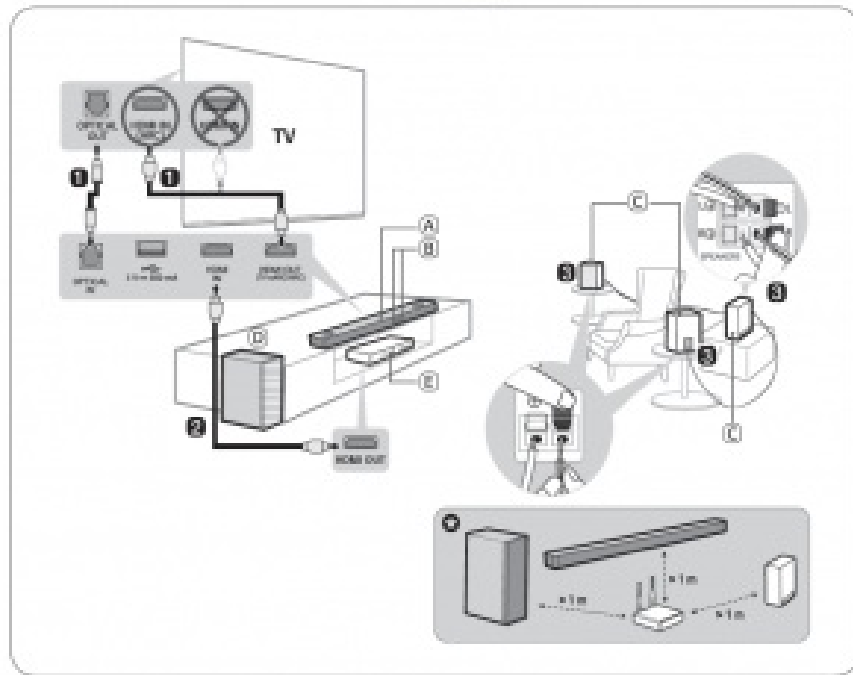

Replacement of Battery

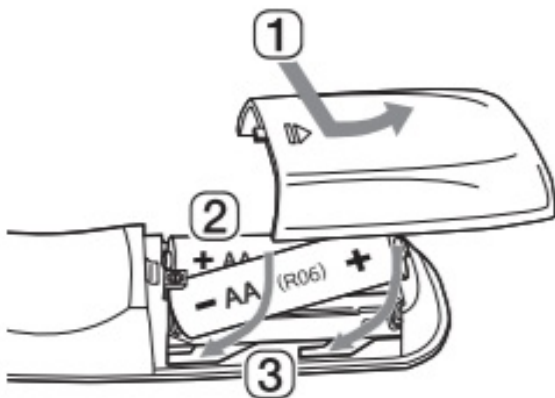

HDMI™
HIGH-DEFINITION MULTIMEDIA INTERFACE

Installing and Using the Product

Please read this manual carefully before operating your set and retain it for future reference. To view the instructions of advanced features, visit <http://www.lg.com> or scan QR code and then download Owner's Manual. Some of the content in this manual may differ from your product.



- A Sound bar
- B Remote Control Receiver / Status Display
- C Rear Speakers / Wireless Receiver (Sold separately, SPK8-S)
- D Wireless Subwoofer – Install it close to the sound bar.
- E External Device – (Blu-ray player, game console, etc.)





1. Connect the sound bar to your TV via an optical cable or an HDMI cable.
2. If you are using an external device (ex. Blu-ray player, game console, etc.), connect it to the sound bar via an HDMI cable.
3. If you purchased the rear speakers and wireless receiver separately, connect the rear speakers to the wireless receiver via a speaker cable. When connecting the rear speakers to the wireless receiver, connect the black striped cable to the negative terminal of each speaker and the remaining cable to the positive terminal of each speaker.
4. Connect to power in the following order: wireless subwoofer → wireless receiver → sound bar. Then, turn on the sound bar. When the connection is automatically established with the sound bar, the LEDs on the wireless subwoofer and the wireless receiver will light up in green.
5. Using the product with your TV

A Press the Function  button repeatedly until “OPT/HDMI ARC” appears on the status display.

B On your TV’s settings, set the output speaker to [HDMI ARC], [Optical], or [External Speaker].

C When the TV is properly connected to the product, “OPT”, “ARC”, or “E-ARC” will appear on the status display with a sound.

6. Connecting the product to your smartphone via Bluetooth

A Tap the Settings  button on your smartphone and select  Bluetooth. Turn on the Bluetooth function. (
 Off >  On)

B Press the Bluetooth pair  button. After a moment, you will see “BT READY” on the status display.

7. C Find and tap the product on your smartphone. The product appears as “LG DSPD7Y (XX)”.



D When the product is connected to your smartphone via Bluetooth, you can see the status display change from “PAIRED” → “Connected Bluetooth device name” → “BT”.

8. Connecting to the LG Sound Bar app

A Find and install the LG Sound Bar app on Google Play or App Store from your smartphone.

B You can get more information regarding its use by selecting [Help] in [Setting].

If you see a red LED on the back of the wireless subwoofer or on the front of the wireless receiver, it means that the sound bar is not connected to the speakers. If this is the case, connect them in the following order.



1. Press the Power  button on the sound bar to turn it off.
 2. Press the PAIRING (Pairing) button on the back of the disconnected wireless subwoofer or wireless receiver.
Check if each LED blinks green.
— If you still see a red LED on the back of the wireless subwoofer, press and hold the button on the back of the subwoofer again.
 3. Press the Power  button on the sound bar to turn it on.
 4. When the connection is established, you will see a green LED light on the back of the wireless subwoofer or on the front of the wireless receiver light up in green.
* Keep the sound bar, the subwoofer and wireless receiver away from the device (ex. wireless router, microwave oven, etc.) over 1 m to prevent wireless interference.
- Some speakers may not make sound depend on the input source. Select CINEMA sound mode to listen through all speakers.
 - Design and specifications are subject to change without notice.
 - Google Play is a trademark of Google LLC. SPD7Y.

Specification

Power consumption

- Refer to the main
- Networked standby : 1.5 W (If all network ports are activat)

AC adapter

- Model : **DA-50F25**
- Manufacturer : Asian Power Devices
- Input : 100 – 240 V ~ 50 – 60 Hz
- Output : 25 V  2 A
- Model : **MS-Z2000R250-050D0-P**
- Manufacturer : MOSO POWER SUPPLY TECHNOLOGY , LTD.
- Input : 100 – 240 V ~ 50/60 Hz
- Output : 25 V  2 A

Dimensions (W x H x D): Approx. 890.0 mm x 65.0 mm x 119.0

mm

Bus Power Supply (USB): 5 V 0 500 mA

Amplifier (Total RMS Output power): 380 W RMS

How to disconnect the wireless network connection or the wireless device

Set up the Auto Power function to off and turn off the product.

OPEN SOURCE SOFTWARE NOTICE INFORMATION

To obtain the source code under GPL, LGPL, MPL, and other open source licenses, that is contained in this product, please visit <https://opensource.lge.com>.

In addition to the source code, all referred license terms, warranty disclaimers and copyright notices are available for download. LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping, and handling) upon email request to opensource@lge.com. This offer is valid for a period of three years after our last shipment of this product. This offer is valid to anyone in receipt of this information.



Declaration of Conformity

Hereby, LG Electronics declares that the radio equipment type Wireless Sound Bar is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:

<http://www.lg.com/global/support/cedoc/cedoc#> For consideration of the user, this device should be installed and operated with a minimum distance of 20 cm between the device and the body.





Frequency range	Output power (Max.)
2402 to 2480 MHz	10 dBm
5730 to 5821 MHz	13 dBm

Read More About This Manual & Download PDF:

Documents / Resources

	<p>LG DSPD7Y Wireless Sound Bar [pdf] User Manual DSPD7, Wireless Sound Bar</p>
--	---

References

-  [LG Electronics & Home Appliances | Shop Now | LG USA](#)
-  [LG Electronics & Home Appliances | Shop Now | LG USA](#)
-  [CeDoc](#)
-  [LG Open Source](#)