



## LG Led Lcd Monitor Owner's Manual

[Home](#) » [LG](#) » LG Led Lcd Monitor Owner's Manual 

### Contents

- 1 Owner's Manual
  - 1.1 LG Led Lcd Monitor
- 2 OPEN SOURCE SOFTWARE NOTICE
- 3 ASSEMBLING AND PREPARING
- 4 Supported Drivers and Software
- 5 Product and Button Description
- 6 Moving and Lifting the Monitor
- 7 USING THE MONITOR
- 8 USER SETTINGS
- 9 Customizing settings
- 10 TROUBLESHOOTING
- 11 PRODUCT SPECIFICATION
- 12 Factory Support Mode (Preset Mode, PC)
- 13 HDMI Timing (Video)
- 14 Documents / Resources
  - 14.1 References
- 15 Related Posts

### Owner's Manual





## LG Led Lcd Monitor

\* LG LED Monitor applies LCD screen with LED backlights. Please read this manual carefully before operating your set and retain it for future reference.

### LICENSE

Each model has different licenses. Visit [www.lg.com](http://www.lg.com) for more information on the license.



The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

## OPEN SOURCE SOFTWARE NOTICE INFORMATION

To obtain the source code under GPL, LGPL, MPL, and other open source licenses, that is contained in this product, please visit <http://opensource.lge.com>.

In addition to the source code, all referred license terms, warranty disclaimers and copyright notices are available for download.

LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping, and handling) upon email request to [opensource@lge.com](mailto:opensource@lge.com).

This offer is valid for a period of three years after our last shipment of this product. This offer is valid to anyone in receipt of this information.

## ASSEMBLING AND PREPARING



**CAUTION**

- Always use genuine LG components to ensure safety and product performance.
- The product warranty will not cover damage or injury caused by the use of unauthorized components.
- It is recommended that use the supplied components.
- If you use generic cables not certified by LG, the screen may not display or there may be image noises.
- Illustrations in this document represent typical procedures, so they may look different from the actual product.
- Do not apply foreign substances (oils, lubricants, etc.) to the screw parts when assembling the product. (Doing so may damage the product.)
- Applying excessive force when tightening screws may cause damage to the monitor. Damage caused in this way will not be covered by the product warranty.
- Do not carry the monitor upside down by just holding the base. This may cause the monitor to fall off the stand and could result in personal injury.
- When lifting or moving the monitor, do not touch the monitor screen. The force applied to the monitor screen may cause damage to it.

## NOTE


- The components may look different from those illustrated here.
- Without prior notice, all product information and specifications contained in this manual are subject to change to improve the performance of the product.
- To purchase optional accessories, visit an electronics store or an online shopping site, or contact the retailer from which you purchased the product.
- The power cord provided may differ depending upon the region.

## Supported Drivers and Software

You can download and install the latest version from the LGE website ( [www.lg.com](http://www.lg.com) ).

Drivers and Software	Installation Priority
Monitor Driver	Recommended
OnScreen Control	Recommended

## Product and Button Description

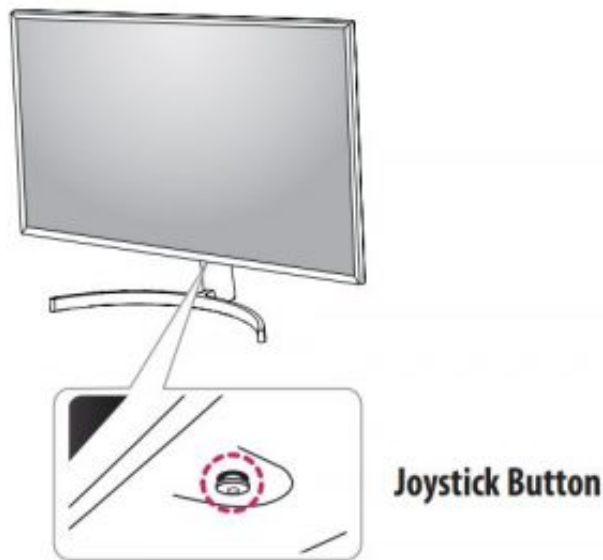

### How to Use the Joystick Button

You can easily control the functions of the monitor by pressing the joystick button or moving it left/right/up/down with your finger.

### Basic Functions

		<b>Power on</b>	Press the joystick button once with your finger to turn on the monitor.
		<b>Power off</b>	Press and hold the joystick button once more than 3 seconds with your finger to turn off the monitor.
		<b>Volume control</b>	You can control the volume by moving the joystick button left/right.

### NOTE


- The joystick button is located at the bottom of the monitor.

### Moving and Lifting the Monitor

When moving or lifting the monitor, follow these instructions to prevent the monitor from being scratched or damaged and to ensure safe transportation, regardless of its shape or size.

- Place the monitor in the original box or packing material before attempting to move it.
- Before moving or lifting the monitor, disconnect the power cord and all other cables.
- Hold the bottom and side of the monitor frame firmly. Do not hold the panel itself.
- When holding the monitor, the screen should face away from you to prevent it from being scratched.

- When transporting the monitor, do not expose the monitor to shock or excessive vibration.
- When moving the monitor, keep it upright and never turn the monitor on its side or tilt it sideways.

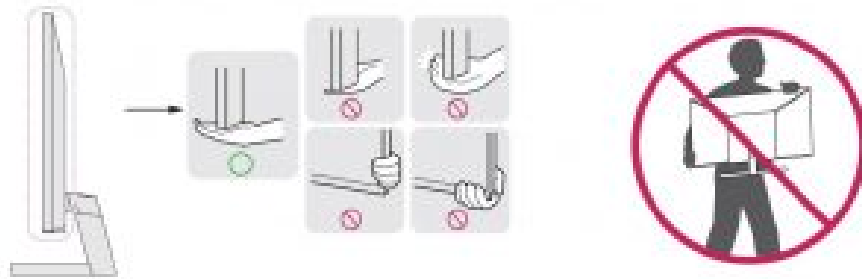


## CAUTION

- Avoid touching the monitor screen as much as possible.-
- This may result in damage to the screen or some of the pixels used to create images.
- If you use the monitor panel without the stand base, its joystick button may cause the monitor to become unstable and fall, resulting in damage to the monitor or human injury. In addition, this may cause the joystick button to malfunction.

## Installing on a Table

- Lift the monitor and place it on the table in an upright position. Place the monitor at least 100 mm (3.94 inches) away from the wall to ensure sufficient ventilation.

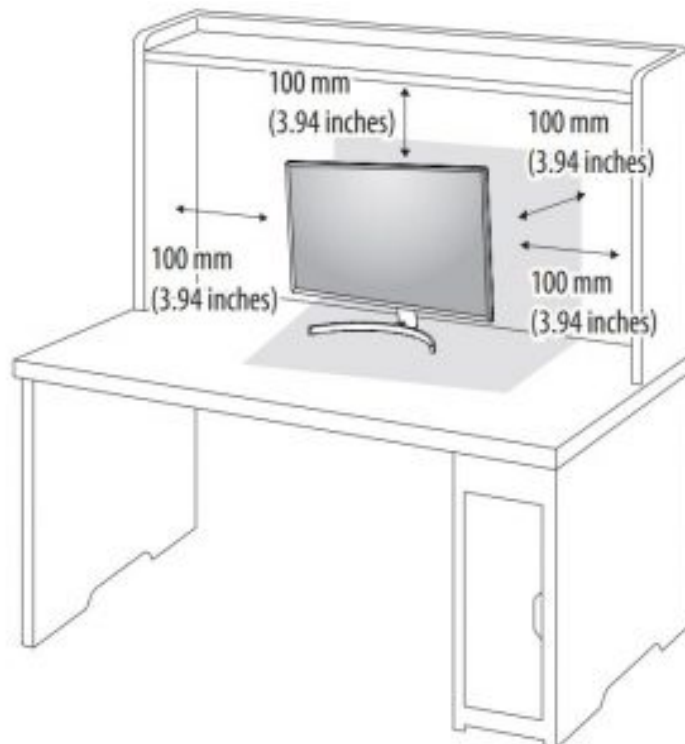

## CAUTION

- Unplug the power cord before moving or installing the monitor. There is risk of electric shock.
- Make sure to use the power cord that is provided in the product package and connect it to a grounded power outlet.
- If you need another power cord, please contact your local dealer or the nearest retail store.


## Adjusting the Angle

1. Place the monitor mounted on the stand base in an upright position.
2. Adjust the angle of the screen.

The angle of the screen can be adjusted forward or backward from  $-5^{\circ}$  to  $15^{\circ}$  for a comfortable viewing experience.



- To avoid injury to the fingers when adjusting the screen, do not hold the lower part of the monitor's frame as illustrated below.
- Be careful not to touch or press the screen area when adjusting the angle of the monitor.

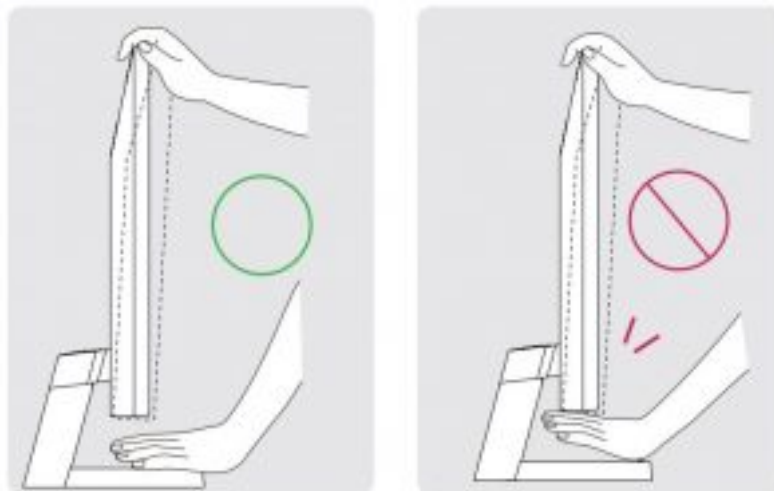


## Using the Kensington Lock

The connector for the Kensington security system is located at the bottom of the monitor.

For more information on installation and usage, refer to the Kensington lock owner's manual or visit the website at <http://www.kensington.com>.

Connect the monitor to a table using the Kensington security system cable.

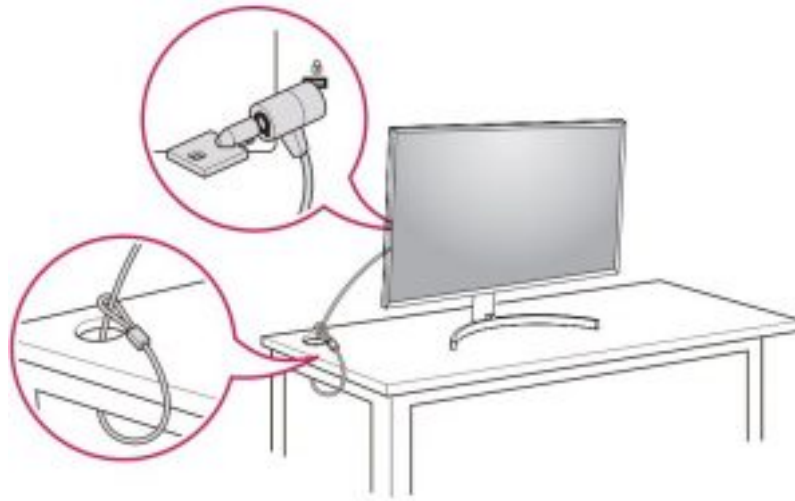

## NOTE

The Kensington security system is optional. You can obtain optional accessories from most electronics stores.

### Installing the Wall Mount Plate


This monitor meets the specifications for the wall mount plate or other compatible devices.

## NOTE


- The wall mount plate is sold separately.
- For more information on installation, refer to the wall mount plate's installation guide.
- Be careful not to apply too much force while mounting the wall mount plate as it may cause damage to the screen.
- Remove the stand before installing the monitor on a wall mount by performing the stand attachment in reverse.

### Installing on the Wall

Install the monitor at least 100 mm (3.94 inches) away from the wall and leave about 100 mm (3.94 inches) of space at each side of the monitor to ensure sufficient ventilation. Detailed installation instructions can be obtained from your local retail store. Alternatively, please refer to the manual for how to install and set up a tilting wall mounting bracket.

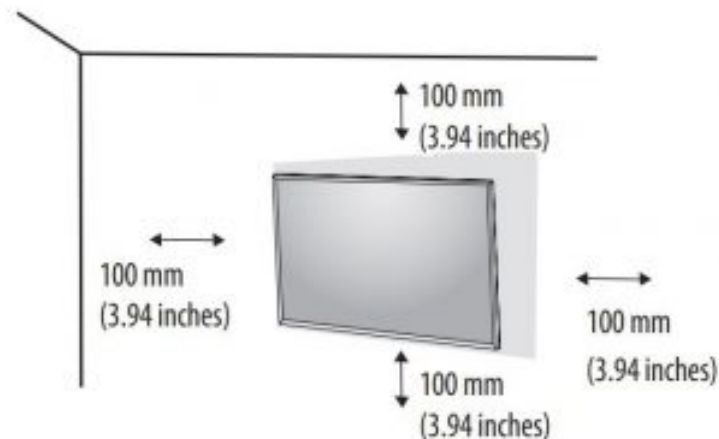

To install the monitor to a wall, attach a wall mounting bracket (optional) to the back of the monitor. Make sure that the wall mounting bracket is securely fixed to the monitor and to the wall.

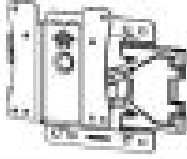Wall Mount (mm)	100 x 100
Standard screw	M4 x L10
Number of screws	4
Wall Mount Plate (Optional)	LSW 149 

## NOTE


- A non-VESA standard screw may damage the product and cause the monitor to fall. LG Electronics is not liable for any accidents relating to the use of non-standard screws.
- The wall mount kit includes the installation guide and all necessary parts.
- The wall mounting bracket is optional. You can obtain optional accessories from your local dealer.
- The length of the screw may differ for each wall mounting bracket. If you use screws longer than the standard length, it may damage the inside of the product.
- For more information, please refer to the user manual for the wall mounting bracket.



## CAUTION

- Unplug the power cord before moving or installing the monitor to avoid electric shock.
- Installing the monitor on the ceiling or on a slanted wall may result in the monitor falling off, which could lead to injury. Use an authorized LG wall mount and contact the local dealer or qualified personnel.
- Applying excessive force when tightening screws may cause damage to the monitor. Damage caused in this way will not be covered by the product warranty.
- Use the wall mounting bracket and screws that conform to VESA standards. Damage caused by the use or misuse of inappropriate components will not be covered by the product warranty.
- When measured from the back of the monitor, the length of each installed screw must be 8 mm (0.3 inches) or less.



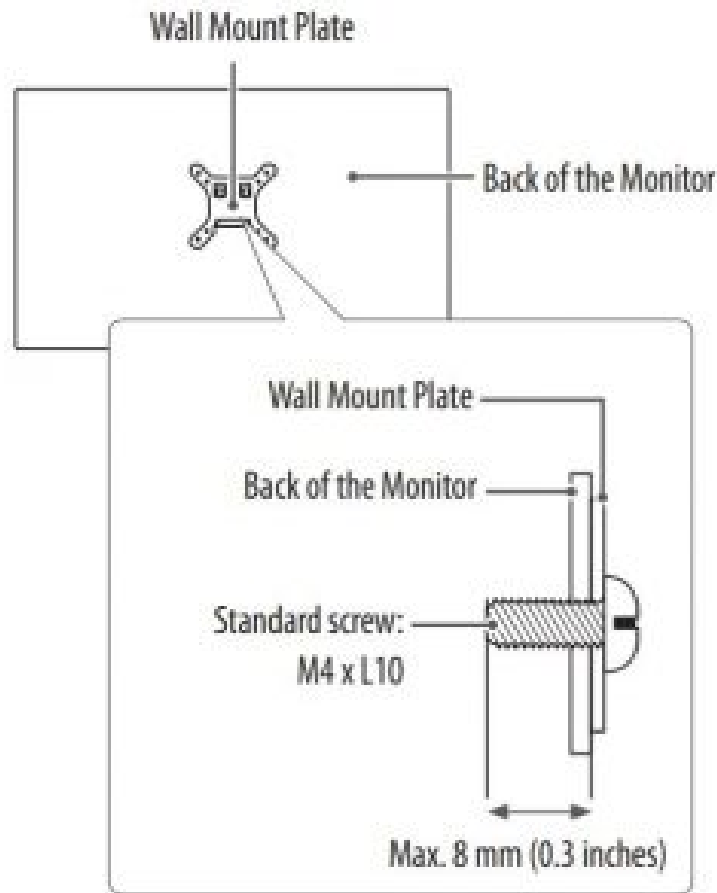

## USING THE MONITOR

- Illustrations in this manual may differ from the actual product.

Press the joystick button, go to Settings Input, and then select the input option.

### CAUTION

- Do not press the screen for a prolonged time. This may cause image distortion.
- Do not display a still image on the screen for a prolonged time. This may cause image retention. Use a PC screensaver if possible.
- When connecting the power cord to the outlet, use a grounded (3-hole) power strip or a grounded power outlet.
- The monitor may flicker when turned on in an area where the temperature is low. This is normal.
- Sometimes red, green, or blue spots may appear on the screen. This is normal.

## Connecting to a PC

- This monitor supports the \*Plug and Play feature.

\* Plug and Play: A feature that allows you to add a device to your computer without having to reconfigure anything or install any manual drivers.

## HDMI Connection

Transmits digital video and audio signals from your PC to the monitor.



### CAUTION

- Using a DVI to HDMI / DP (DisplayPort) to HDMI cable may cause compatibility issues.
- Use a certified cable with the HDMI logo attached. If you do not use a certified HDMI cable, the screen may not display or a connection error may occur.
- Recommended HDMI cable types-
  - High-Speed HDMI®/TM cable
  - High-Speed HDMI®/TM cable with Ethernet

## D-SUB connection

Transmits analog video from your PC to the Monitor set. Connect the PC and the Monitor set with the supplied D-sub 15 pin signal cable as shown in the following illustrations.

### NOTE

- When using a D-Sub signal input cable connector for Macintosh.
- Mac adapter  
For Apple Macintosh use, a separate plug adapter is needed to change the 15 pin high density (3 row) D-SUB VGA connector on the supplied cable to a 15 pin 2 row connector.

## Connecting AV Devices

### HDMI Connection

HDMI transmits digital video and audio signals from your AV device to the monitor.

### NOTE

- Using a DVI to HDMI / DP (DisplayPort) to HDMI cable may cause compatibility issues.
- Use a certified cable with the HDMI logo attached. If you do not use a certified HDMI cable, the screen may not display or a connection error may occur.
- Recommended HDMI cable types
  - High-Speed HDMI®/TM cable
  - High-Speed HDMI®/TM cable with Ethernet

## Connecting Peripherals

### Headphones Connection

Connect peripherals to the monitor via the headphones port.

### NOTE

- Peripheral devices are sold separately.
- Depending on the audio settings of the PC and external device, headphones and speaker functions may be limited.

- If you use angled earphones, it may cause a problem with connecting another external device to the monitor.

Therefore, it is recommended to use straight earphones.




## USER SETTINGS

### NOTE

Your monitor’s OSD (On Screen Display) may differ slightly from that shown in this manual.

### Activating the Main Menu

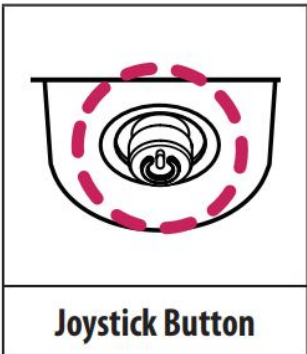

1. Press the joystick button on the bottom of the monitor.
2. Move the joystick up/down and left/right to set the options.
3. Press the joystick button once more to exit the main menu.

Buttons	Status Function		Description
	Main menu disabled		Enables the main menu.
	Main menu enabled		Enter the main menu. Holding down the button more than 1 second to turn off the monitor. You can turn off the monitor this way at any time, including when the OSD is on.
	Volume up	Main menu disabled	Adjusts the monitor volume level.
	Volume down	Main menu enabled	Enter the Input feature.
	Source	Main menu disabled	Adjusts the monitor volume level.
	Settings	Main menu enabled	Enter the Settings feature.
	Information	Main menu disabled	Displays the information on the screen input.
	Power	Main menu enabled	Turns off the monitor.
	OSD	Main menu disabled	Displays the information on the OSD settings.
	Picture	Main menu enabled	Enter the Picture Menu feature (for HDR only).

### Main Menu Features



(for D-USB only)

Menu Item	Description
Input	Set input mode.
Power Off	Turn off the monitor.
Settings	Configure the screen settings.
Picture Mode	Set the picture mode.
Exit	Exit the OSD menu.
Auto Configuration	Open the Auto Configuration for optional display > D-USB.



(for D-USB only)

## Menu Settings

- 1 To view the OSD menu, press the joystick button at the bottom of the monitor and then enter the **Settings**.
- 2 Move the joystick up/down and left/right to set the options.
- 3 To return to the upper menu or set other menu items, move the joystick to ◀ or pressing (⏮) it.
- 4 If you want to exit the OSD menu, move the joystick to ◀ until you exit.



 
Quick Settings



Input




Picture



General

## Customizing settings


Settings > Quick Settings	Description
Brightness	Adjusts the contrast and brightness of the screen.
Contrast	
Volume	Adjusts the volume (for HDMI only)
	 <b>NOTE</b> • You can adjust <b>Mute / Unmute</b> by moving the joystick button to <b>▼</b> in the Volume menu.


Settings > Input	Description
Input List	Selects the input mode.
Aspect Ratio	Adjusts the aspect ratio of the screen.
	<b>Full Wide</b> Displays the video in wide-screen, regardless of the video signal input.
	<b>Original</b> Displays video according to the aspect ratio of the video signal input.
	 <b>NOTE</b> • The options may disabled at the recommended resolution (1920 x 1080).


Settings > Picture	Description	
Picture Mode	Custom	Allows the user to adjust each element. The color mode of the main menu can be adjusted.
	Standard	Optimizes the screen for video playback. Also, enables the preset in the OSD menu.
	Picture	Optimizes the screen for image photos.
	Game	Optimizes the screen to improve the visual effects of games.
	Color Weakness	This mode is for people who cannot distinguish between red and green. It enables users with color weakness to easily distinguish between the two colors.
	Game	Optimizes the screen for games.
Picture Adjust	Brightness	Adjusts the contrast and brightness of the screen.
	Contrast	
	Sharpness	Adjusts the sharpness of the screen.
	SUPER RENDERING +	<b>Off</b> Select the picture for everyday viewing. SUPER RENDERING is turned off in this mode.
		<b>High</b> Optimizes picture quality to display vibrant colors with crystal-clear images. It is effective for high-quality stills or game.
		<b>Middle</b> The optimized picture quality to display vibrant color with images between low and high modes for comfortable viewing. It is effective for SD or HD video.
		<b>Low</b> The optimized picture quality to display vibrant colors with smooth and natural images. It is effective for slow-moving pictures or still images.
	Black Level	Turn the effect level (for HDMI only). • Effect: you're viewing from a video signal. This is the default picture mode (on Display).
		<b>High</b> Raises the current contrast ratio of the screen.
		<b>Low</b> Lowers the black level and raises the white level from the current contrast ratio of the screen.
	SRC	<b>On</b> Adjusts the brightness automatically according to the screen.
		<b>Off</b> Disables the SRC feature.

## NOTE

- This is subsidiary for color weakness user. Therefore if you feel uncomfortable with the screen, please turn off this function.
- This function can't distinguish some colors in some images.

Game Adjust	Response Time	Sets a response time for displayed pictures based on the speed while screen. For a normal environment, it is recommended that you set <b>Fast</b> . For a fast-moving picture, it is recommended that you set <b>Fastest</b> . Setting to <b>Fastest</b> may cause image sticking.	
		<b>Fastest</b>	Set the response time to Fastest.
		<b>Fast</b>	Set the response time to Fast.
		<b>Normal</b>	Set the response time to normal.
		<b>OFF</b>	Don't set on the response time improvement feature.
Game Adjust	Overdrive	Provides smoother and natural images by synchronizing the refresh frequency of the input signal with that of the output signal.  <b>CAUTION</b> <ul style="list-style-type: none"> <li>Supported interface: HDMI.</li> <li>Supported graphics card: All graphics card that supports AMD's FreeSync technology.</li> <li>Supported device: All the user to update the graphics card to the latest item.</li> <li>For more information and engagement, refer to AMD website at <a href="http://www.amd.com/FreeSync">http://www.amd.com/FreeSync</a>.</li> </ul>	
		<b>On</b>	FreeSync function on.
		<b>OFF</b>	FreeSync function off.
	Black Stabilizer	<b>Black Stabilizer</b> You can control the Black contrast to have better visibility in dark scenes. Increasing the Black Stabilizer value brightens the low-gray level area on the screen. (Please use only the supported graphics card and game content.) Reducing the Black Stabilizer value darkens the low-gray level around the screen, contrast on the screen.	
		<b>Game Mode</b> Even this procedure must on the screen for first Person Shooter(FPS) games. User can select <b>Simulation Mode</b> that fit their gaming environment among four different game mode. <ul style="list-style-type: none"> <li>When the mode is off or when image auto mode, the Game Mode feature is automatically turned off.</li> </ul>	

Color Adjust	Gamma	Mode 1, Mode 2, Mode 3	The higher the gamma value, the darker the image becomes. Likewise, the lower the gamma value, the lighter the image becomes.
		Mode 4	If you do not want to adjust the gamma setting, select Mode 4.
	Color Temp	Selects the factory default picture color. Custom: The user can adjust 6 tones, green or blue for information. Warm: Sets the screen color to a reddish tone. Standard: Sets the screen color to become a red and blue tone. Cool: Simulates color cooler than White tone.	
	Red/Green/Blue	You can customize the picture color using Red, Green, and Blue color.	
	Configuration Adjust (D-SUB only)	Horizontal	It moves image left and right.
	Vertical	It moves image up and down.	
	Clock	It increases any vertical line on image under on the screen as appears. The horizontal line also will also change.	
	Phase	It adjust horizontal of the display. This item allows you to increase any horizontal noise and decrease the image of characters.	
Resolution (D-SUB only)	You can set the deinterlacing. This option is available only when the screen resolution on your computer set to the following (D-SUB only).		
	 <b>WARNING</b>		
	The function is enabled only when the screen resolution on your computer is set to the following, except that the PC output among resolution.		
	1024x768, 1280x768, 1280x800, 1280x1024		
	1280x768, 1280x1024, OFF		
	1280x768, 1280x1024, ON		
Picture Reset	Do you want to reset your settings?		
	Yes	Cancel the select.	
	No	Return to the default settings.	

Settings > General	Description	
Language	To choose the language in which the instructions are displayed.	
SMART ENERGY SAVING	<b>High</b>	Low energy using the high efficiency (SMART) energy saving feature.
	<b>Low</b>	Low energy using the low efficiency (DAP) energy saving feature.
	<b>OFF</b>	Disable the SMART energy saving feature.
Automatic Standby	The monitor will automatically enter the standby mode when a computer is not used.	
SRC Lock	Prevents accidental key input.	
	<b>On</b>	Key inputs disabled.
	 <b>WARNING</b> <ul style="list-style-type: none"> <li>All the time except for the OSD (on-screen) brightness, contrast, input, information and volume are disabled.</li> </ul>	Key inputs enabled.
Information	This display information will be shown the Model, Serial Number, Total Power On Time, Resolution.	
Reset	Do you want to reset your settings?	
	<b>Yes</b>	Cancel the select.
	<b>No</b>	Return to the default settings.

## NOTE

- The value of energy saving data may differ depending on panel and panel suppliers.
- If you select the option of SMART ENERGY SAVING is High or Low, monitor luminance become lower or

higher depend on source.

TROUBLESHOOTING

Nothing is displayed on the screen.	
Is the monitor's power cord plugged in?	<ul style="list-style-type: none"> <li>Check if the power cord is correctly plugged into the power outlet.</li> </ul>
Is the No Signal message being displayed?	<ul style="list-style-type: none"> <li>Screen displayed when the signal cable between the PC and the monitor is correctly connected. Check the cable and reconnected it.</li> </ul>
Is the Out of Range message being displayed?	<ul style="list-style-type: none"> <li>This occurs when signals (provided from the PC (graphics card)) are out of the monitor's vertical frequency range of the monitor. Please see the Product Specification section of the manual to set the appropriate frequency.</li> </ul>
Screen display is unstable and shaky / Images displayed on the monitor have unstable built.	
Do you select the appropriate resolution?	<ul style="list-style-type: none"> <li>If the selected resolution is 4096 (4096x16) or (higher), the screen may be flickering. Change the resolution to 1080p as the recommended resolution.</li> <li>Not setting the graphics card to the recommended optimal resolution may result in flickering, a distorted screen, incorrect display aspect, misalignment of the display.</li> <li>The writing methods may be different depending on the computer's operating system, and some resolution may not be available depending on the performance of the graphics card. If this is the case, adjust the resolution of the computer or graphics card for optimum.</li> </ul>
Does image stilling occur even when the monitor is turned off?	<ul style="list-style-type: none"> <li>Displaying a still image for a long period may cause damage to the screen, resulting in the retention of the image.</li> <li>To preserve lifetime of the monitor, use a computer.</li> </ul>
Are there spots on the screen?	<ul style="list-style-type: none"> <li>When using the monitor, pixelated spots (red, green, blue, white, or black) may appear on the screen. This is normal for an LED screen. It is not a defect, so not related to the monitor's performance.</li> </ul>
Some features are disabled.	
Are screen features not available when you press the Home button?	<ul style="list-style-type: none"> <li>The OSD is locked. Double <b>OSD Lock is General</b>.</li> </ul>

Do you see an "Unsuccessful monitor Plug and Play (PnP) monitor found" message?	
Have you installed the display driver?	<ul style="list-style-type: none"> <li>Driver to install the display driver from our web site: <a href="http://www.sony.com">http://www.sony.com</a></li> <li>Make sure to install if the graphics card supports Plug and Play function.</li> </ul>
Do you install the bezel/frame part?	
Are images displayed without issue?	<ul style="list-style-type: none"> <li>Make sure that the bezel/frame part is connected or made properly.</li> <li>Try increasing the volume with the speaker.</li> <li>Set the audio output of the PC to the monitor you are using. (The setting may differ depending on the operating system (OS) version.)</li> </ul>

PRODUCT SPECIFICATION

Color Depth	14-bit / 16-bit color is supported.	
Resolution	Max Resolution	4096x1600 (4096x1600)
	Recommended Resolution	4096x1600 (4096x1600)
Power Section	Power Rating	100W TYP / 1.2W
	Power Consumption	<ul style="list-style-type: none"> <li>Example: 25 WTyp (Display on/standby)</li> <li>Stand Mode: 0.1 WTyp ***</li> <li>Off Mode: 0.1 WTyp</li> </ul>

[illegible]

Environmental Conditions	Operating Conditions	Temperature	-4°C to 60°C (24°F to 144°F)
		Humidity	less than 95%
	Storage Conditions	Temperature	-20°C to 60°C (-4°F to 140°F)
		Humidity	less than 95%
Dimensions	Standard Size (Width x Height x Depth)		
	With Stand	79.4x101.1x109.2 (mm) 3.13x 4.01x 4.3 (inches)	
	Without Stand	79.4x101.1x85.0 (mm) 3.13x 4.01x 3.3 (inches)	
	With Stand	0.4 kg (0.9 lbs)	
Weight (Without Packaging)	Without Stand	0.2 kg (0.4 lbs)	

The specifications are subject to change without notice.

\* The power consumption level can be different by operating condition and monitor setting.

\* The On mode power consumption is measured with LGE test standard (Full White pattern , Maximum resolution).

\*\*\* The monitor goes to the Sleep Mode in a couple of minutes(Max 5 minutes).

## Factory Support Mode (Preset Mode, PC)

D-SUB / HDMI



Pixel Rate	Horizontal Frequency (MHz)	Vertical Frequency (Hz)	Polarity (VFP)	Remarks
400x300	11.489	59.94	-/+	
400x300	12.1	70	-/+	
600x400	15.019	60.01	+/-	
600x400	16.071	70	+/-	
800x600	18.011	60	-/+	
800x600	18.011	70.029	+/-	
1000x750	21	60	+/-	
1000x750	18.750	59.97	-/+	
1280x800	18.011	60.02	+/-	
1280x800	19.016	70.029	+/-	
1400x900	20	60	+/-	
1600x1000	20.28	59.954	-/+	
1600x1000	47.1	60	+/-	
1920x1080	23.254	74.251	+/+	(for HDMI only)

## HDMI Timing (Video)

Factory Support Mode (Preset Mode)	Horizontal Frequency (MHz)	Vertical Frequency (Hz)	Remarks
400p	11.5	60	
1175p	31.25	30	
1100p	17.5	30	
720p	45	60	
1080p	94.25	30	
1080p	47.5	60	Recommended Mode








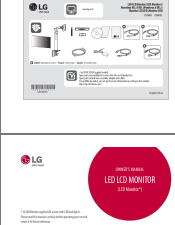



## Supplier's Declaration of Conformity

- **Trade Name:** LG
- **Responsible Party:** LG Electronics USA, Inc.
- **Address:** 1000 Sylvan Ave Englewood Cliffs, NJ 07632
- **Telephone:** (201)266-2215





The model and serial number of the product are located on the back and on one side of the product. Record them below in case you ever need service.

**Model:**  
**Serial No.**

## Documents / Resources

	<a href="#">LG Led Lcd Monitor</a> [pdf] Owner's Manual Led Lcd Monitor, 32MN500M, 32MN50W, 32MN60T
	<a href="#">LG LED LCD MONITOR</a> [pdf] Owner's Manual LED LCD MONITOR, 24BL650C, 27BL650C
	<a href="#">LG LED LCD Monitor</a> [pdf] Owner's Manual LED LCD Monitor, 27UL550, 27UL500
	<a href="#">LG LED LCD Monitor</a> [pdf] Owner's Manual LED LCD Monitor
	<a href="#">LG LED LCD Monitor</a> [pdf] Owner's Manual LED LCD Monitor, LED Monitor, 29WN600, 34WN650
	<a href="#">LG LED LCD MONITOR</a> [pdf] Owner's Manual LG, LED MONITOR, LCD MONITOR
	<a href="#">LG LED LCD MONITOR</a> [pdf] Owner's Manual LED LCD MONITOR
	<a href="#">LG LED LCD Monitor</a> [pdf] Installation Guide LED, LCD, Monitor, LG, 27UN880, 27BN88U
	<a href="#">LG LED LCD MONITOR</a> [pdf] Owner's Manual LG, LED, LCD, MONITOR, 34WN700
	<a href="#">LG LED LCD MONITOR</a> [pdf] Owner's Manual LG, LED, LCD, MONITOR, 29WP60G, 34WP65G
	<a href="#">LG LED LCD Monitor</a> [pdf] Instruction Manual LED LCD Monitor, LED, LCD, LED Monitor, LCD Monitor, Monitor, 22MP410, 22MP400, 24MP400, 27MP400

## References

-  [LG Open Source](#)
-  [FreeSync™ Technology | FreeSync Premium Pro HDR Games | AMD](#)
-  [Computer Products & Accessories: Locks & Docks | Kensington](#)
-  [LG Electronics & Home Appliances | Shop Now | LG USA](#)

Manuals+.