



LG LSEL6335F Smart wi-fi Enabled ProBake Convection InstaView Electric Slide-In Range Owner's Manual

[Home](#) » [LG](#) » LG LSEL6335F Smart wi-fi Enabled ProBake Convection InstaView Electric Slide-In Range Owner's Manual 

INSTALLATION

Before Installing

Please read the following installation instructions first after purchasing this product or transporting it to another location. The images in this guide may be different from the actual components and accessories, which are subject to change by the manufacturer without prior notice for product improvement purposes.

Check and choose the proper location

- b Level the range
- c Connect electric range
- d Plug in the power cord
- e Install anti-tip device
- f Engage the anti-tip device
- g Test run

Tools Needed

- a Phillips screwdriver
- b Flat-blade screwdriver
- c 1/4" Nut driver
- d Pliers
- e Tape measure
- f Level
- g Adjustable wrench
- h Drill
- i Safety glasses
- j Gloves

Parts

- a Template (1)
- b Anti-tip bracket kit (1)
- c Anchor sleeves (6)
- d Lag bolts (6)

Parts Not Provided

- a 4-Wire cord or 3-Wire cord (UL approved 40 or 50 AMP)
- b Strain relief (For conduit installations only)

Unpacking and Moving the Range

You should use two or more people to move and install the range. (Excessive Weight Hazard) Failure to do so can result in back or other injury.
Do not use the door handles to push or pull the range during installation or when moving the range out for cleaning or service. Doing so can result in serious damage to the door of the range.
To reduce the risk of burns, do not move this appliance while it is hot.

Note

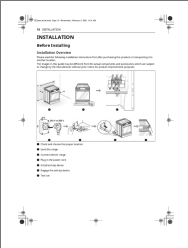
Remove packing material, tape and any temporary labels from your range before using. Do not remove any warning-type labels, the model and serial number label, or the Tech Sheet that is located on the back of the range. To remove any remaining tape or glue, rub the area briskly with your thumb. Tape or glue residue can also be easily removed by rubbing a small amount of liquid dish soap over the adhesive with your fingers. Wipe with warm water and dry.
Do not use sharp instruments, rubbing alcohol, flammable fluids, or abrasive cleaners to remove tape or glue. These products can damage the surface of your range.

Contents

[1 Documents / Resources](#)

[2 Related Posts](#)

Documents / Resources

	<p>LG LSEL6335F Smart wi-fi Enabled ProBake Convection InstaView Electric Slide-In Range [pdf] Owner's Manual</p> <p>LSEL6335F, Smart wi-fi Enabled ProBake Convection InstaView Electric Slide-In Range, LSEL6335F Smart wi-fi Enabled ProBake Convection InstaView Electric Slide-In Range</p>
---	--