



LG TV Remote Control Functions: Magic Remote Owner's Manual

[Home](#) » [LG](#) » **LG TV Remote Control Functions: Magic Remote Owner's Manual**

The LG Magic Remote Owner's Manual is a comprehensive guide to using the remote control for LG TVs. It provides detailed information on the various functions of the remote, including how to install batteries, register the remote, and use the different buttons and services. The manual also includes precautions to take when using the remote, such as using it within the specified range and avoiding obstacles that may cause communication failures. The manual is easy to follow and provides step-by-step instructions on how to use the remote, making it a valuable resource for anyone who owns an LG TV and wants to get the most out of their Magic Remote. Whether you're a new user or an experienced one, this manual is a must-read to ensure that you're using your remote correctly and safely.

Contents [[hide](#)]

- [1 LG Magic Remote Owner's Manual](#)
- [2 ACCESSORIES](#)
- [3 BATTERY](#)
 - [3.1 Installing Batteries](#)
- [4 Precautions](#)
- [5 REMOTE DESCRIPTION](#)
- [6 USING](#)
- [7 How to use](#)
- [8 PRECAUTIONS TO TAKE](#)
- [9 SPECIFICATIONS](#)
- [10 FAQs](#)
- [11 VIDEO](#)
- [12 Documents / Resources](#)
- [13 Related Posts](#)


LG Magic Remote Owner's Manual




LG Magic Remote Owner's Manual


Please read this manual carefully before using your remote and retain it for future reference. AN-MR19BA

ACCESSORIES

The remote control image shown may differ from the actual product. ( Depending on the country)

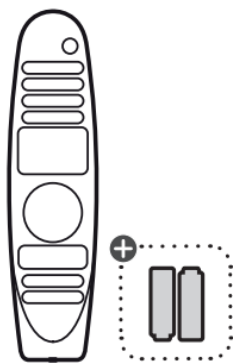 

 Magic Remote and Alkaline Batteries (AA)

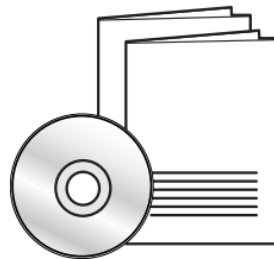




Owner's manual

- Contents in this manual may be changed without prior notice due to an upgrade of product functions.

BATTERY

Installing Batteries

 - Please read this manual carefully.
- Press the top of the battery cover, slide it back, and lift the cover as shown below.
- To replace batteries, open the battery cover, replace alkaline batteries (1.5 V, AA) matching  and  ends to the label inside the compartment, and close the battery cover. Be sure to point the remote control at the remote control sensor on the TV.
- To remove the batteries, perform the installation actions in reverse. Don't mix old or used batteries with new ones. Close the cover securely.
- **Open the battery cover to find the label.**

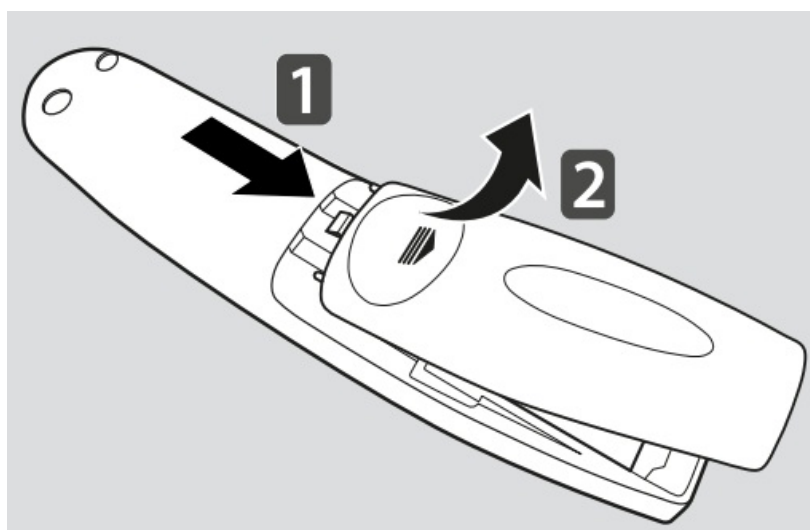


Precautions

- After replacement of the batteries, pair the remote control and use it in accordance with the user manual.
- If the unit does not operate after the replacement of batteries, reattempt pairing in accordance with the user manual.
- If the remote controller is not being used for a prolonged period of time, remove the batteries from the unit.
- Do not dismantle or expose the batteries to heat.

- Do not drop or exert extreme impact on the batteries. This may cause the case to be damaged.
- Do not immerse the batteries in water.
- Properly dispose of used batteries.
- Failure to match the correct polarities of the battery may cause the battery to burst or leak, resulting in fire, personal injury, or ambient pollution.

REMOTE DESCRIPTION

- The remote control image shown may differ from the actual product.
- The order of the description may differ from the actual product.
- Some buttons and services may not be provided depending on models or regions.

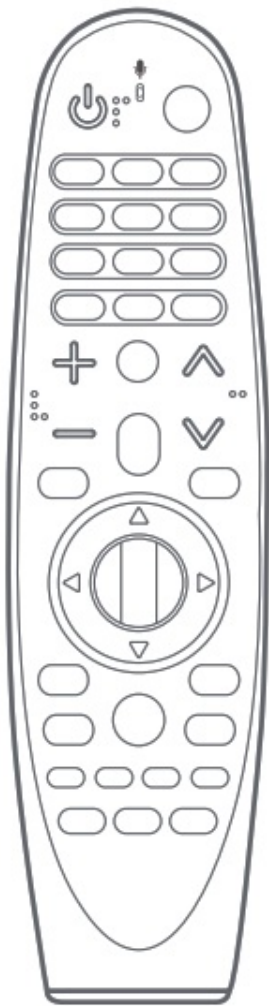 



(POWER)

Turns the TV on or off.

STB / PWR



You can turn your set-top box on or off by adding the

set-top box to the universal remote control for your TV.

9

*

Accesses the [QUICK HELP].

(DASH)

Inserts a (DASH) between numbers such as 2-1 and 2-2.

(DASH)*

LIST / LIST

Accesses the saved channels or programs list.

QUICK ACCESS

* Edits QUICK ACCESS. (QUICK ACCESS is a feature that allows you to enter a specified app or Live TV directly by pressing and holding the number buttons.)

• • • (MORE ACTIONS)

AD / SAP

* Video/audio descriptions function will be enabled. (Depending on country SAP (Secondary Audio Program) feature can also be enabled by pressing the button.

(Depending on the country) **(VOL)** Adjusts the volume level. * To use the button, press and hold for more than 1 second. **Voice recognition*** A network connection is required to use the voice recognition function. Once the voice display bar is activated on the TV screen, press and hold the button and speak your command out loud. **(MUTE)** Mutes all sounds. **(MUTE)*** Accesses the [Accessibility] menu. **(CH/P)** Scroll through the saved channels or programs. **(HOME)** Accesses the Home menu. **(HOME)***

Shows the previous history. **(Q. Settings)** Accesses the Quick Settings. **(Q. Settings)*** Displays the [All Settings] menu. **Wheel (OK)** Press the center of the **Wheel (OK)** button to select a menu. You can change channels or programs by using the **Wheel (OK)** button. **(up/down/left/right)** Press the up, down, left, or right button to scroll the menu. If you press buttons while the pointer is in use, the pointer will disappear from the screen and the Magic Remote will operate like general remote control. To display the pointer on the screen again, shake the Magic Remote to the left and right. / **GUIDE** Shows channels or programs guide. **BACK** Returns to the previous screen. **BACK** * Clears on-screen displays and returns to last input viewing. **(INPUT)** Changes the input source. **(INPUT)*** Accesses the [HOME DASHBOARD]. **Streaming Service buttons** Connects to the Video Streaming Service. **STB MENU** / **STB MENU** Displays the set-top box Home

 
menu. (When you are not watching via a set-top box: the display changes to the set-top box screen.) **RECENTS** Shows the previous history. (Depending on the country) These access special functions in some menus. *: Runs the record function. (Depending on the country) *: Enter Cheering mode. (Depending on the country) **(Control buttons)** Controls media content.



USING


How to register (pair) or deregister (unpair) How to register (pair) the Magic Remote


1. To use the Magic Remote, first pair it with your TV.
2. Put batteries into the Magic Remote and turn the TV on. 2. Point the Magic Remote at your TV and press the **Wheel (OK)** on the remote control.

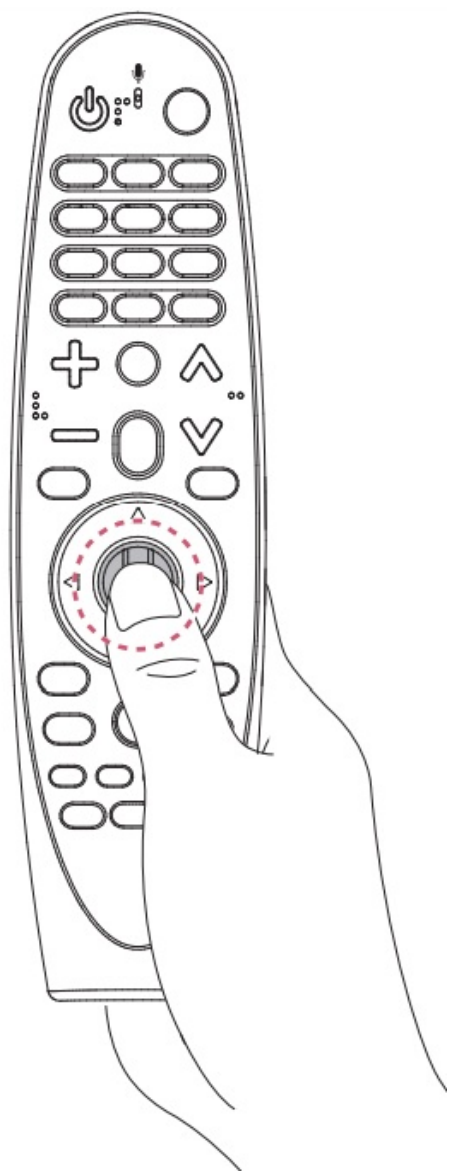 – If the TV fails to register the Magic Remote, try again after turning the TV off and back on.





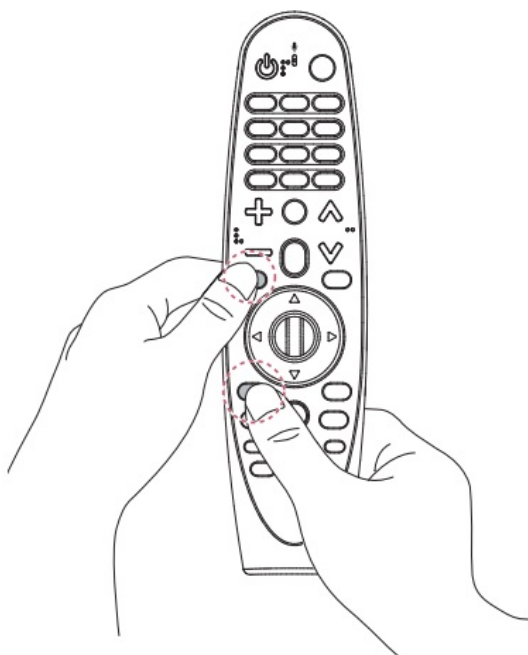


How to deregister (unpair) the Magic Remote Press and hold the  (**HOME**) and  **BACK** buttons at the same time for five seconds, to unpair the Magic Remote with your TV.

- Pressing and holding the  / **GUIDE** button will let you cancel and re-register Magic Remote at once.



How to use

 - Shake the Magic Remote slightly to the right and left or press  (**HOME**),  (**INPUT**), or  (**Q. Settings**) buttons to make the pointer appear on the screen. (In some TV models, the pointer will appear when you turn the  **Wheel (OK)** button.)
- If the pointer has not been used for a certain period of time or Magic Remote is placed on a flat surface, then the pointer will disappear.
- If the pointer is not responding smoothly, you can reset the pointer by moving it to the edge of the screen.
- The Magic Remote depletes batteries faster than a normal remote due to the additional features.

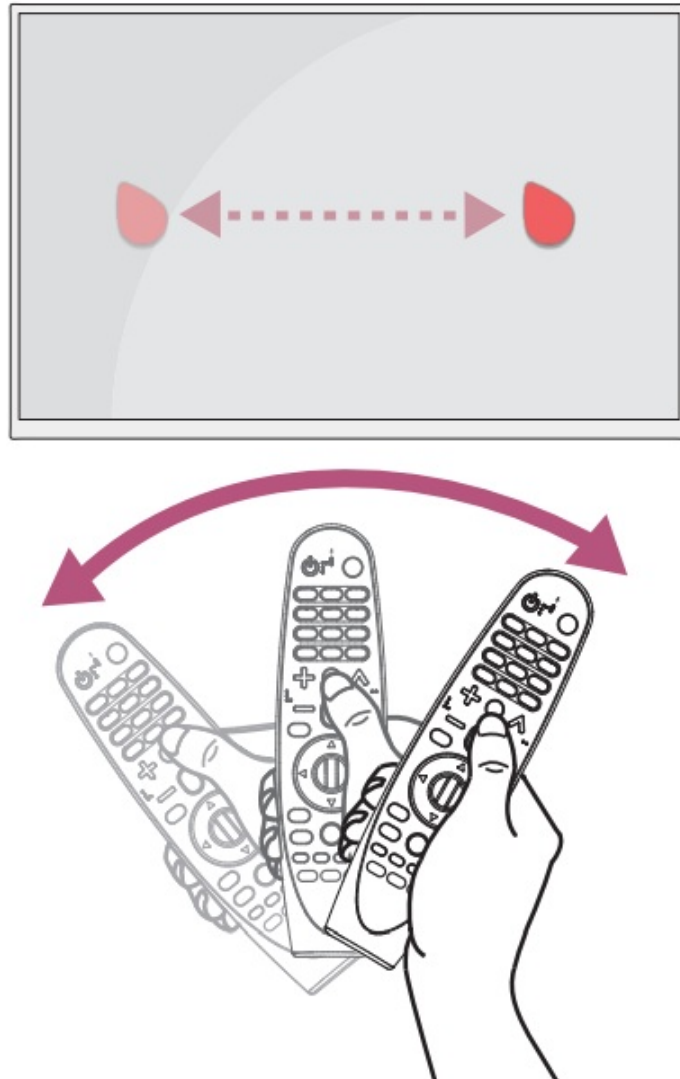

PRECAUTIONS TO TAKE

- Use the remote control within the specified range (within 10 m). You may experience communication failures when using the device outside the coverage area or if there are obstacles within the coverage area.
- You may experience communication failures depending on the accessories. Devices such as a microwave oven and wireless LAN operate in the same frequency band (2.4 GHz) as the Magic Remote. This may cause communication failures.
- The Magic Remote may not work properly if a wireless router (AP) is within 0.2 m of the TV. Your wireless router should be more than 0.2 m away from the TV.
- Do not disassemble or heat the batteries.

- Do not drop the battery. Avoid extreme shocks to the battery.
- Inserting a battery in the wrong way may result in an explosion.

SPECIFICATIONS

CATEGORIES	DETAILS
Model No.	AN-MR1913A
Range of frequency	2.400 GHz to 2.4835 GHz
Output Power (Max)	4 dBm
Channel	40 channels
Power source	AA 1.5V, 2 alkaline batteries are used
Operational temperature range	0°C to 40°C

FAQS

how to pair it?

It pairs automatically.
Just press the scroll button

Is this remote compatible with an lg 70um7450pla

The box says LG UM7 TVs that have Bluetooth

Why can't I use the remote control?

The batteries may be exhausted. Please replace the batteries with new ones.

Does it work with lg 60 inch 60um7100plb smart 4k ultra hd tv? xx

It works with my girlfriend lg 7100 49 inch

which button turns on sub titles

It's a few clicks. Press the roller button and the option appears in the top right.

Does the retune button work

Yes all works

Is this remote easy or complicated

Easy. For use on certain LG model TV's, the remote controls pointer around the screen. Also roller and directional controller in centre. A great controller.

Does this remote work with tv model lg 43lm63?

Check LG Internet forums or check older controller for model number

I have a lg um7050plf will this remote work

It's great

Is this compantible with samsung tv?

No

Does it work with lg 43un71006lb tv?

Yes this remote is compatible with that tv model.

Will it work on a uhd ai thin q 50un70 tv

Yes

Does this work with a smart 70 inch tv please?

If its lg, should be fine.

Will it work with lg 49um7400plb ?

It will work with any LG TV that uses the "Magic Remote"

Is this remote compatible with the 49uk6300plb model?

Check your old controller, is your tv a smart tv? Already with a smart controller if not this will not work.

Is this a genuine LG magic remote? Does the roller wheel work?

This remote is brand new genuine and everything works.just amke sure is compatible with your tv

Does this have the magic red pointer

Yes it does, it's the same as the original, it's like a mouse pointer on the screen.

What is your returns policy in case remote does not work? Also will the remote need pairing up?

Magic remote pairs automatically with the TV when close and you press the central button.

How to start up new remote

To re-set the Magic Remote,
Press and hold the (HOME) and (BACK) buttons at the same time for five seconds.

How do I install batteries in the LG Magic Remote?

Press the top of the battery cover, slide it back, and lift the cover. Replace alkaline batteries (1.5 V, AA) matching and ends to the label inside the compartment, and close the battery cover.

How do I pair the Magic Remote with my TV?

Put batteries into the Magic Remote and turn the TV on. Point the Magic Remote at your TV and press the Wheel (OK) on the remote control.

How do I use the pointer feature on the Magic Remote?

Shake the Magic Remote slightly to the right and left or press (HOME), (INPUT), or (Q. Settings) buttons to make the pointer appear on the screen.

What should I do if the Magic Remote is not working?

The batteries may be exhausted. Please replace the batteries with new ones.

How do I reset the Magic Remote?

Press and hold the (HOME) and (BACK) buttons at the same time for five seconds.

How do I turn on subtitles using this remote?


Press the roller button and the option appears in the top right.



[21/08/lg-magic-remote.mp4](#)

www.lg.com

Documents / Resources

<div><div><div><div><div><div></div><div>OWNERS MANUAL</div><div>Magic Remote</div></div></div><div><div><div>Please read this manual carefully before using your remote and return it for future reference.</div><div>AS 107-120</div></div></div></div></div></div> <div><div><div>LG Magic Remote [pdf] Owner's Manual Magic Remote, AN-MR19BA</div></div></div>
--