



LG OL75DK Mini Hi-Fi Audio System with Dj Functions Owner's Manual

 
[Home](#) » [LG](#) » LG OL75DK Mini Hi-Fi Audio System with Dj Functions Owner's Manual 



 

 


Contents

- [1 Top panel](#)
- [2 Front panel / Rear panel](#)
- [3 TV Connection](#)
- [4 Home Menu](#)
- [5 Additional Information](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)

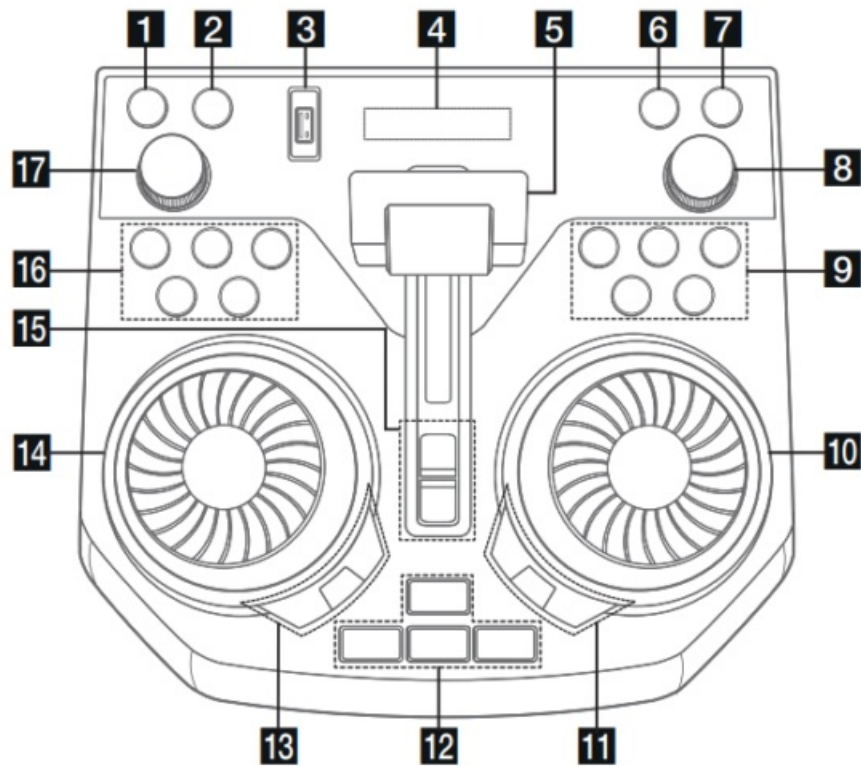Top panel



1.  **(Standby)**
Turns the power on or off.
2. **DEMO**
In power-off status, if you press **DEMO**, show demo mode.
3. **USB Port**
You can play sound files by connecting to the USB device.
4. **Display window**
5. **PARTY ACCELERATOR** lever
Slide the lever to create a party atmosphere.
6. **F (Function)**
Selects the function and input source.
7.  **TWIN**
Connects two speakers for TWIN mode in WIRELESS PARTY LINK.
8. **MASTER VOL. (Volume) -/+**
Adjusts speaker volume.
9.  **(Skip/Scan)**
 - Skips backward or forward.
 - Scans for a section within a track/file/chapter.
 - Selects the radio stations.
-  **(Play/Pause)**
 - Starts or pauses playback.
 - Selects stereo/mono.
-  **(Stop)**
Stops playback or cancels DELETE function.



(Open/Close)

Opens and closes the disc tray.

10. **DJ SCRATCHER / SEARCH & MULTI**

- Turns clockwise or counterclockwise to make a scratch sound.
- Searches a folder or a file (USB only).

11. **SPECIAL EQ / BASS BLAST (or BASS BLAST+)**

- Chooses special equalizer.
- Press and hold to select the BASS (or BASS+) effect directly.

SEARCH

Moves to folder or file in selection mode (USB only).

OK

Select a folder when searching a file.

12. **PARTY STARTER**

- In a power-off state, this function turns on the unit with the Party Kick Starter sound.
- In a power-on state, this function mixes the music with the Party Kick Starter sound.

CLUB, DRUM, USER (DJ PAD)

Select CLUB, DRUM, or USER sound effects to mix.

(If you want to use USER, you have to register a source with the “LG XBOOM” app.)

1, 2, 3 (DJ PAD)

Press a desired sound pad.

13. **DJ EFFECT**

Selects a desired DJ effect.

USER EQ

Selects the equalizer created on your own.

LIGHTING

Selects the lighting mode.

14. **DJ SCRATCHER / LEVEL CONTROL**

- Turns clockwise or counterclockwise to make a scratch sound.
- Turns clockwise or counterclockwise to control the USER EQ level.
- Adjust DJ EFFECT level.
- Selects the vocal effects.
- Selects the lighting effects.

15. **PARTY ACCELERATOR MODE**

Selects PARTY ACCELERATOR MODE.

DJ LOOP

Selects DJ LOOP mode.

(DJ LOOP mode can use during USB playback.)

16. **KEY CHANGER (b/)**

Changes the key to suit your vocal range.

VOICE CANCELLER

You can reduce the vocal tones during music playback from various input sources.

VOCAL EFFECTS

Selects various vocal effects modes.

 
MIC ECHO


Select ECHO mode.


17. MIC VOL. (Microphone Volume) -/+

Adjust microphone volume.

Front panel / Rear panel

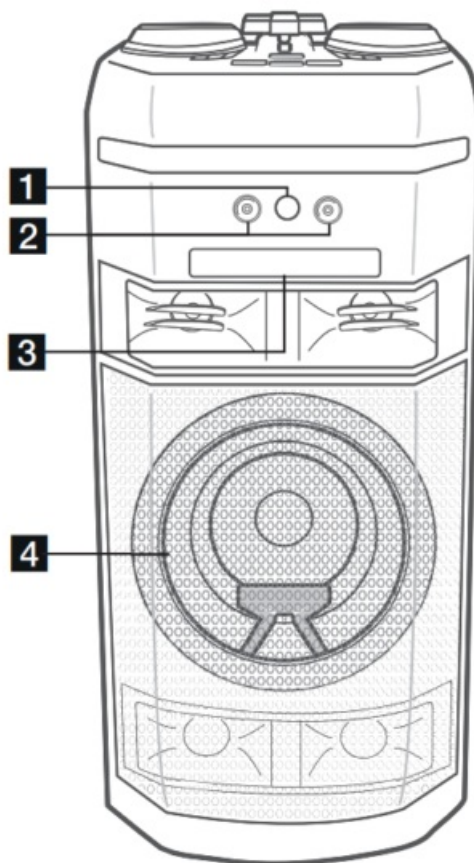

 1.  (Remote sensor)
2. **MIC(Microphone)** 1/2 jack
3. Disc tray
4. Lighting

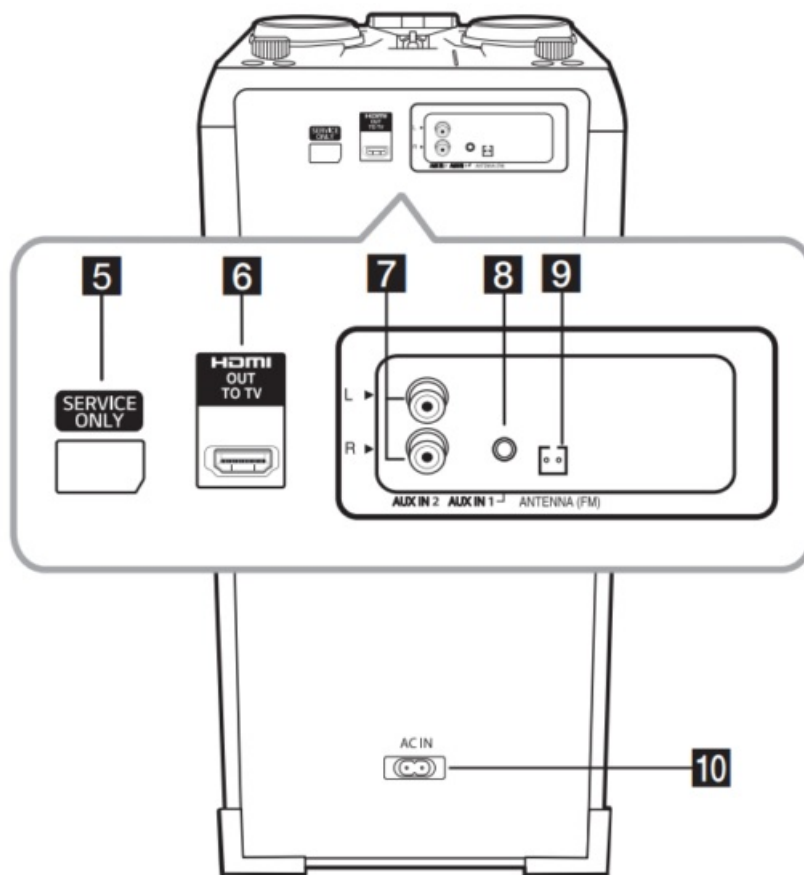


- 5. **SERVICE ONLY:** S/W download connector
- 6. **HDMI OUT TO TV:** Connect to the TV
- 7. **AUX IN 2 (L/R):** Connect an auxiliary device.
- 8. **AUX IN 1:** Connect a portable device.
- 9. **ANTENNA (FM)**
- 10. **AC IN** socket

TV Connection

HDMI Connection :

Connect with the Player and TV using HDMI.

 1. Connect the Player to the TV using an HDMI cable.
2. Set the input selector to HDMI on the TV.
3. Follow the instructions on the TV screen using the remote control.

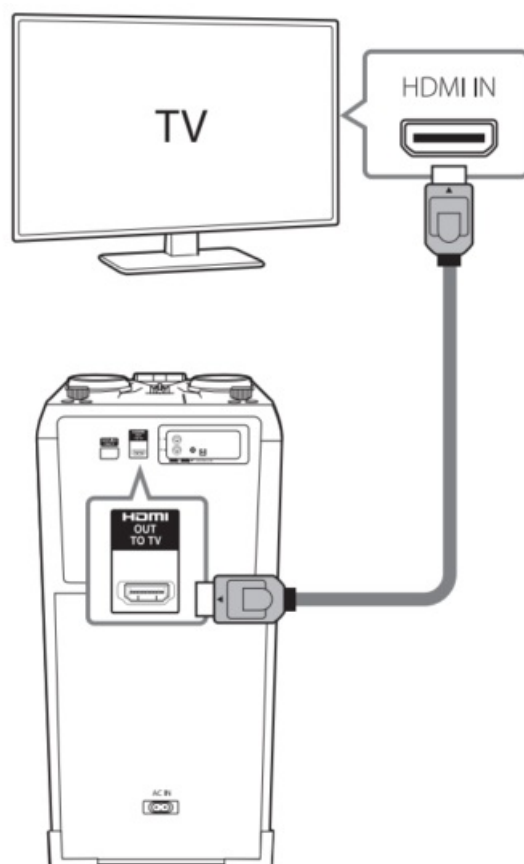

Home Menu

The home menu appears on the TV screen. Enjoy various functions on the player.



Home menu only appears on DVD/CD function.

Controller App



<https://play.google.com/store/apps/details?id=com.lge.media.lgxboom>

Download the **LG XBOOM** App to your device. (Android only)


LG Sound Sync (Wireless)



For more information, download the online owner's manual. <http://www.lg.com>

Additional Information

Specifications

Power Requirements	Refer to the main label on the unit.
Power Consumption	Refer to the main label on the unit.
	Networked standby: 0.5 W (If all network ports are activated.)
Dimensions (W x H x D)	Approx. 330.0 mm x 716.0 mm x 318.0 mm
Bus Power Supply (USB)	5 V  500 mA
Amplifier (Total RMS output power)	600 W RMS

Design and specifications are subject to change without notice.

Caution

- Connect the power cord to the wall outlet directly if possible. Or when you use an extension cable, it is highly recommended to use an extension cable of 110 V / 15 A or 230 V / 15 A, otherwise, the unit may not operate properly because of the lack of power supply.
- Do not overload the extension cord with excessive electrical load.

 
Note

- Do not look directly at the light-emitting part when the LIGHTING is turned on.
- If the illumination brightness is glaring, switch on the room lights or turn off the LIGHTING of the unit.

How to disconnect the wireless network connection or the wireless device

Turn off the unit by pressing the power button for more than 5 seconds

Replacement of battery

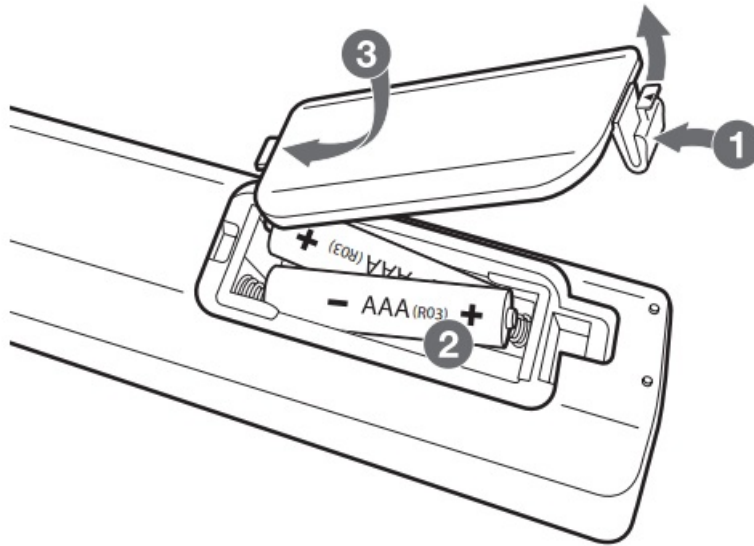

Declaration of Conformity



Hereby, LG Electronics declares that the radio equipment type Mini Hi-Fi Audio is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:
<http://www.lg.com/global/support/cedoc/cedoc#>

For the consideration of the user, this device should be installed and operated with a minimum distance of 20 cm between the device and the body.



Please read this manual carefully before operating your set and retain it for future reference.

To view the instructions for advanced features, visit <http://www.lg.com> and then download Owner's Manual.

Some of the content in this manual may differ from your unit.

MODEL

OL75DK



MFL71422027

1904_Rev01

www.lg.com

Copyright © 2019-2021 LG Electronics Inc. All Rights Reserved.

Documents / Resources



- [!\[\]\(41316894b4442b785f9af741df7b015f_img.jpg\) LG Electronics & Home Appliances | Shop Now | LG USA](#)
- [!\[\]\(8c11693c08e053e2d7f4d995f11fbd02_img.jpg\) CeDoc](#)

Manuals+,