

LG Wireless Sound Bar Instruction Manual

[Home](#) » [LG](#) » LG Wireless Sound Bar Instruction Manual

Contents [[hide](#)]

- 1 LG Wireless Sound Bar
- 2 IN The BOX?
 - 2.1 Symbols
- 3 Front Panel
- 4 Rear Panel
- 5 Subwoofer Connection
 - 5.1 Manual Subwoofer Connection
- 6 TV Connection
 - 6.1 Optical Connection
 - 6.2 HDMI (ARC) Connection
 - 6.3 Additional Device Connection
- 7 Remote control
- 8 Additional Information
 - 8.1 Specification
 - 8.2 OPEN SOURCE SOFTWARE NOTICE
- 9 Documents / Resources
 - 9.1 References
- 10 Related Posts



LG Wireless Sound Bar



Please read this manual carefully before operating your set and retain it for future reference. To view the instructions of advanced features, visit <http://www.lg.com> and then download Owner's Manual. Some of the content in this manual may differ from your unit.

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

WARNING: TO PREVENT FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

WARNING: Do not install this equipment in a confined space such as a book case or similar unit.

CAUTION: Do not use high voltage products around this product. (ex. Electrical swatter) This product may malfunction due to electrical shock.

CAUTION: No naked flame sources, such as lighted candles, should be placed on the apparatus.

CAUTION: Do not block any ventilation openings. Install in accordance with the manufacturer's instructions. Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from over heating. The openings should never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product shall not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instruction has been adhered to.

CAUTION: concerning the Power Cord

The Power Plug is the disconnecting device. In case of an emergency, the Power Plug must remain readily accessible.

CAUTION: The apparatus should not be exposed to water (dripping or splashing) and no objects filled with liquids, such as vases, should be placed on the apparatus.

NOTICE: For safety marking information including product identification and supply ratings, please refer to the main label on the bottom or the other surface of the product.

 
CAUTION: Only use the AC adapter supplied with this device. Do not use a power supply from another device or another manufacturer. Using any other power cable or power supply may cause damage to the device and void your warranty.

- The appliance is not intended for use by young children or infirm persons without supervision.
- Young Children should be supervised to ensure that they do not play with appliance.
- If the appliance is supplied from a cord extension set or an electrical portable outlet device, the cord extension set on electrical portable outlet device must be positioned so that it is not subject to splashing (of water or any form of liquid) or ingress of moisture.

For models using a battery

This device is equipped with a portable battery or accumulator. Risk of fire or explosion if the battery is replaced by an incorrect type.

IN The BOX?

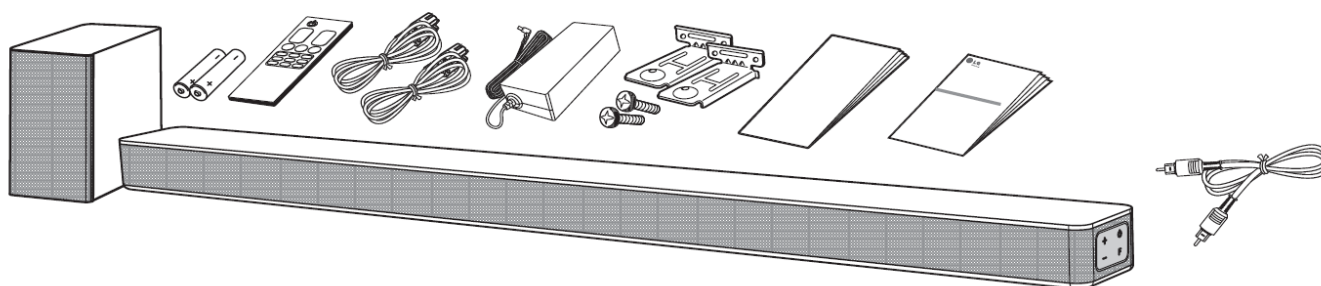


Symbols

~	Refers to alternating current (AC).
≡	Refers to direct current (DC).
⏏	Refers to class II equipment.
⏻	Refers to stand-by.
I	Refers to “ON” (power).
⚡	Refers to dangerous voltage.

Front Panel

 The buttons are located on the side.

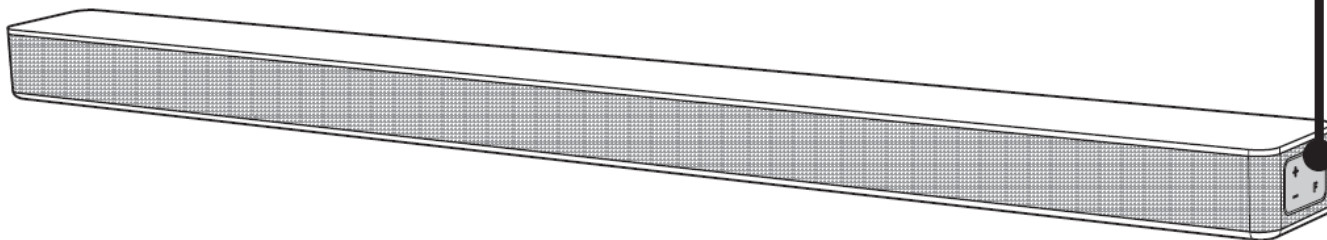


(Standby): Switches the unit ON or OFF .

F (F unction): Selects function.

p/o (Volume): Adjusts volume.

 Rear Panel

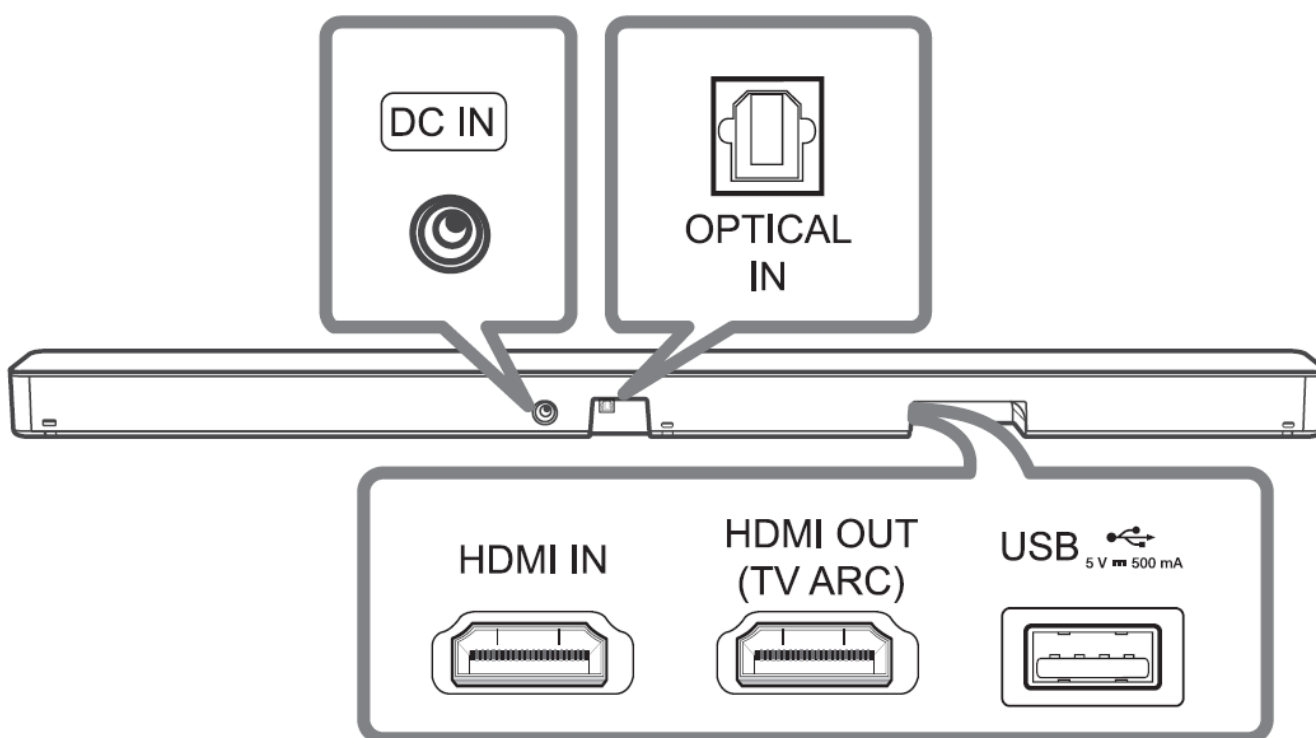

DC IN: Connect to the AC adapter.

OPTICAL IN: Connect t o an optical device.

HDMI IN: Connect t o de vice with HDMI OUT .

HDMI OUT: (TV ARC) Connect to a TV.

USB Port: Connect t o a USB device.

Make sure to properly align and connect the optical cable; improper alignment may cause damage to the jack.

Subwoofer Connection

Place the wireless subwoofer near the sound bar and follow steps below.

1. Connect the power cord of the sound bar and the wireless subwoofer to the outlet.

2. Turn on the sound bar.

- The sound bar and wireless subwoofer will be automatically connected. The subwoofer's green LED

 
turns on.

Manual Subwoofer Connection

If the subwoofer does not make sound, try to connect manually.

1. Press PAIRING on the rear of the wireless subwoofer.
 - The green LED on the rear of the wireless subwoofer blinks quickly. (If the green LED does not blink, press and hold the PAIRING.)
2. Turn on the sound bar.
 - Pairing is completed. The green LED on the rear of the wireless subwoofer turns on.

Keep the sound bar and the subwoofer away from the device (ex. wireless router, microwave oven, etc.) over 1 m to prevent wireless interference.

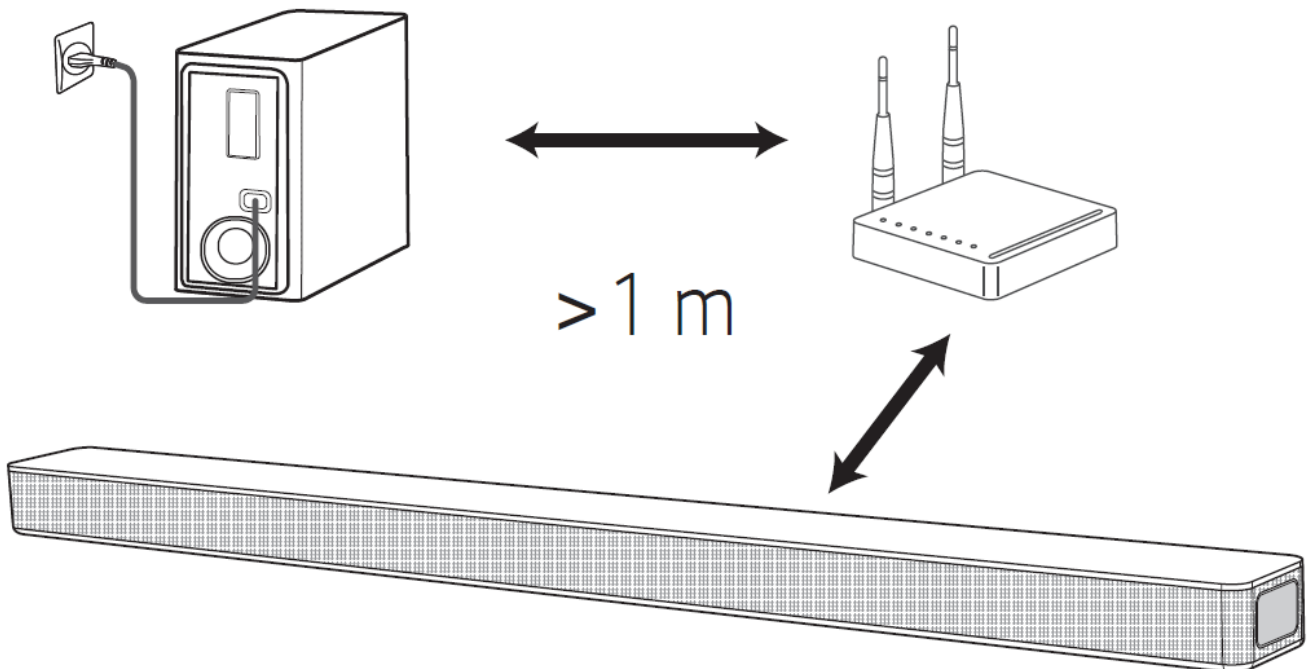


TV Connection

Connect the sound bar and TV using Optical () or HDMI ARC ().


Optical Connection

 - Connect the sound bar to the TV using Optical cable.
- Set up [External Speaker (Optical)] on your TV

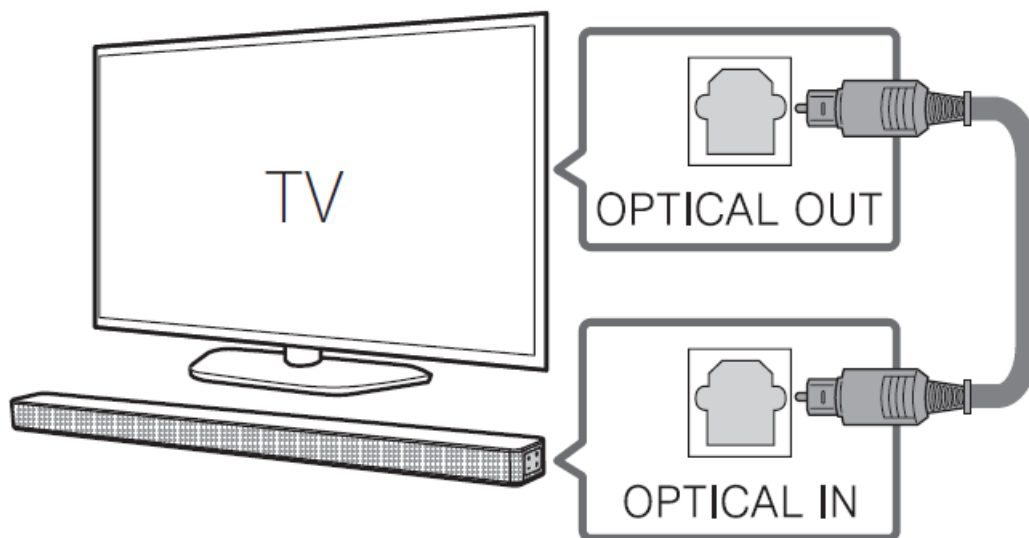

HDMI (ARC) Connection

 
- Connect the sound bar to the TV using HDMI cable.
- Set up [External Speaker (HDMI ARC)] on your TV setting menu.

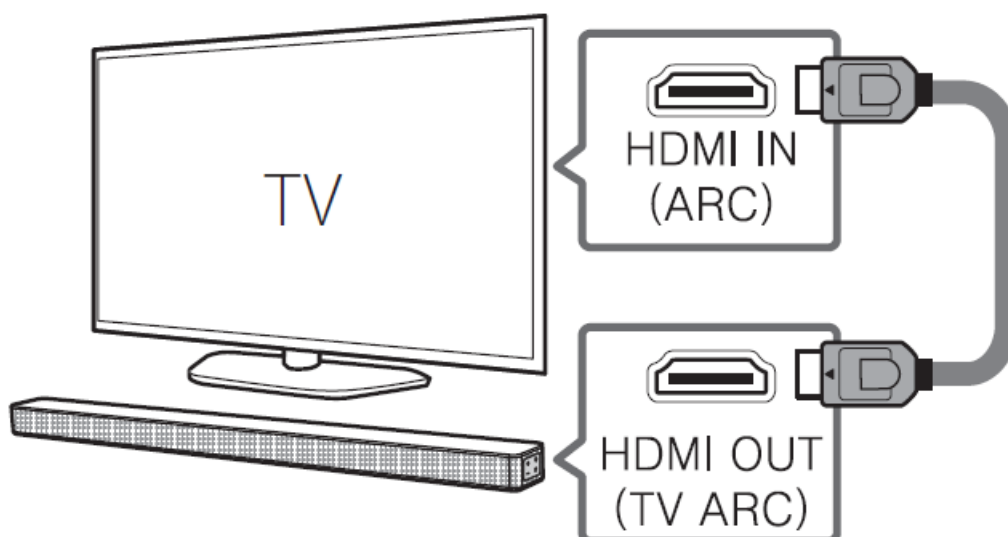

- HDMI connection is unavailable if your TV does not support HDMI ARC.
- If this unit is connected by OPTICAL and ARC at the same time, the ARC signal has a higher priority.


Additional Device Connection

 1. Connect to the external device like as follow.

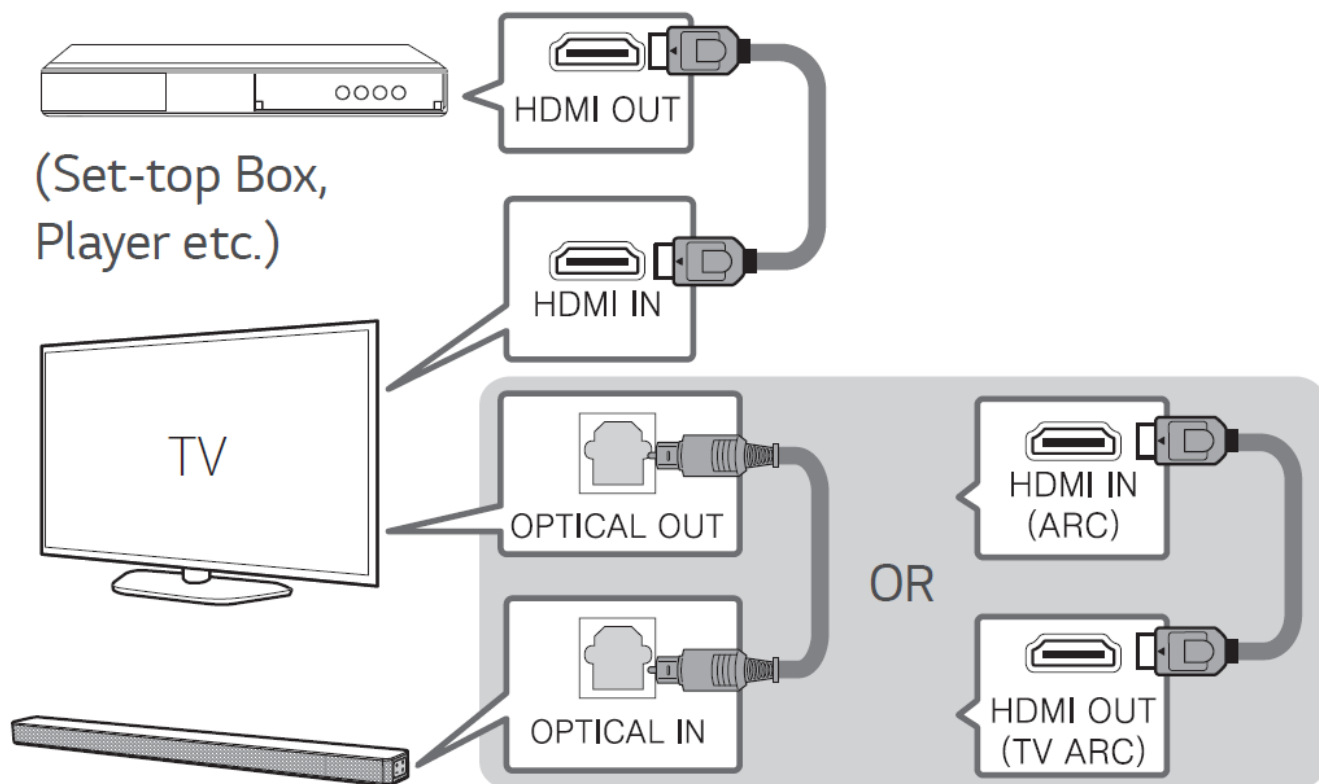


2. Set the input source by pressing F repeatedly.

 Remote control

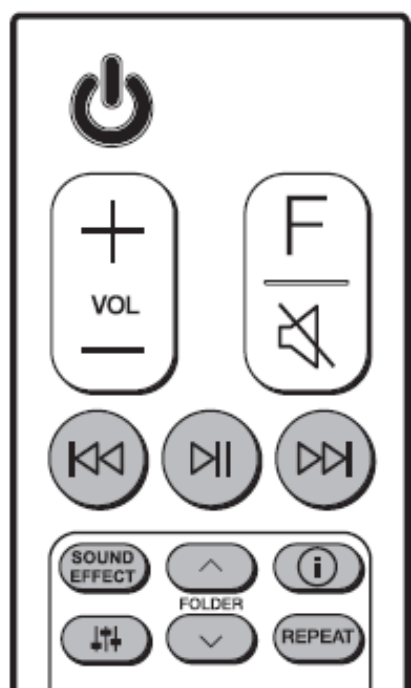

Replacement of Battery

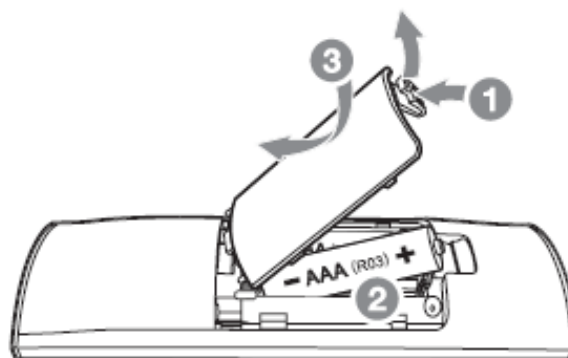 

Additional Information

Specification

Power consumption	Refer to the main label.
AC adapter	<ul style="list-style-type: none"> • Model : DA-50F25 • Manufacturer : Asian Power Devices Inc. • Input : 100 – 240 V ~ 50 – 60 Hz • Output : 25 V 0 2 A
Dimensions (W x H x D)	Approx. 890.0 mm X 57.0 mm X 85.0 mm With foot
Bus Power Supply (USB)	5 V 0 500 mA
Amplifier (Total RMS Output power)	400 W RMS

Rear Speakers Ready: Ready for surround sound with Rear Speakers Kit sold separately. (SPK8-S)

OPEN SOURCE SOFTWARE NOTICE INFORMATION





To obtain the source code under GPL, LGPL, MPL, and other open source licenses, that is contained in this product, please visit <http://opensource.lge.com>
In addition to the source code, all referred license terms, warranty disclaimers and copyright notices are available for download.

LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping, and handling) upon email request to opensource@lge.com







This offer is valid for a period of three years after our last shipment of this product. This offer is valid to anyone in receipt of this information.



Documents / Resources

	LG Wireless Sound Bar [pdf] Instruction Manual Wireless Sound Bar, SN5Y
	LG Wireless Sound Bar [pdf] User Manual Wireless Sound Bar, SL4Y
	LG Wireless Sound Bar [pdf] Owner's Manual Wireless Sound Bar, SL5Y
	LG Wireless Sound Bar [pdf] User Manual WIRELESS SOUND BAR

References

-  [LG Open Source](#)
-  [LG Electronics & Home Appliances | Shop Now | LG USA](#)
-  [Global Take-Back Policy | Take-Back & Recycling | LG Global](#)
-  [CeDoc](#)
-  [Consumer & Home Electronics from LG | LG UK](#)
-  [Get Product Help & Support | LG U.K. Support](#)