



RG TIDY-SWEEP Wet Dry Handheld Cordless Mini Vacuum Instruction Manual

[Home](#) » [RG](#) » **RG TIDY-SWEEP Wet Dry Handheld Cordless Mini Vacuum Instruction Manual** 

*RG TIDY-SWEEP Wet Dry Handheld Cordless
Mini Vacuum Instruction Manual*

TIDY-SWEEP

Wet Dry Handheld
Cordless Mini Vacuum

Instruction Manual

*Please read manual carefully
before use.*

 


Distributed by: **Remarkable Goodz**

Contents


- [1 Product Description](#)
- [2 Accessories](#)
- [3 Product Parameters](#)
- [4 Rechargeable](#)
- [5 Use:](#)
- [6 Cleaning and Maintenance:](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)

Product Description

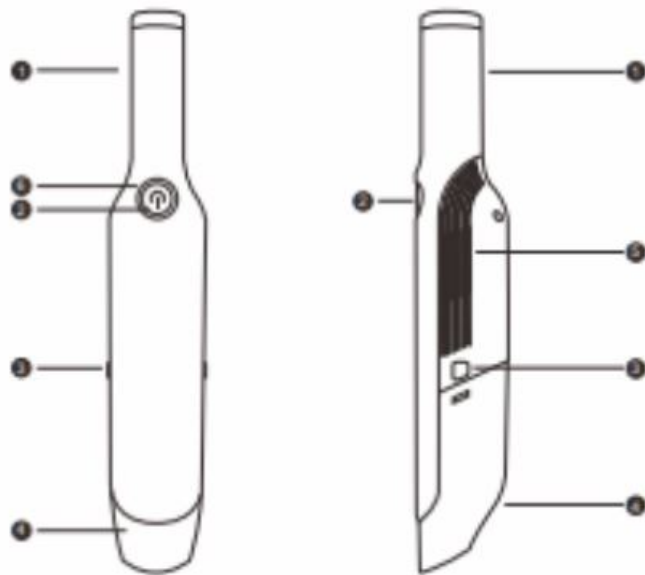


1. Handle
2. On/off button
3. Dirt Bin Release
4. Dirt Bin
5. Air Intake/Output
6. Indicator Light

 Accessories

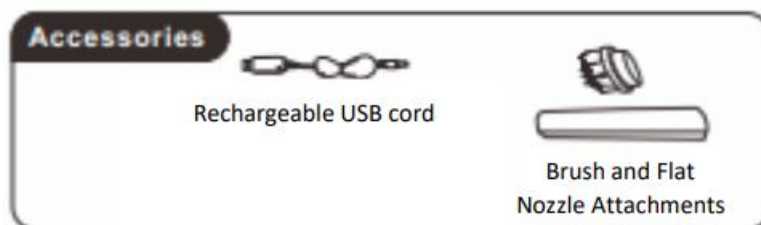

Product Parameters

	Rechargeable	Vehicle-mounted
Working Voltage:	11.1V/7.4V	DC 12V
Line length		4.5M
Discharge Time:	20min	
Battery Capacity:	2000mAh	

 


1. Do not immerse in water or other liquids
2. Do not touch the power cord with wet hands
3. Keep the vacuum and cord away from heated surfaces

4. Do not use if power cord of vacuum appears damaged
5. Do not leave an activated vacuum unattended
6. Do not yank the power cord from the socket
7. Do not block the air input/output while in use
8. Do not use an adapter plug higher than 2A for charging
9. For best performance empty dirt bin when it exceeds 50% capacity
10. Vacuum performance will be affected if the filter is blocked by debris; the dirt bin is too full; or the battery is not charged enough.
11. Keep out of reach of children

Rechargeable

 Fully charge before first use.

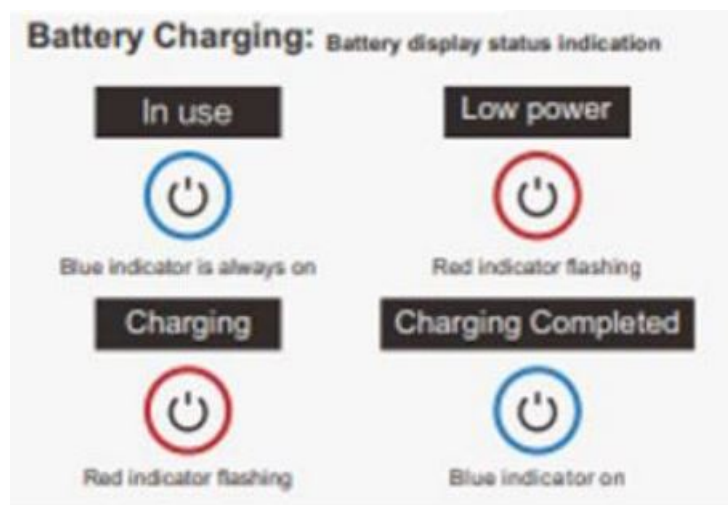

Use:



 
Long press the on/off button to turn on the vacuum.



Align the suction port of the running machine to the surface of the object to be cleaned. Change out attachments to suit the surface or location being cleaned.

Two Gear Technology:

Two gear suction technology is adopted in vacuum cleaner. Press the power switch one time for regular suction. It fits to clean debris, dust, etc. on flat surface. Press the power switch twice for enhanced suction. It is more suitable for cleaning the hair on carpets, dust or dust in hard-to-reach corners.

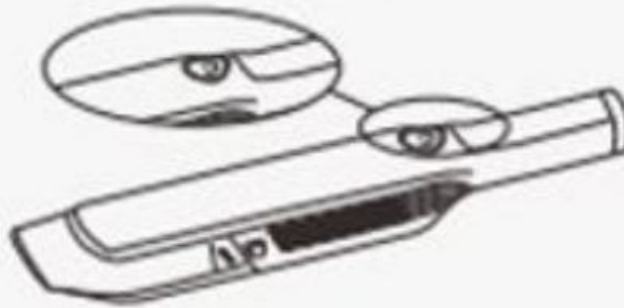

Cleaning and Maintenance:

Please clean up in time, otherwise it will affect the normal use of the machine.



Press the dust bin switch and take off the dust bin.



According to the direction of picture shown, hold the dust bin and take out the filter.



Pour out the trash from the dust bin.



Wash the filter and dust bin, use it after drying.
Please make sure that the filter is completely air-dried.

Documents / Resources



[RG TIDY-SWEEP Wet Dry Handheld Cordless Mini Vacuum](#) [pdf] Instruction Manual
TIDY-SWEEP, Wet Dry Handheld Cordless Mini Vacuum