



Air Unit Firmware Update Instructions

[Home](#) » [ST](#) » Air Unit Firmware Update Instructions 

Air Unit Firmware Update



life.augmented

Air Unit Firmware Update

Contents


- [1 Download the STM32Cube programmer from this page](#)
- [2 Instructions for use](#)
- [3 Documents / Resources](#)
- [4 Related Posts](#)

Download the STM32Cube programmer from this page



Download the STM32Cube programmer from this page
Run SetupSTM32CubeProgrammer_win64.exe and continue with all the default options.
Insert the USB.

Instructions for use


Make sure the Air Unit is not connected to power and connect it to your computer via a USB-USB cable (if your Air Unit has a mini-usb port, please connect it using a USB-miniUSB cable instead).

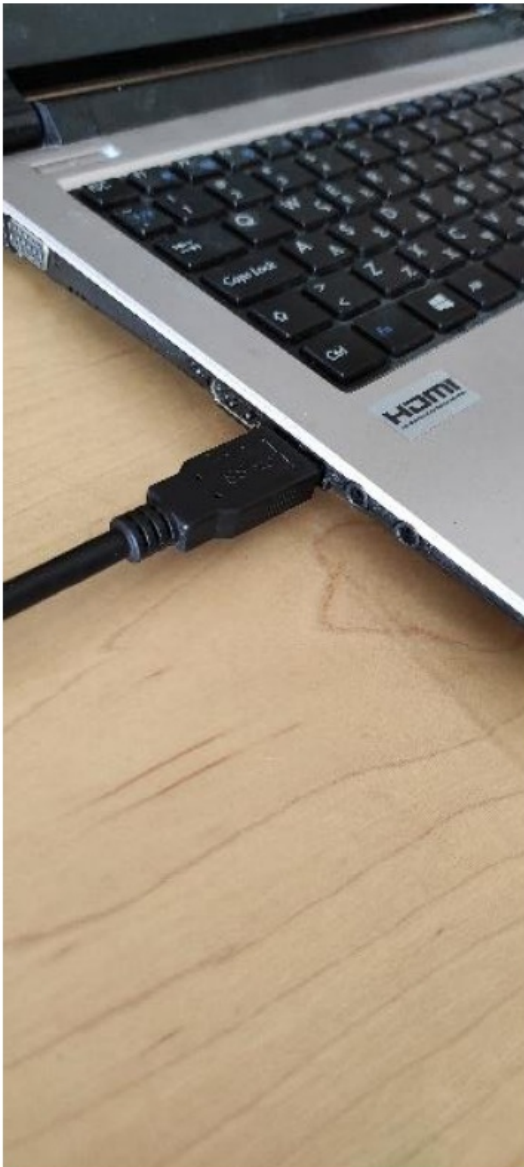


Open STM32CubeProgrammer, it should have an icon on the Desktop Click the blue button left of “Connect” and select USB

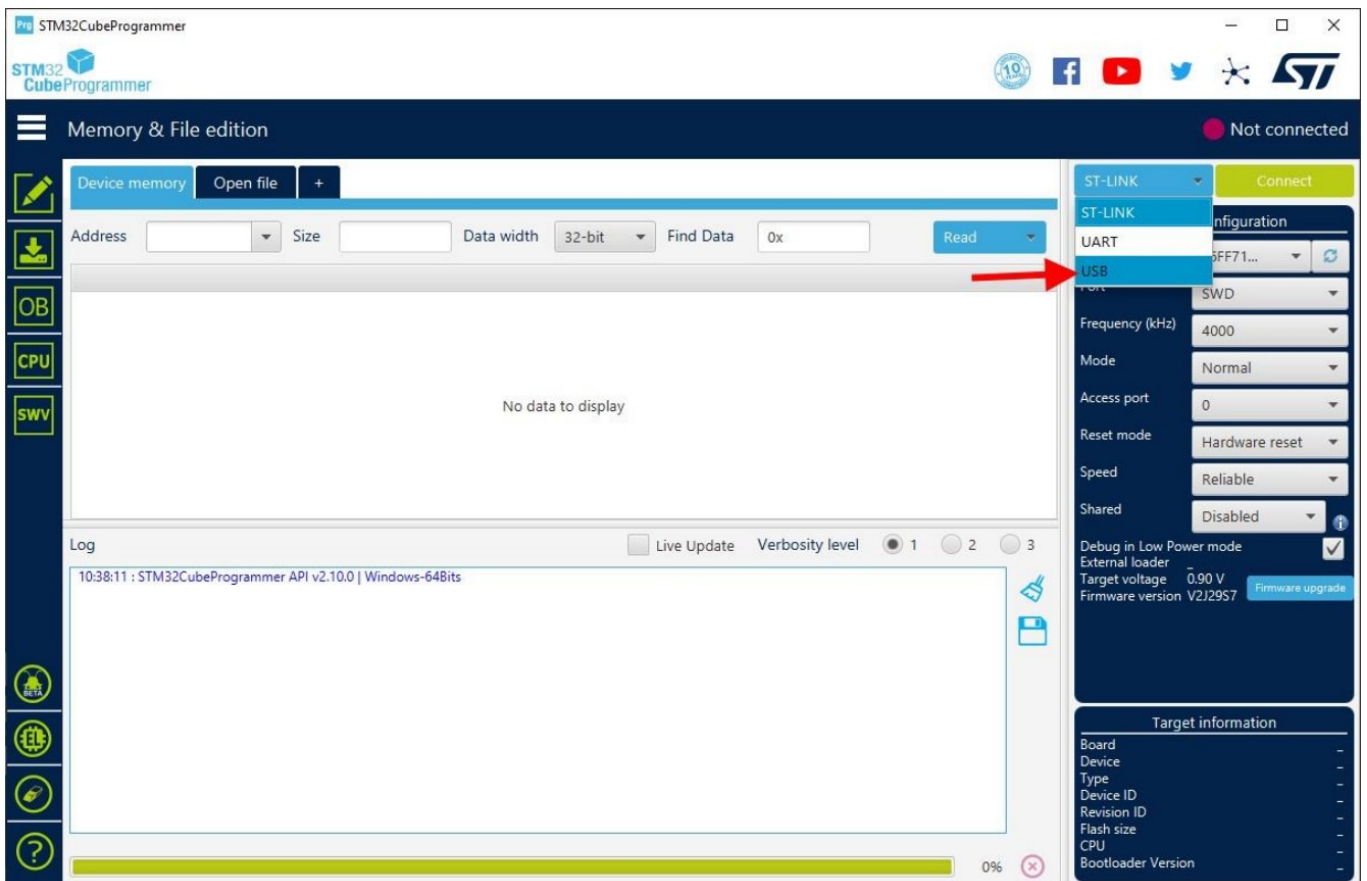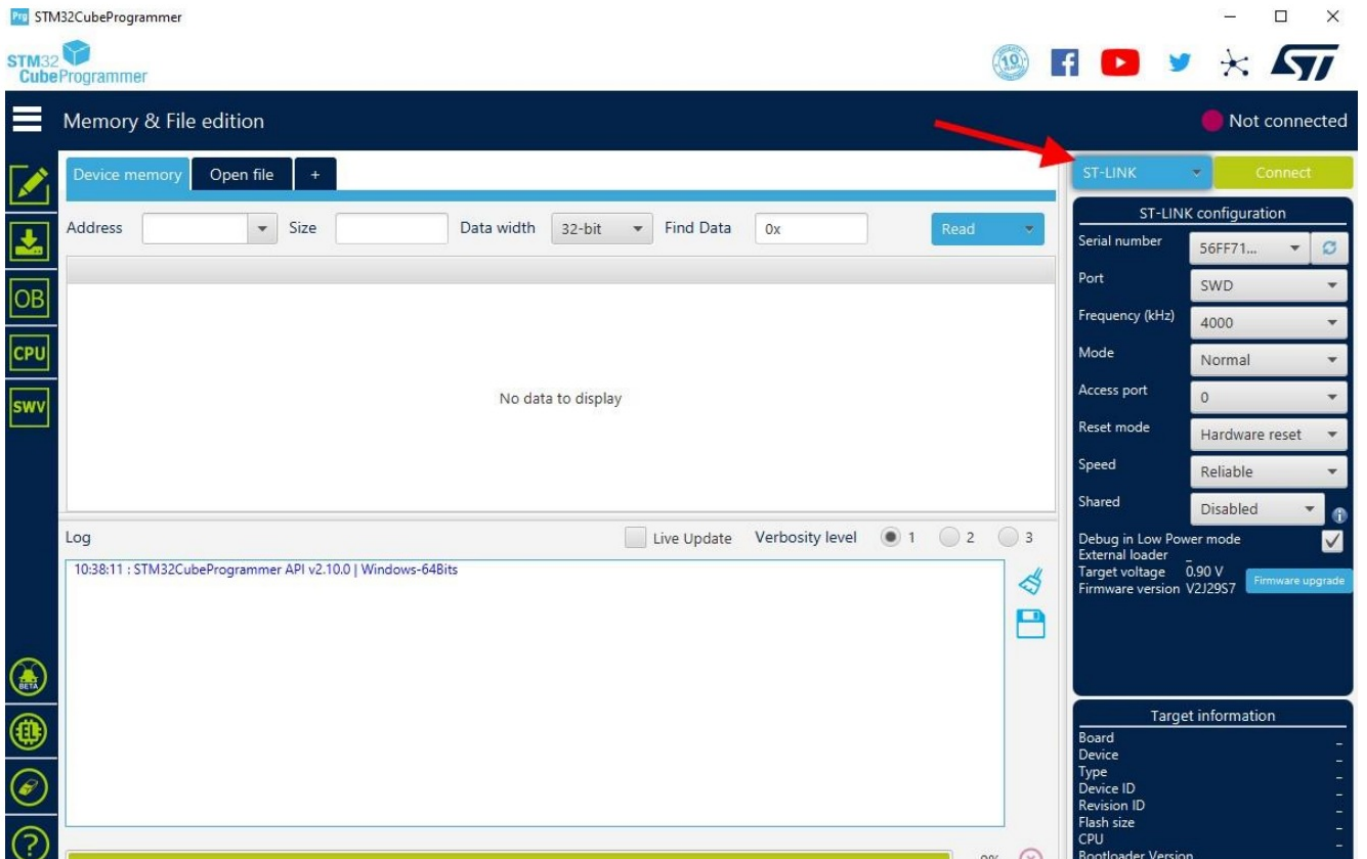


There should be one device, USB1

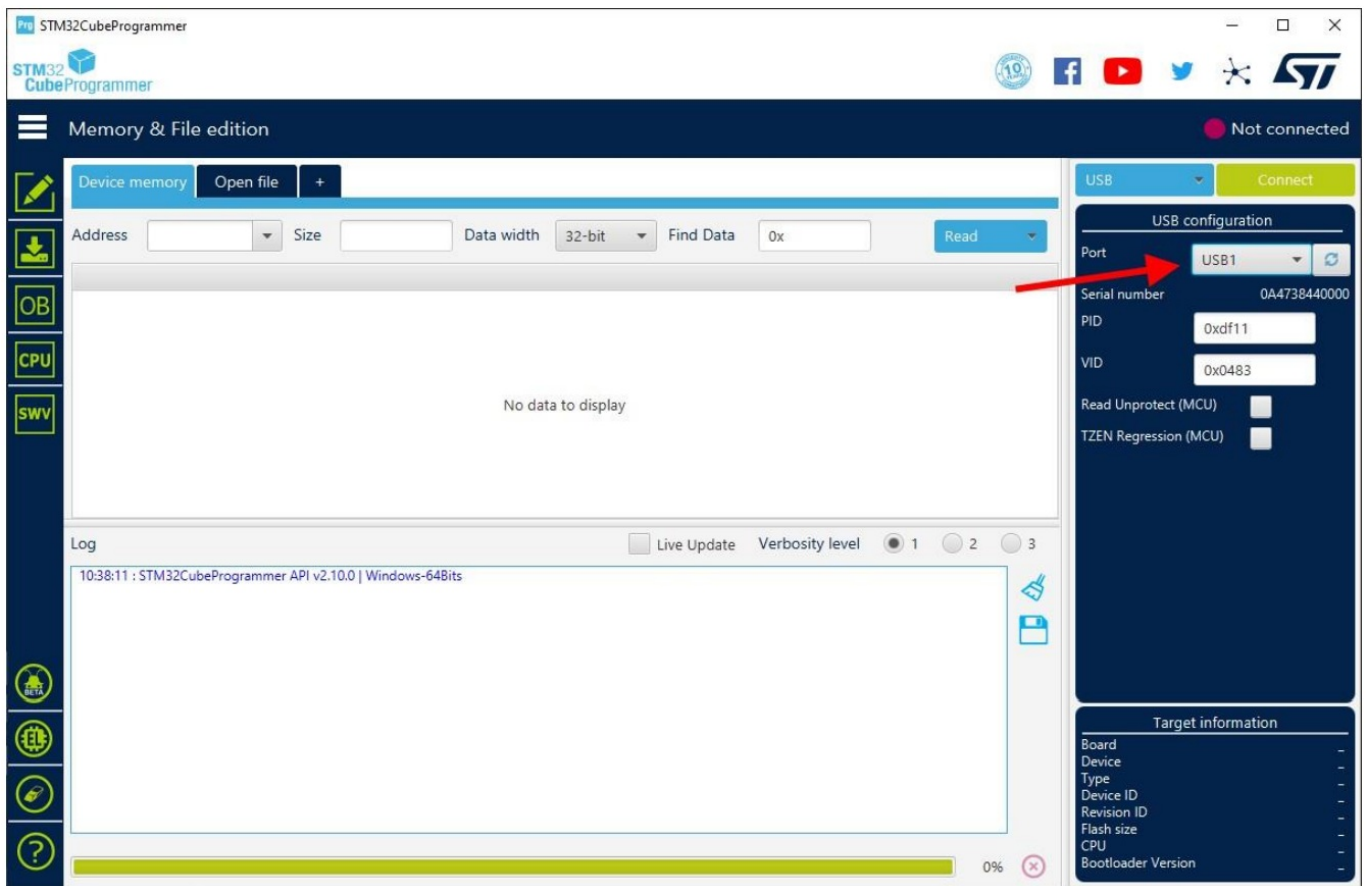


Click “Connect”, it should connect and display the contents of the controller Click “Open File” (screen 9) and select the .hex file

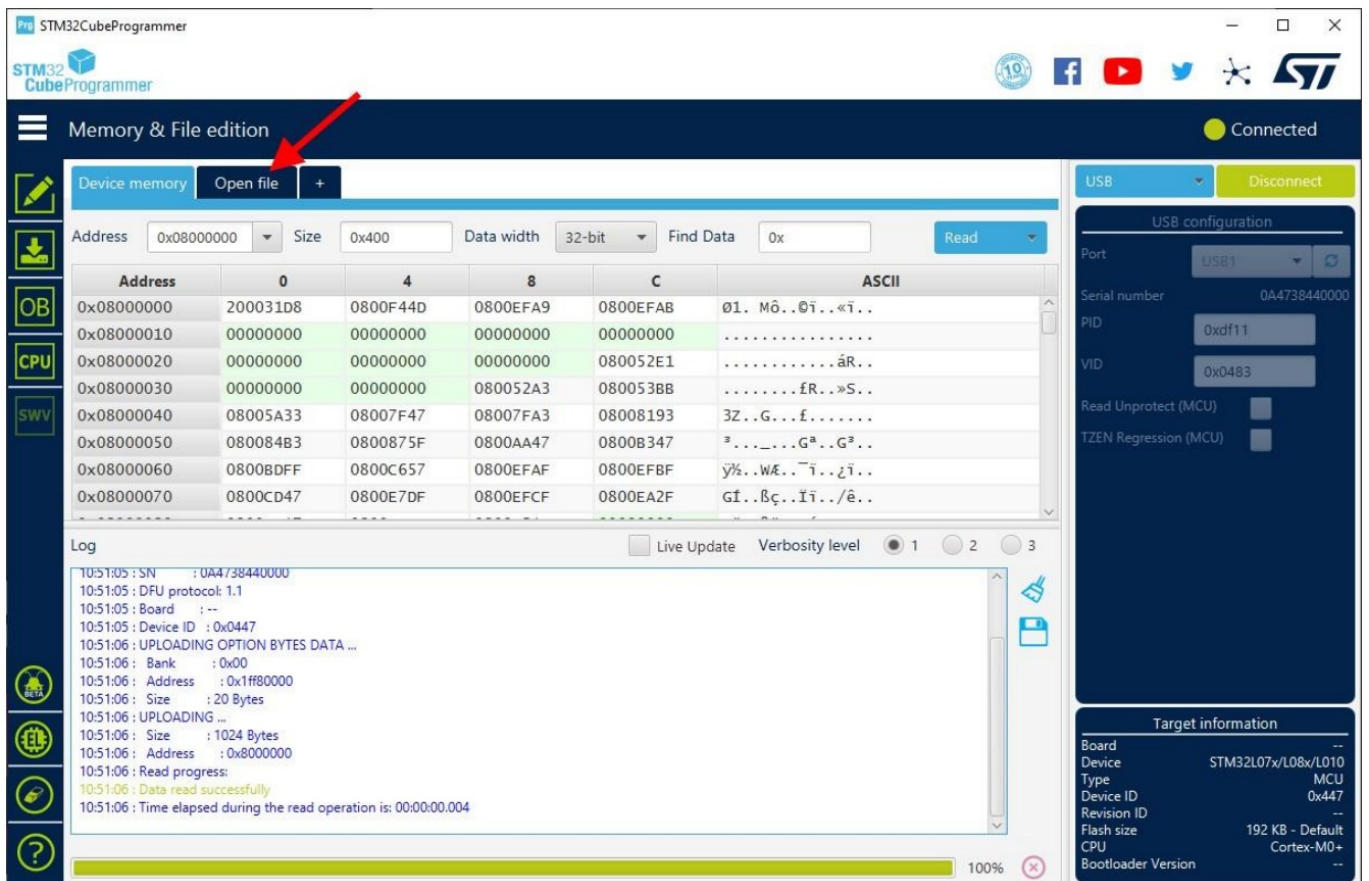

The .hex should be loaded now and you can press “Download” (screen 10)

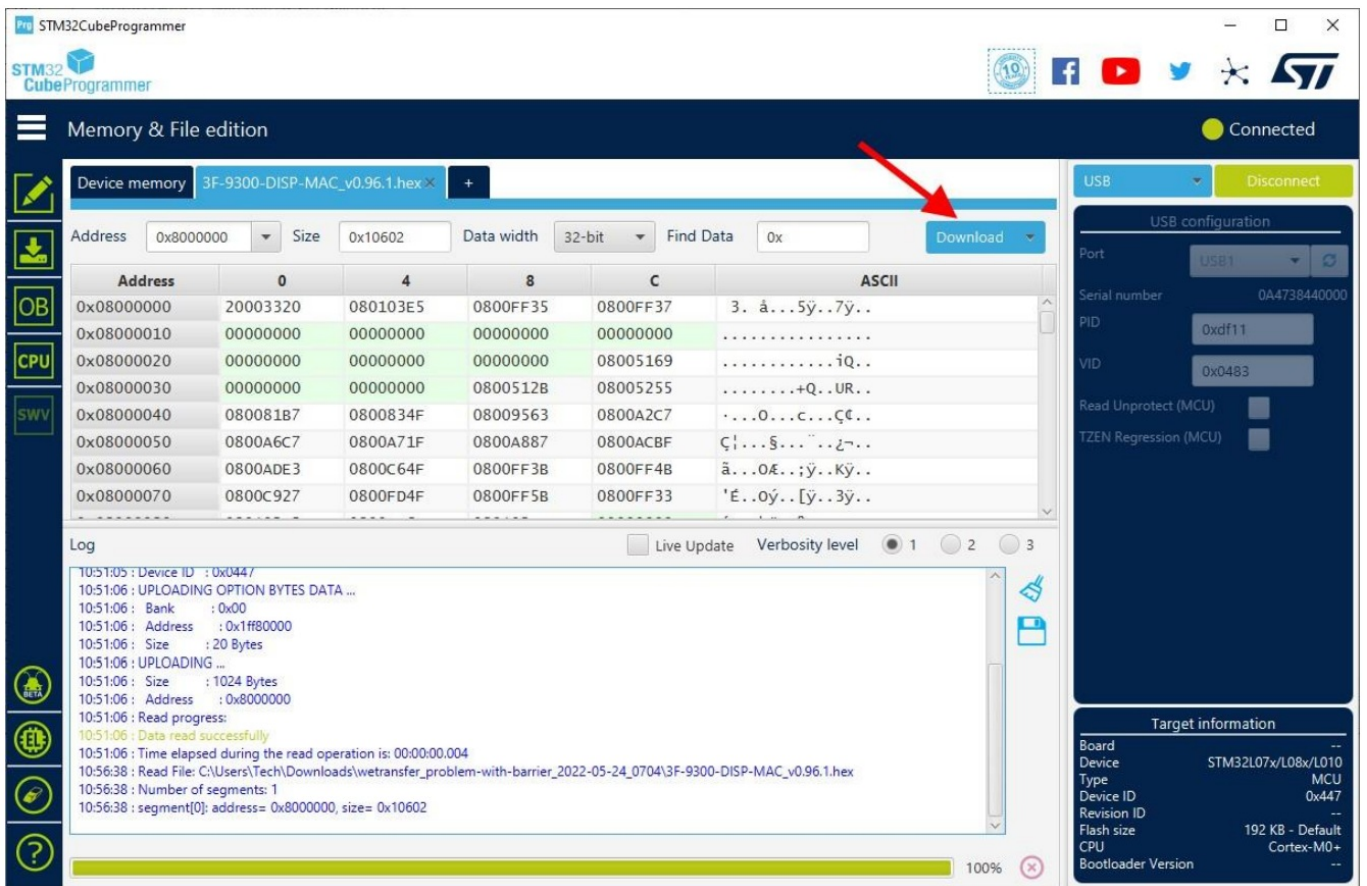


It should only take a few seconds to complete

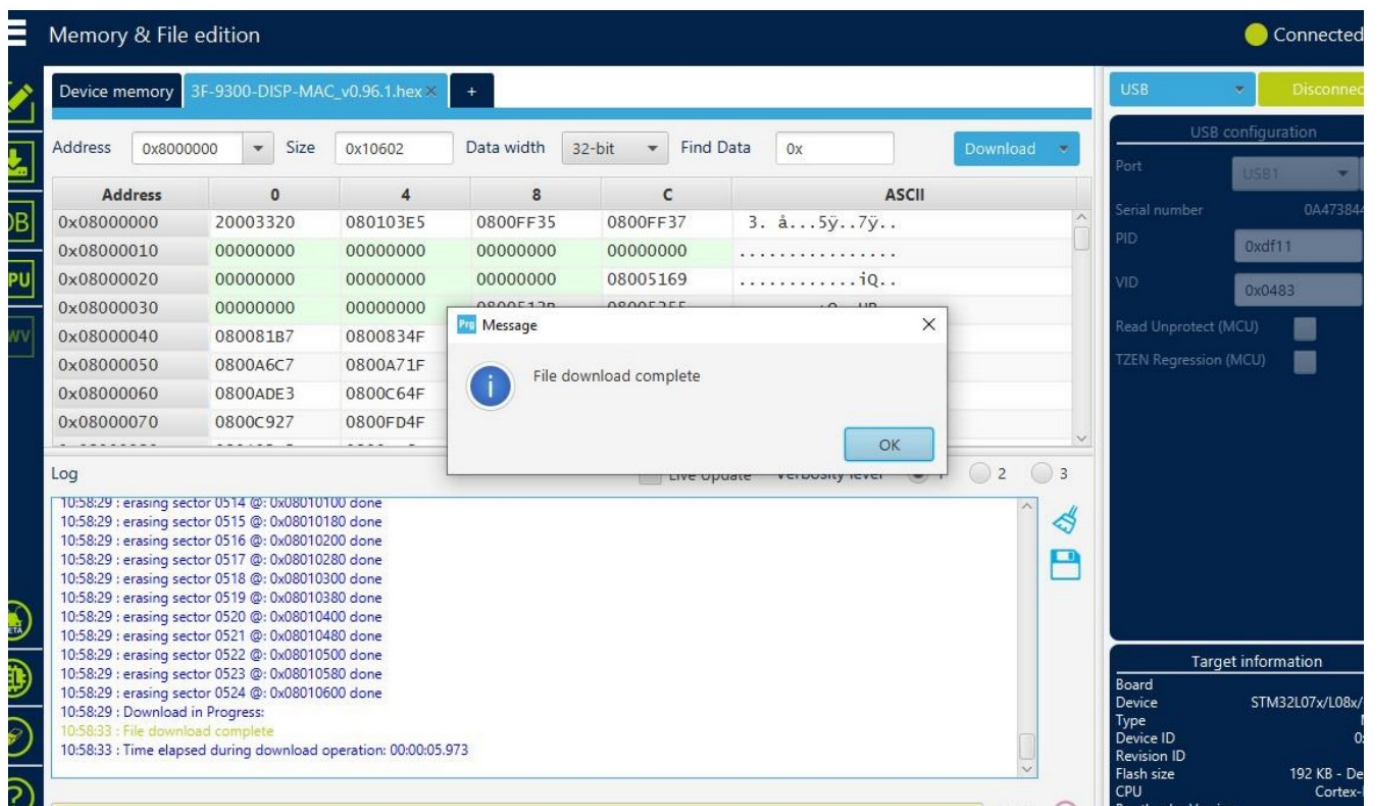

Remove the USB and connect a MOBY device. Navigate to the menu -> system information to validate the AirUnit's firmware version.

Documents / Resources

<div><div><div>ST AIR UNIT FIRMWARE UPDATE INSTRUCTIONS</div><div>For use with the ST Air Unit (Firmware 1.0.0.0)</div><div>© 2018 STMicroelectronics. All rights reserved. STMicroelectronics, the STMicroelectronics logo and other marks contained herein are trademarks of STMicroelectronics.</div><div>ST00000000</div></div><div><div><div>ST AIR UNIT FIRMWARE UPDATE INSTRUCTIONS</div><div>For use with the ST Air Unit (Firmware 1.0.0.0)</div><div>© 2018 STMicroelectronics. All rights reserved. STMicroelectronics, the STMicroelectronics logo and other marks contained herein are trademarks of STMicroelectronics.</div><div>ST00000000</div></div><div></div></div></div>	<div><div><div>ST Air Unit Firmware Update [pdf] Instructions</div><div>Air Unit Firmware Update, Air Unit Firmware, Air Unit</div></div></div>
--	---