



# UM3057 Steval IFP045V1 Industrial Digital Output Expansion Board User Manual

[Home](#) » [ST](#) » UM3057 Steval IFP045V1 Industrial Digital Output Expansion Board User Manual 

## UM3057 Steval IFP045V1 Industrial Digital Output Expansion Board User Manual



## Contents

- 1 Introduction
- 2 Getting started
  - 2.1 Overview
  - 2.2 Hardware requirements
  - 2.3 System requirements
  - 2.4 Board setup
  - 2.5 Multiple board configuration
- 3 Schematic diagrams
- 4 Bill of materials
- 5 References
- 6 Board versions
- 7 Regulatory compliance information
- 8 Revision history
- 9 IMPORTANT NOTICE – READ CAREFULLY
- 10 Documents / Resources
  - 10.1 References
- 11 Related Posts

## Introduction

The STEVAL-IFP045V1 is an industrial digital output expansion board. It provides a powerful and flexible environment for the evaluation of the driving and diagnostic capabilities of the IPS1025HQ single high-side smart power solid state relay, in a digital output module connected to 2.5 A industrial loads.

The STEVAL-IFP045V1 can interface with the microcontroller on the STM32 Nucleo via 5 kV optocouplers driven by GPIO pins and Arduino R3 connectors.

The expansion board can be connected to either a NUCLEO-F401RE or a NUCLEO-G431RB development board.

It is also possible to evaluate a system composed of up to four stacked STEVAL-IFP045V1 expansion boards. As an example, a system with four STEVAL-IFP045V1 expansion boards allows you to evaluate a quad channel digital output module.

### Figure 1. STEVAL-IFP045V1 expansion board



## Getting started

### Overview

The STEVAL-IFP045V1 embeds the IPS1025HQ intelligent power switch (IPS), featuring overcurrent and over temperature protection for safe output load control.

The board is designed to meet application requirements in terms of galvanic isolation between user and power interfaces. This requirement is satisfied by an optical isolation implemented through three optocouplers (ISO1, ISO2, and ISO3) for signal forward to the device and FLT pins for feedback diagnostic signals.

The expansion board features:

- Based on the IPS1025HQ single high-side switch, which features:
  - Operating range up to 60 V
  - Low-power dissipation ( $R_{ON(MAX)} = 25\text{ m}\Omega$ )
  - Fast decay for inductive loads
  - Smart driving of capacitive loads
  - Under voltage lock-out
  - Overload and over temperature protections
  - QFN48L 8×6 mm package
- Application board operating range: 8 to 33 V/0 to 2.5 A


- Extended voltage operating range (J3 open) up to 60 V
- Green LED for output on/off status
- Red LEDs for overload and overheating diagnostics
- 5 kV galvanic isolation
- Supply rail reverse polarity protection
- Compatible with STM32 Nucleo development boards
- Equipped with Arduino UNO R3 connectors
- CE certified
- RoHS and China RoHS compliant
- Not FCC approved for resale

### Digital section

The digital section is associated with the STM32 interface and digital supply voltage to and from the STEVALIFP045V1 expansion board.

**Figure 2. STEVAL-IFP045V1 expansion board: digital interface section**

Dotted green line indicates the whole digital interface section. Pink rectangles identify Arduino UNO R3 connectors

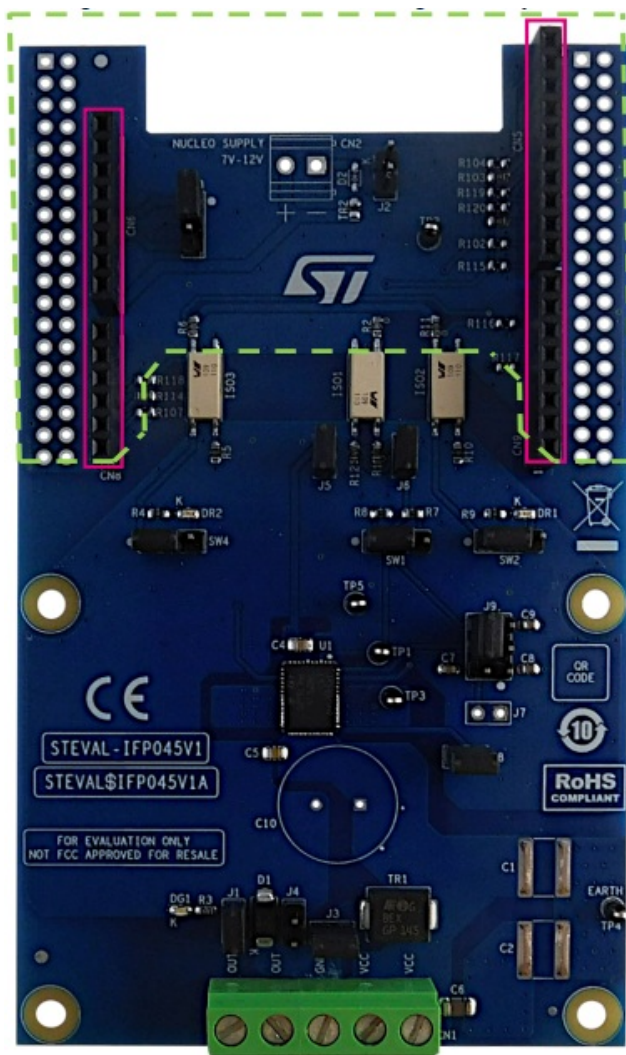

The four Arduino UNO R3 connectors:

- allow expansion board communication with the STM32 Nucleo development board microcontroller accessing

STM32 peripheral and GPIO resources;

- provide digital supply voltage between the STM32 Nucleo development board and the STEVAL-IFP045V1 expansion board, in either direction.

Normally, the STM32 Nucleo development board supplies the expansion board by a 3v3 or 5v0 generated by the USB. You can select the preferred voltage on the expansion board via SW3 (3v3 closing pins 1-2; 5v0 closing pins 2-3).

Alternatively, it is possible to supply the STM32 Nucleo development board by the expansion board. In this case, an external supply voltage (7-12 V) should be connected to CN2 connector (not mounted by default) on the expansion board and the ground loop should be closed by mounting D2 (enabling the reverse polarity protection) or by closing J2 (without reverse polarity).


**To supply the VIN voltage rail, it is necessary to:**

- close jumper JP5 between pins 2 and 3 and open jumper JP1 on the NUCLEO-F401RE;
- open jumper JP5 between pins 1 and 2 and close jumper JP5 between pins 3 and 4 on the NUCLEOG431RB.

### Power section

The power section involves the power supply voltage (CN1, pins 4 and 5 for VCC, pin 3 for GND), load connection (a load can be connected between pins CN1.1 and CN1.3 or CN1.2, and CN1.3; both output pins are connected to the single output channel as shown in Schematic diagrams) and electromagnetic compatibility (EMC) protection.

**Figure 3. STEVAL-IFP045V1 expansion board: power section components**

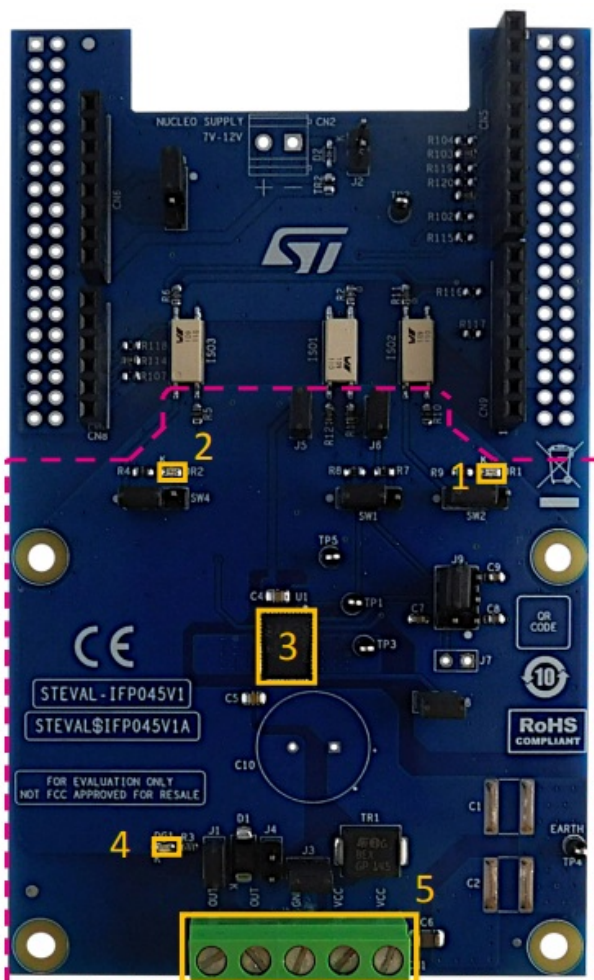



## For EMC:


- The SM15T39CA transient voltage suppressor (TR1), enabled by closing J3, is placed between VCC and GND tracks to protect the IPS1025HQ against surge discharge on the supply rail path up to  $\pm 1$  kV/2  $\Omega$  coupling;
- in common mode surge testing, two single-layer capacitors (C1 and C2 – not included) must be soldered at the predisposed locations;
- the IPS1025HQ output stages do not require additional EMC protections with respect to the IEC61000-4-2, IEC61000-4-3, IEC61000-4-4, IEC61000-4-5, IEC61000-4-8 standards.

## Hardware requirements

The STEVAL-IFP045V1 expansion board is designed to be used with the NUCLEO-F401RE or UCLEOG431RB STM32 Nucleo development boards.

To function correctly, the STEVAL-IFP045V1 must be plugged onto the matching Arduino UNO R3 connector pins on the STM32 Nucleo board as shown below.

**Figure 4. STEVAL-IFP045V1 and STM32 Nucleo stack**

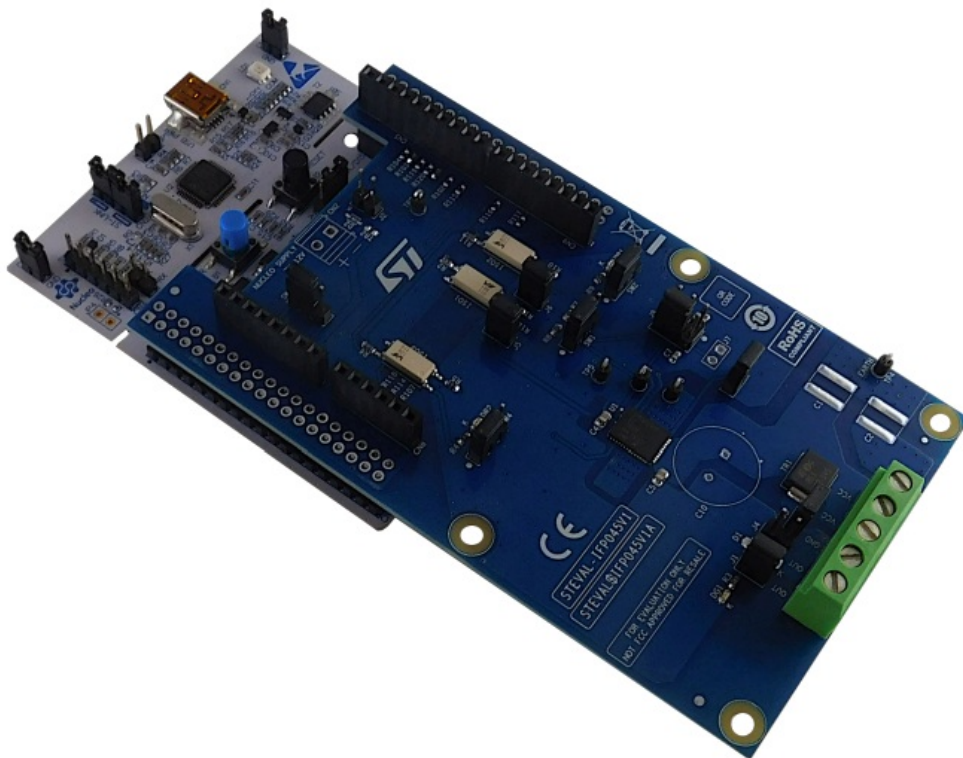

## System requirements

To use the STM32 Nucleo development boards with the STEVAL-IFP045V1 expansion board, you need:

- a Windows PC/laptop (Windows 7 or above)
- a type A to mini-B USB cable to connect the STM32 Nucleo board to the PC when using a NUCLEOF401RE development board
- a type A to micro-B USB cable to connect the STM32 Nucleo board to the PC when using a NUCLEOG431RB development board the X-CUBE-IPS firmware and software package installed on your PC/laptop

## Board setup

**Step 1.** Connect the micro-USB or mini/USB cable to your PC to use the STEVAL-IFP045V1 with NUCLEOF401RE or NUCLEO-G431RB development board

**Step 2.** Download the firmware (.bin) onto the STM32 Nucleo development board microcontroller through STM32 ST-LINK utility, STM32CubeProgrammer and according to your IDE environment as detailed in the table below.

**Table 1. NUCLEO-F401RE development board supported IDEs – bin files**

NUCLEO-F401RE		
IAR	Keil	STM32CubeIDE
EWARM-OUT05_06-STM32F4xx_Nucleo.bin	MDK-ARM-OUT05_06-STM32F4xx_Nucleo.bin	STM32CubeIDE-OUT05_06-STM32F4xx_Nucleo.bin

**Table 2. NUCLEO-G431RB development board supported IDEs – bin files**

NUCLEO-G431RB		
IAR	Keil	STM32CubeIDE
EWARM-OUT05_06-STM32G4xx_Nucleo.bin	MDK-ARM-OUT05_06-STM32G4xx_Nucleo.bin	STM32CubeIDE-OUT05_06-STM32G4xx_Nucleo.bin

**Step 3.** Connect the IPS1025HQ device supply voltage via CN1 (see Section 1.1.2 Power section).

**Step 4.** Provide the digital supply voltage (see Section 1.1.1 Digital section).

**Step 5.** Connect the load on the output connector (see Section 1.1.2 Power section).

**Step 6.** Reset the example sequence using the black push button.

**Step 7.** Push the STM32 Nucleo blue button to select the example provided in the firmware package.

#### Multiple board configuration

It is also possible to evaluate a four channel digital output module by stacking four STEVAL-IFP045V1 with shared or independent supply rail and independent loads.

In this case, the four expansion boards (board 0, 1, 2, 3 as shown in the table below) must be properly configured: for board 1, 2 and 3, it is necessary to unsolder three resistors for each board from the default position and solder them back in the alternate positions according to the following table.

**Table 3. Configuration of a stack of four expansion boards**

Board no.	IN1	FLT1	FLT2
Board 0	R101	R103	R114
Board 1	R102	R104	R117
Board 2	R115	R116	R107
Board 3	R120	R119	R118

## Schematic diagrams

Figure 5. STEVAL-IFP045V1 circuit schematic (1 of 2)


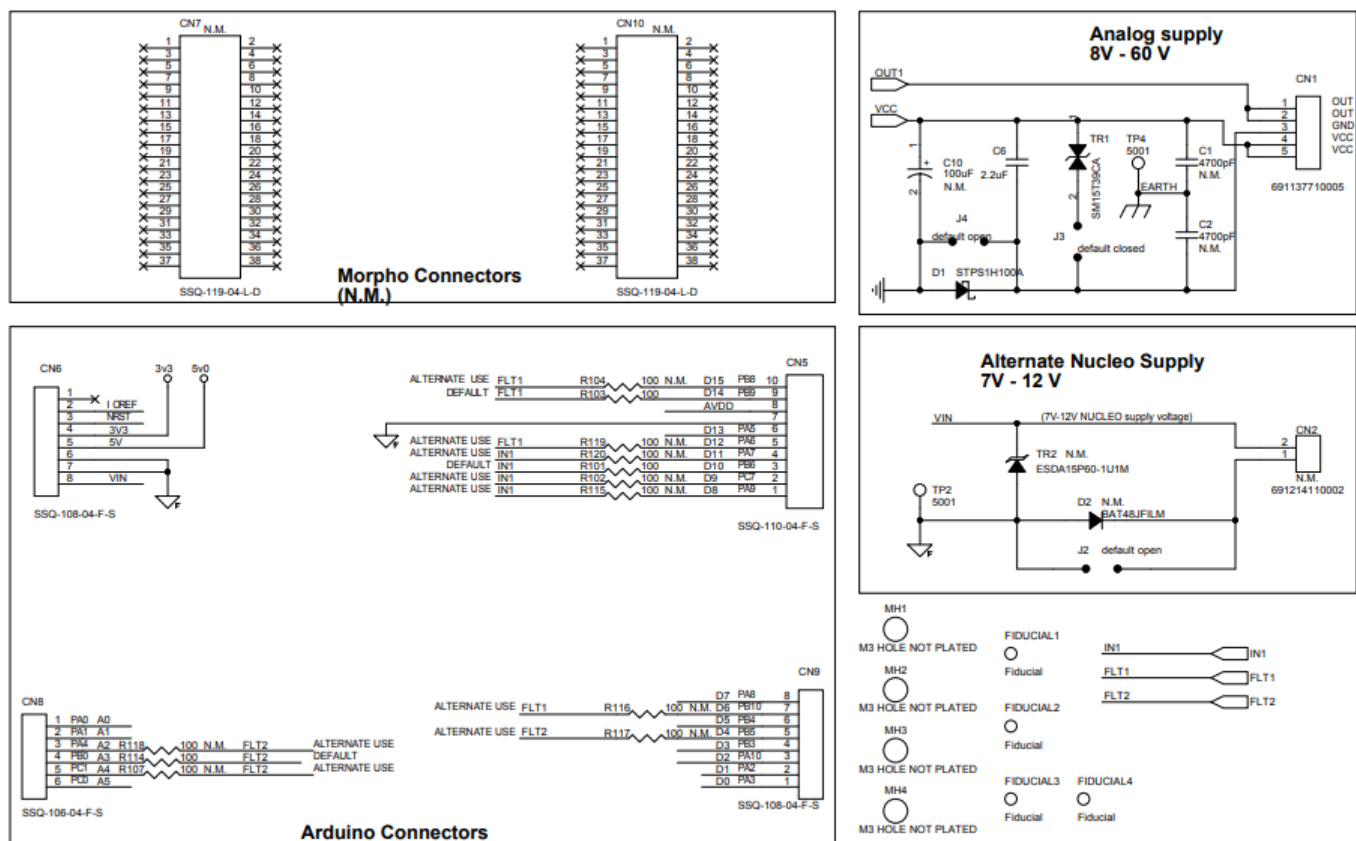


Figure 6. STEVAL-IFP045V1 circuit schematic (2 of 2)



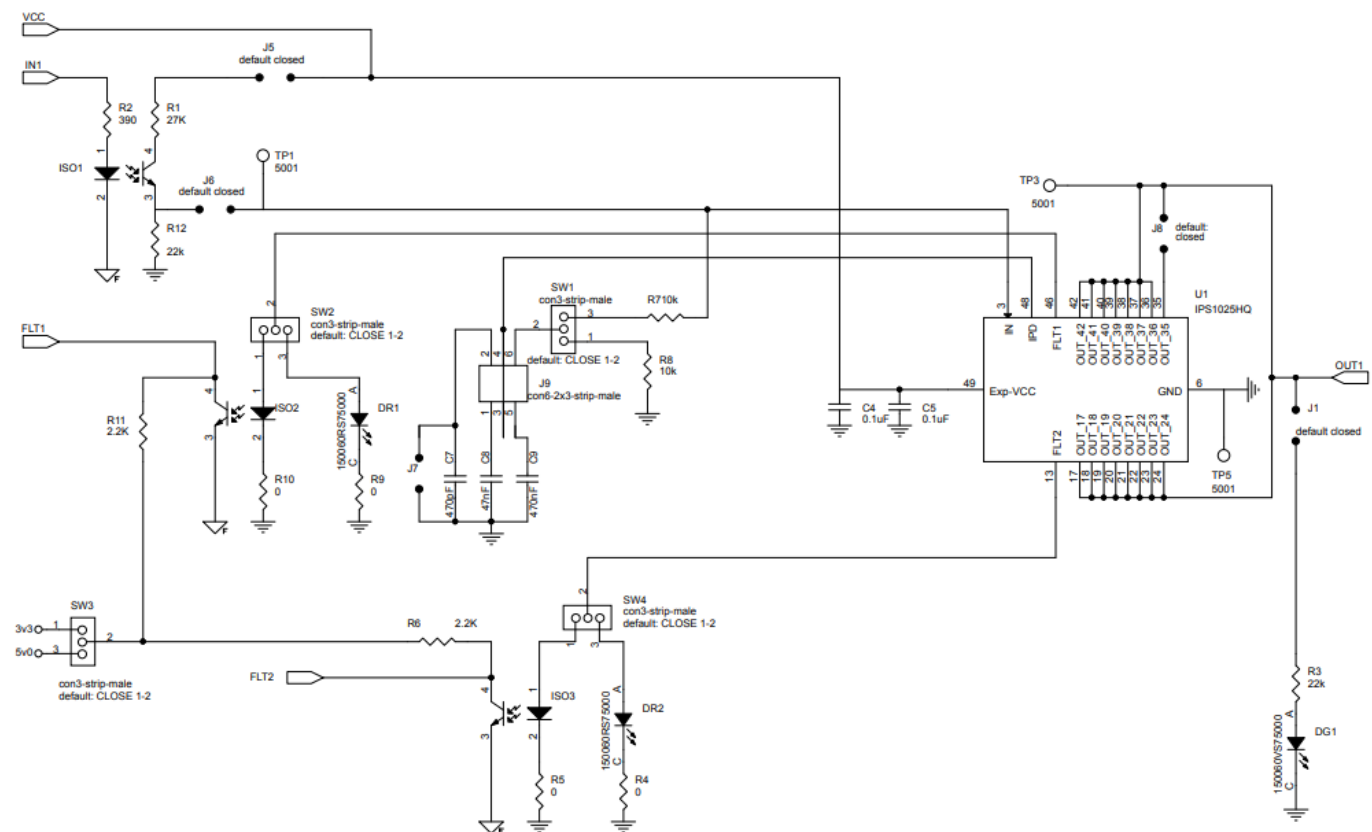

## Bill of materials

Item	Q.ty	Ref.	Part/value	Description	Manufacturer	Order code
1	0	C1 C2	4700pF 1825 (4564 Metric) 3000V (3kV) 10%	CAP CER 47 00PF 3KV X7 R 1825 (not mounted)	Vishay Vitramon	V1825Y472KXHATHV
2	2	C4 C5	0.1uF 0805 (2012 Metric) 100V 10%	CAP CER 0.1 UF 100V X7R 0805	Würth Elektronik	885012207128
3	1	C6	2.2uF 1206 (3216 Metric) 100V 10%	CAP CER 2.2 UF 100V X7R 1206	AVX Corporation	12061C225KAT2A

4		C7	470pF 0603 (1608 Metric) 50V 5%	CAP CER 47 0PF 50V C0G/NP0 06 03	Würth Electronics Inc.	885012006061
5	1	C8	47nF 0603 (1608 Metric) 50V 10%	CAP CER 0.0 47UF 50V X7 R 0603	Murata Electronics North America	GCM188R71H473KA55D
6	1	C9	470nF 0603 (1608 Metric) 25V 10%	CAP CER 0.4 7UF 25V X7R 0603	Würth Electronics Inc.	885012206075
7	0	C10	100uF Radial , Can 100V 2 0%	CAP 100 UF 20% 100 V (not mounted)	Würth Elektronik	860130878011
8	1	CN1	69113771000 5	TERM BLK 5 POS SIDE E NTRY 5MM PCB	Würth Elektronik	691137710005
9	0	CN2	69121411000 2 7.4X7 pitch 3. 5	TERM BLK 2 POS SIDE E NT 3.5MM PCB (not mounted)	Würth Electronics Inc.	691214110002
10	1	CN5	TH 2.54mm	10 ways, 1 row	Samtec Inc. 4 UCONN	ESQ-110-14-T-S 17896
11	2	CN6 CN9	TH 2.54mm	8 ways, 1 row	Samtec Inc. 4 UCONN	ESQ-108-14-T-S 15782

12	0	CN7 CN10	–	CONN RCPT 38POS 0.1 G OLD PCB (no t mounted)	–	–
13	1	CN8	TH 2.54mm	6 ways, 1 row	Samtec Inc. 4 UConn	ESQ-106-04-T-S 15781
14	1	D1	STPS1H100A , SMA	100 V, 1 A power Schott ky rectifier	ST	<a href="#">STPS1H100A</a>
15	0	D2	BAT48JFILM, SOD323	40 V, 350 mA axial general purpose sign al Schottky di ode (not mou nted)	ST	<a href="#">BAT48JFILM</a>
16	1	DG1	150060GS75 00 0 0603 (1608 Metric) 20mA	LED GREEN CLEAR 0603 SMD	Würth Electro nics Inc.	150060GS75000
17	2	DR1 DR2	150060RS750 0 0 0603 (1608 Metric) 20mA	LED RED CL EAR 0603 S MD	Würth Electro nics Inc.	<b>150060RS75000</b>
18	3	ISO1 ISO2 IS O3	14010914600 0 LSOP04	OPTOISO 5K V TRANSIST OR	Würth Electro nics Inc.	<b>140109146000</b>
19	7	J1 J2 J3 J4 J5 J6 J8	JUMPER-con 2- strip-male TH 2.54mm	JUMPER- CO NN HEADER .100 STR 2P OS	Würth Electro nics Inc.	<b>61300211121</b>

20	0	J7	JUMPER-con 2- strip-male	JUMPER- CO NN HEADER .100 STR 2P OS (not mounted)	–	–
21	1	J9	con6-2×3-stri p- male	CONN HEAD ER .100 DUA L STR 6POS	Würth Electro nics Inc.	61300621121
22	1	R1	27K 0603 (16 08 Metric) 0.1W, 1/10W 1%	RES SMD 27 K OHM 1% 1/ 10W 0603	Yageo	RC0603FR-0727KL
23	1	R2	390 0603 (16 08 Metric) 0.1W, 1/10W 1%	RES SMD 39 0 OHM 1% 1/1 0W 0603	Yageo	RC0603FR-07390RL
24	2	R3 R12	22k 0603 (16 08 Metric) 0.1W, 1/10W 1%	RES SMD 22 K OHM 1% 1/ 10W0603	Yageo	RC0603FR-0722KL
25	4	R4 R5 R9 R1 0	0 0603 (1608 Metric) 0.1W, 1/10W Jumper	RES SMD 0 OHM JUMPE R 1/10W 060 3	Panasonic El ectronic Com ponents	ERJ-3GEY0R00V
26	2	R6 R11	2.2K 0603 (1608 Metric) 0.1W, 1/10W 1%	RES SMD 2.2 K OHM 1% 1/ 10W 0603	Yageo	RC0603FR-072K2L
26	2	R7 R8	10k 0603 (16 08 Metric) 0.1W, 1/10W 1%	RES SMD 10 K OHM 1% 1/ 10W 0603	Yageo	RC0603FR-0710KL

28	3	R101 R103 R114	100 0603 (1608 Metric) 0.1W, 1/10W 1%	RES SMD 100 OHM 1% 1/10W 0603	Yageo	RC0603FR-07100RP
29	0	R102 R104 R107 R115 R116 R117 R118 R119 R120	100 0603 (1608 Metric) 0.1W, 1/10W 1%	RES SMD 100 OHM 1% 1/10W 0603 (not mounted)	Yageo	RC0603FR-07100RP
30	4	SW1 SW2 SW3 SW4	con3-strip-male TH 2.54mm	CONN HEADER .100 STR 3POS	Wurth Electronics Inc.	61300311121
31	5	TP1 TP2 TP3 TP4 TP5	5001 0.100" Dia x 0.180" L (2.54mm x 4.57mm)	TEST POINT PC MINI .040" D BLACK	Keystone Electronics	5001
32	1	TR1	SM15T39CA, SMC	1500 W, 33.3 V TVS in SMC	ST	<a href="#">SM15T39CA</a>
33	0	TR2	ESDA15P60-1U 1M, QFN-2L	High-power transient voltage suppressor (not mounted)	ST	<a href="#">ESDA15P60-1U1M</a>
34	1	U1	IPS1025HQ QFN48L 8x6 mm	High Side Switch with smart driving for capacitive loads	ST	<a href="#">IPS1025HQ</a>

35	12	N/A	2.54mm	Close Jumper	Würth Electronics Inc.	60900213421
----	----	-----	--------	--------------	------------------------	-------------

## References

Freely available on [www.st.com](http://www.st.com):

1. IPS1025H datasheet
2. UM2864: "Getting started with X-CUBE-OUT5 industrial digital output software for STM32 Nucleo"
3. NUCLEO-F401RE data brief
4. NUCLEO-G431RB data brief

## Board versions

PCB version	Schematic diagrams	Bill of materials
STEVAL\$IFP045V1A (1)	<a href="#">STEVAL\$IFP045V1A schematic diagram</a>	<a href="#">STEVAL\$IFP045V1A bill of material</a>

This code identifies the STEVAL-IFP045V1 evaluation board first version. It is printed on the board PCB.

## Regulatory compliance information

### Notice for US Federal Communication Commission (FCC)

For evaluation only; not FCC approved for resale

FCC NOTICE – This kit is designed to allow:

1. Product developers to evaluate electronic components, circuitry, or software associated with the kit to determine whether to incorporate such items in a finished product and
2. Software developers to write software applications for use with the end product.

This kit is not a finished product and when assembled may not be resold or otherwise marketed unless all required FCC equipment authorizations are first obtained. Operation is subject to the condition that this product not cause harmful interference to licensed radio stations and that this product accept harmful interference. Unless the assembled kit is designed to operate under part 15, part 18 or part 95 of this chapter, the operator of the kit must operate under the authority of an FCC license holder or must secure an experimental authorization under part 5 of this chapter 3.1.2.

### Notice for Innovation, Science and Economic Development Canada (ISED)

For evaluation purposes only. This kit generates, uses, and can radiate radio frequency energy and has not been tested for compliance with the limits of computing devices pursuant to Industry Canada (IC) rules.

### Notice for the European Union

This device is in conformity with the essential requirements of the Directive 2014/30/EU (EMC) and of the



### Notice for the United Kingdom

This device is in compliance with the UK Electromagnetic Compatibility Regulations 2016 (UK S.I. 2016 No. 1091) and with the Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012 (UK S.I. 2012 No. 3032).

### Revision history

**Table 5. Document revision history**

Date	Revision	Changes
29-Aug-2022	1	Initial release.

### IMPORTANT NOTICE – READ CAREFULLY

ST Micro electronics NV and its subsidiaries (“ST”) reserve the right to make changes, corrections, enhancements, modifications, and improvements to ST products and/or to this document at any time without notice. Purchasers should obtain the latest relevant information on ST products before placing orders. ST products are sold pursuant to ST’s terms and conditions of sale in place at the time of order acknowledgment.

Purchasers are solely responsible for the choice, selection, and use of ST products and ST assumes no liability for application assistance or the design of purchasers’ products.

No license, express or implied, to any intellectual property right is granted by ST herein.

Resale of ST products with provisions different from the information set forth herein shall void any warranty granted by ST for such product.

ST and the ST logo are trademarks of ST. For additional information about ST trademarks, refer to

[www.st.com/trademarks](http://www.st.com/trademarks). All other product or service names are the property of their respective owners.

Information in this document supersedes and replaces information previously supplied in any prior versions of this document.












© 2022 ST Micro electronics – All rights reserved.

### Documents / Resources

	<a href="#">ST UM3057 Steval IFP045V1 Industrial Digital Output Expansion Board</a> [pdf] User Manual UM3057, Steval IFP045V1 Industrial Digital Output Expansion Board, UM3057 Steval IFP045V1 Industrial Digital Output Expansion Board
---	---

### References

- [STMicroelectronics: Our technology starts with you](#)
- [STMicroelectronics Trademark List - STMicroelectronics](#)
- [STMicroelectronics: Our technology starts with you](#)
- [BAT48 - 40 V, 350 mA Axial General purpose Signal Schottky Diode - STMicroelectronics](#)

-  [ESDA15P60-1U1M - High-power transient voltage supressor \(TVS\) - STMicroelectronics](#)
-  [IPS1025H - High efficiency, high-side switch with extended diagnostic and smart driving for capacitive loads - STMicroelectronics](#)
-  [NUCLEO-F401RE - STM32 Nucleo-64 development board with STM32F401RE MCU, supports Arduino and ST morpho connectivity - STMicroelectronics](#)
-  [NUCLEO-G431RB - STM32 Nucleo-64 development board with STM32G431RB MCU, supports Arduino and ST morpho connectivity - STMicroelectronics](#)
-  [SM15T39CA - 1500 W, 33.3 V TVS in SMC - STMicroelectronics](#)
-  [STEVAL-IFP045V1 - Industrial digital output expansion board based on IPS1025H in a QFN48L package - STMicroelectronics](#)
-  [STPS1H100 - 100 V, 1 A Power Schottky Rectifier - STMicroelectronics](#)
-  [STSW-LINK004 - STM32 ST-LINK utility \(replaced by STM32CubeProgrammer\) - STMicroelectronics](#)
-  [X-CUBE-IPS - Software expansion for STM32Cube driving industrial digital output based on IPS - STMicroelectronics](#)
-  [STM32CubeProg - STM32CubeProgrammer software for all STM32 - STMicroelectronics](#)
-  [STM32 Nucleo Boards - STMicroelectronics](#)