



# T3 76680 CurlWrap 1.25 Automatic Rotating Curling Iron User Guide

[Home](#) » [T3](#) » T3 76680 CurlWrap 1.25 Automatic Rotating Curling Iron User Guide 

## Contents

- 1 T3 76680 CurlWrap 1.25 Automatic Rotating Curling Iron
- 2 Product Usage Instructions
- 3 IMPORTANT SAFETY INSTRUCTIONS
- 4 MAINTENANCE INSTRUCTIONS
- 5 OPERATING INSTRUCTIONS
- 6 HOW TO USE YOUR T3 CURLWRAP
- 7 T3 LIMITED WARRANTY TERMS & CONDITIONS
- 8 FCC Compliance Statement
- 9 Documents / Resources
  - 9.1 References



**T3 76680 CurlWrap 1.25 Automatic Rotating Curling Iron**



### Specifications:

- Model Number: 2345678
- Color: Black
- Material: Plastic
- Dimensions: 10 x 5 x 3 inches
- Weight: 1.5 lbs

### Product Usage Instructions

#### Assembly

Follow the provided assembly instructions to put together the different components of the product.

#### Power On

Connect the product to a power source and press the power button to turn it on.

#### Setting Up

Follow the on-screen prompts to set up the product according to your preferences.

#### Usage

Use the product for its intended purpose as described in the user manual. Refer to the user manual for specific functions and features.

### FAQ:

- Q: How do I clean the product?  
A: Use a damp cloth to wipe the surfaces of the product. Avoid using harsh chemicals.
- Q: What do I do if the product malfunctions?  
A: Refer to the troubleshooting section in the user manual or contact customer support for assistance.
- Q: Can I use this product outdoors?

A: This product is designed for indoor use only.

## **IMPORTANT SAFETY INSTRUCTIONS**

### **READ ALL INSTRUCTIONS BEFORE USING**

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

### **KEEP AWAY FROM WATER**

Electricity and water are a dangerous combination and can cause death by electric shock. Do not allow electrical cords to come into contact with water or other liquids.

**ELECTRICAL APPLIANCES ARE ELECTRICALLY LIVE WHEN PLUGGED IN, EVEN IF TURNED OFF.**

### **To reduce the risk of death by electric shock:**

1. Always unplug the appliance immediately after using.
2. Do not use while bathing.
3. Do not place or store the appliance where it can fall or be pulled into a bath tub or sink.
4. Do not place in or drop into water or other liquid.
5. If the appliance falls into water, unplug it immediately. Do not reach into the water.

### **To reduce the risk of burns, electrocution, fire or injury to persons:**

1. An appliance should never be left unattended when plugged in.
2. Close supervision is necessary when this appliance is used on, or near children or individuals with certain disabilities.
3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
4. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped, damaged, or dropped into water. Return the appliance to a service center for examination and repair.
5. Keep the cord away from heated surfaces. Do not wrap the cord around the appliance.
6. Never use while sleeping.
7. Never insert any object into the styling iron.
8. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
9. Do not use an extension cord with this appliance.
10. This styling iron is hot when in use. Do not let eyes and bare skin touch the heated surfaces.
11. Do not place the heated styling iron directly on any surface while it is hot or plugged in.
12. Do not use if the plug is loose in the outlet, as there may be risk of fire, electric shock, electrical shortage and burning.
13. Make sure to remove the plug from the wall outlet after use.
14. When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.
15. For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.



Do not use the appliance near a bath tub, washbasin or other vessel filled with water. Never place the appliance in water or any other liquid.

SAVE THESE INSTRUCTIONS

## MAINTENANCE INSTRUCTIONS

1. Your appliance is virtually maintenance free. It contains no user serviceable parts, and no lubrication is needed.
2. Keep heated surfaces clean and free of dust, dirt and hairspray.
3. If cleaning becomes necessary, disconnect the appliance from the power source and let it cool. Wipe the exterior with a damp cloth.
4. If any malfunction occurs, unplug the appliance, allow it to
5. Never wrap the cord around the appliance since this will cause the cord to wear prematurely and break. If the cord becomes twisted, untwist it prior to use.
6. Handle the cord carefully for longer life and do not put any stress on the cord where it enters the handle. Avoid jerking, twisting or straining especially at the plug connections. It could cause the cord to fray and possibly break.
7. Do not attempt to repair the appliance yourself.

## STORAGE

When not in use, your styling iron should be disconnected and stored in a safe, dry location, out of reach of children. Do not wrap the cord around the styling iron. Allow the cord to hang or lie loose and straight at the point of entry into the styling iron.

## SERVICING OF DOUBLE-INSULATED APPLIANCES

- In a double-insulated appliance, two systems of insulation are provided instead of earthing. No earthing means is provided on a double-insulated appliance, nor should a means for earthing be added to the appliance.
- Servicing a double-insulated appliance requires extreme care and knowledge of the system, and should be done only by qualified service personnel.
- Replacement parts for double-insulated appliances must be identical to the parts they replace. A double-insulated appliance is marked with the words “DOUBLE INSULATION” or “DOUBLE INSULATED”. The symbol (square within a square) may also be marked on the appliance.

## OPERATING INSTRUCTIONS

### T3 CURLWRAP

This appliance is intended for household use. Use on Alternating Current (50/60 Hz) only.

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. DO not attempt to defeat this safety feature.

 
### AUTO SHUT-OFF

After approximately one hour, the unit will automatically shut itself off. To reactivate the unit, press and hold the lit Power Button until the iron vibrates, and lights start to cascade up.

### AUTO WORLD VOLTAGE

This appliance contains a special electronic circuit that automatically converts it for worldwide usage – from 100 to 240 volts AC 50/60 Hz. Just plug it into the local power outlet and use it as normal; the styler will automatically adjust to the local current. You may need a plug adapter to allow the plug to fit into the local outlets.

**Note:** Tool heat up time may vary based on country and voltage.

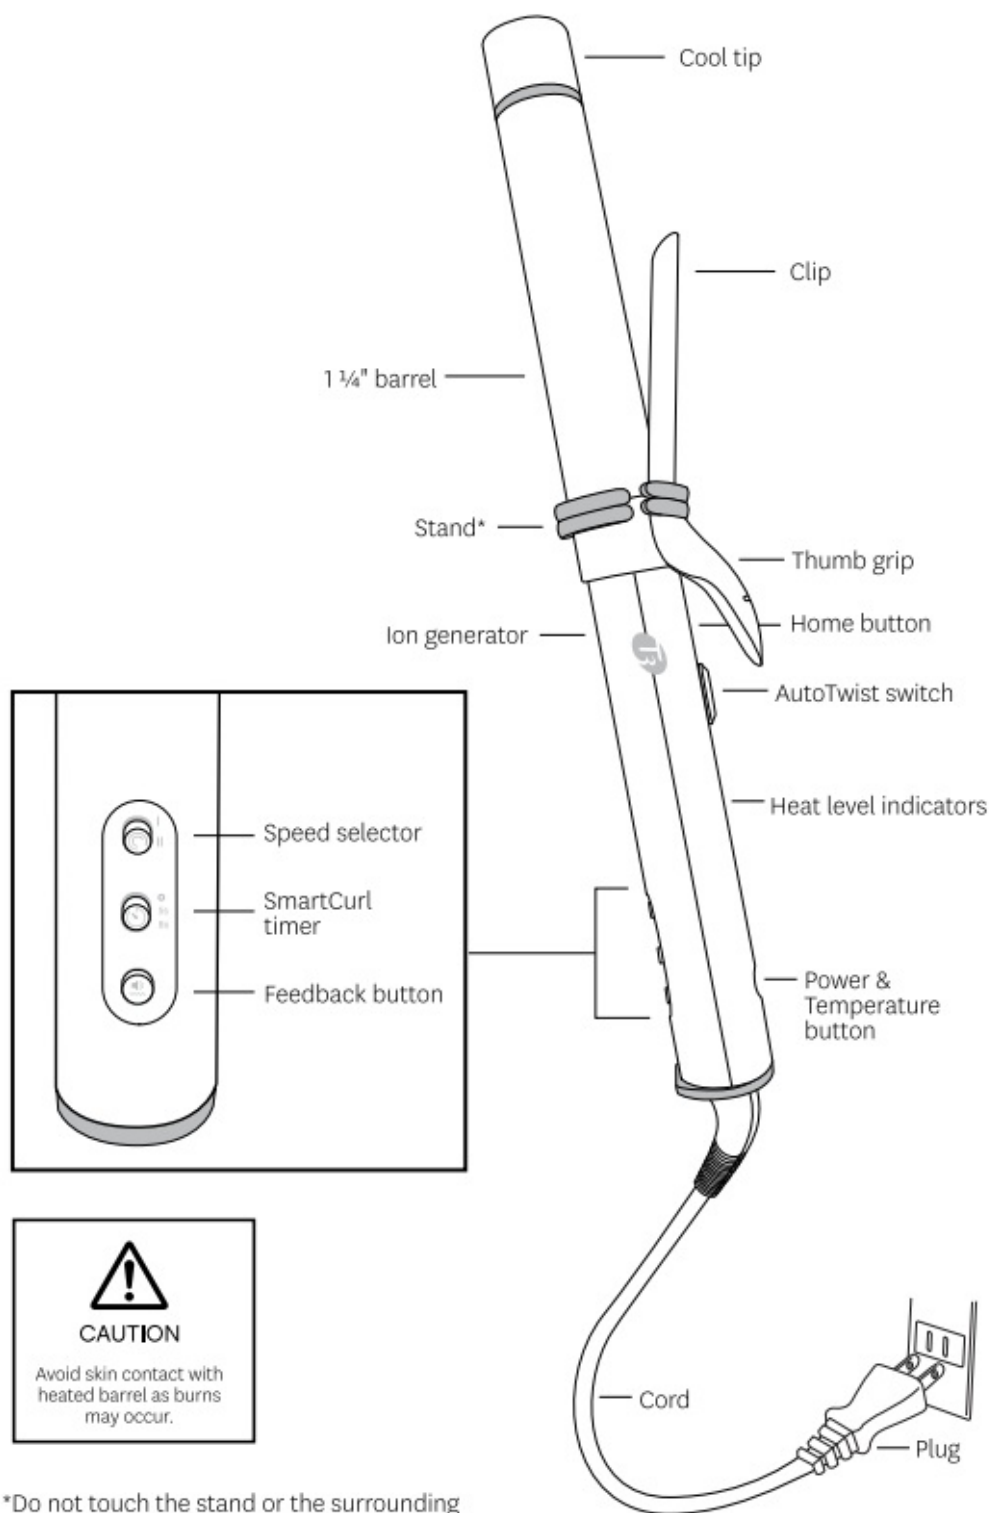

## TEMPERATURE GUIDE

For optimal results, select the right heat setting for your hair type. See temperature guide below to determine your heat setting. We suggest starting at a lower setting and building your way up as needed.



 
Fine — #1-4




Medium — #5-6



Coarse — # 7-9

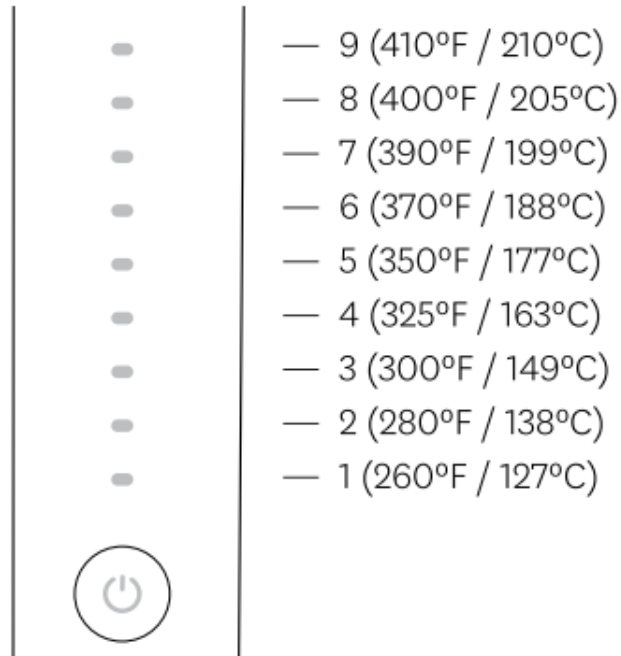

 
\* If your hair is color-treated, reduce temperature by 1-2 heat settings for optimal results.

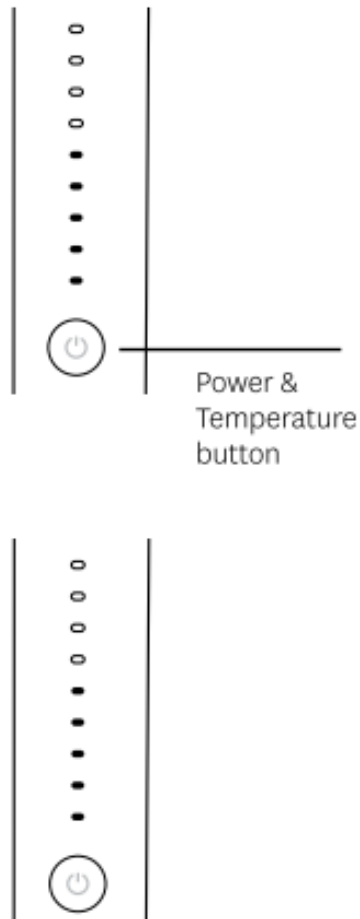

1. Press the Power a Temperature button to turn the iron on. Lights will cascade up, then turn solid when the unit

is ready to use. Note: Each time you turn on the iron it will heat up to the last set temperature.

 2. To change the temperature, double-tap Z the Power & Temperature button. Then continue to click to cycle through to your exact temperature setting

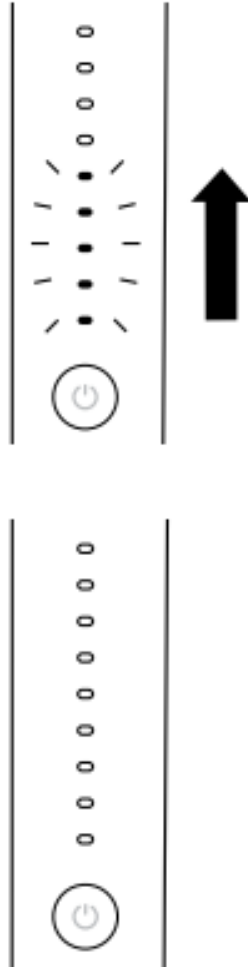

3. Release the Power & Temperature button after selecting your desired temperature. The temperature lights will cascade up or down to your selected temperature. Lights will turn solid when the iron is ready to use.
4. To turn off the iron, press and hold the Power & Temperature button until the lights turn off.



### 1. Barrel Rotation Speed Settings

To adjust barrel rotation speed, slide the Speed selector to low or high. Note: We recommend starting at low speed and working your way up as needed.



### 2. Smartcurl Timer Settings

To adjust timer settings, slide the SmartCurl timer to 5 or 8 seconds. To turn timer and feedback settings off, slide to Note: We recommend starting with the 5-second timer and working your way up as needed.



 
### 3. Sensory Feedback Settings

TO unlock feedback settings, double-tap the Feedback button. Then, tap the Feedback button for sound only. Tap again for vibration only. Tap a third time to reactivate both sound and vibration.

#### 4. Training Mode raining


Mode allows you to test barrel rotation direction and speed without using heat. To activate Training Mode, ensure tool is powered off Press and hold the Power button and Feedback button simultaneously for 3 seconds. All 9 heat settings will flash 3 times before landing on heat setting 5. To exit Training Mode, p ess and hold the Power button and Feedback button again for 3 seconds.

### HOW TO USE YOUR T3 CURLWRAP

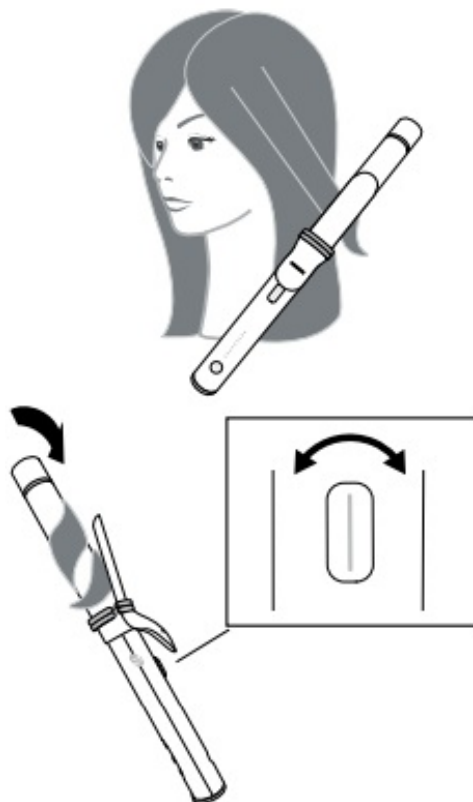

 1. Always begin with dry hair. Insert the tip of a 1-2" section into the clip. For optimal results, position hair in the upper half of the clip.
2. Slide the AutoTwist switch to the 2 left or right to guide the barrel rotation toward or away from your face. Hold the switch until hair is fully wrapped around the barrel, then release the switch to activate the timer.



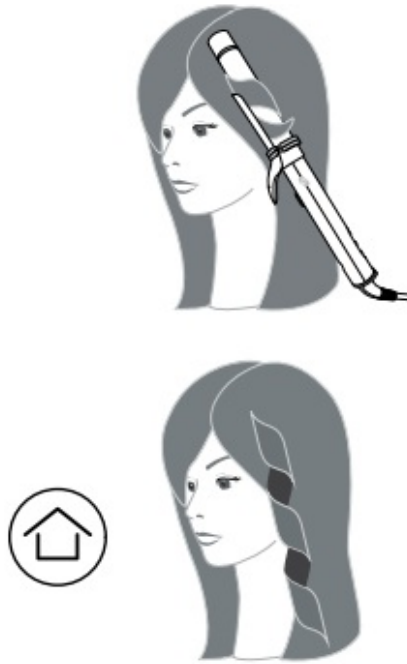

3. Hold the iron in place until the C) timer signals, then carefully open the clip and release the hair. For looser curls, tug lightly on the styled section before allowing it to cool.
4. Ensure all hair has been cleared a-y from the clip, then press the Home button to reset the ba rel. Repeat until hair is fully styled.

**Note:** Each time you turn on this styling tool, it will heat up to your last set temperature. see Temperature Guide on page B for recommended heat settings.

### **T3 LIMITED WARRANTY TERMS & CONDITIONS**

T3 Micro will repair or replace (at our option) T3 products for twenty- four (24) months from the date of purchase if they are defective in workmanship or materials. This limited warranty does not cover (1) damage due to misuse or abuse, such as incorrect voltage supply, dropping, or failure to follow enclosed instructions or (2) tampering, such as repair or attempt to repair. To obtain service under this warranty, please visit [www.T3Micro.com/warranty-info](http://www.T3Micro.com/warranty-info) to submit a warranty claim, or call us at (866) 376-8880 to receive detailed instructions. You will be required to provide proof of purchase. THIS LIMITED WARRANTY IS ONLY VALID IF THE PRODUCT IS PURCHASED FROM AN AUTHORIZED SELLER OF 13 GOODS AND IF THE ORIGINAL SERIAL NUMBER ON THE PRODUCT HAS NOT BEEN REMOVED OR OTHERWISE TAMPERED WITH. Any implied warranties, obligations, or liabilities, including but not limited to the implied warranty of merchantability and fitness for a particular purpose, shall be limited in duration to the 24 month duration of this written limited warranty. Some states do not allow a limitation on how long an implied warranty lasts, so the above limitation may not apply to you. IN NO EVENT SHALL T3 BE LIAB E FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMP IED.

Visit [www.T3Micro.com/customer-service](http://www.T3Micro.com/customer-service) to complete your warranty registration.

### **SUPPLIER'S DECLARATION OF CONFORMITY 47 CFR S 2.1077 COMPLIANCE INFORMATION**

Model Name:	<b>T3 CurlWrap</b>
Model Description:	<b>1 1/4" automatic rotating curling iron</b>
Model Number:	<b>76680</b>
Responsible Party in USA:	<b>T3 Micro, Inc.</b> <b>880 El Segundo Ca 90245</b> <b>866.376.8880</b>
Test Report Number:	<b>CN23Q1KM 001</b>

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- consult the dealer or an experienced radio/ TV technician for help.

## FCC Compliance Statement

This device complies with Part 15 of the FCC Rules. operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. No change or modification to this equipment shall be made without the express written approval of the "responsible party" as defined in the FCC's rules.



## SPECIFICATIONS

- Operating Voltage 100-240V, 50Hz/60Hz, 77W
- Power Consumption: 77W
- T3 Micro, Inc.

**WARNING** Do not use the appliance near a shower, bathtub, washbasin or other vessel filled with water. Never place the appliance in water or any other liquid.



## Documents / Resources

## References

- User Manual

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.