

WG AirFlex7 Portable Speaker User Manual

Home » WG » WG AirFlex7 Portable Speaker User Manual

Contents

- 1 WG AirFlex7 Portable Speaker
- 2 Specifications
- 3 Product features
- 4 Bluetooth pairing
- **5 Functions of buttons and slots**
- 6 Troubleshooting:
- 7 Documents / Resources
 - 7.1 References
- **8 Related Posts**



WG AirFlex7 Portable Speaker



Dear customers,

Thank you for your trust and for purchasing AIRFLEX 7. This user manual is part of the product. It contains important instructions for commissioning the product and for its operation and use. If you pass the product on to other people, please also pass on this user manual to them.

Specifications

• Wireless: V5.3

• Support: L2CAP/A2DP/AVCTP can receive AUDIO signal and control AUDIO device. HSP/HFP support, with

HANDS-FREE function

Distance: 10M
SNR: ≥90db

• Battery: 3.7 V approx. 1200 mAh

• Playback time: volume at 80%, approx. 4-5H (LED off)

Speaker driver: ¢52mmx2
Speaker power: 4 Ω/5W x 2
Frequency: 120Hz-20kHz

• Speaker dimensions: 18.8x7x5.9 cm

• Speaker weight: approx. 532g

• Charging: 5V/500mA

• Charging time: approx. 3H

Product features


- 1. Advanced wireless connectivity.
- 2. The speaker includes a Hi-Fi system that ensures clear sound.
- 3. It supports Micro SD card and flash drive and also supports MP3 audio playback.
- 4. The wireless distance reaches about 10 meters.
- 5. Thanks to the AUX input, it is possible to easily connect the speaker to external devices such as a tablet, TV or mobile phone.
- 6. The device will automatically turn off after 30 minutes if the wireless connection is disconnected.
- 7. The playback device is equipped with various LED lights that pulse in different colors and their flashing is synchronized with the melody.
- 8. Supports TWS.

TWS: If both speakers are in wireless mode without pairing, press the "M" button on either speaker for 2-3 seconds until you hear a signal. TWS mode is now activated. After disconnecting the wireless connection and pressing the "M" button for 3 seconds on any speaker, you will exit the TWS mode.

Bluetooth pairing

- 1. Press the power button for about 3 seconds. A power-on signal will sound.
- 2. Turn on bluetooth on your phone and search for "WG-AirFlex7".
- 3. A beep will sound after connection.

Functions of buttons and slots

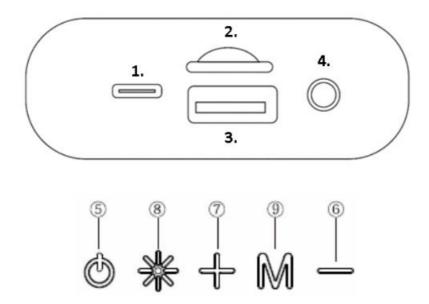

- 1. USB-C slot: Use a standard USB-C charging cable for power.
- 2. SD card slot: When you insert an SD card into the slot, it can decode and play audio files in MP3 format. Use FAT32 format.
- 3. USB slot: When you insert a flash drive into the slot, it can decode and play audio files in the MP3 format. Use FAT32 format.
- 4. AUX slot: Use the mini 3.5mm audio input to connect external devices.
- 5. Buttons: Long press to turn on/off the device.

When playing music (flash disk/SD card/wireless mode), short press 🔮 for play/pause.

In wireless mode with a paired mobile phone, briefly when there is an incoming call press to answer the call wirelessly, press again to end the call and twice press to redial.

- 6. When playing music, short press to switch to previous track, long press —to decrease the volume.
- 7. When playing music, short press to switch to next track and long press turn up the volume.
- 8. Short press to activate the flashing LED light option, long press to turn it off LED lighting.
- 9. Press M briefly to switch the mode (SD card/flash disk/wireless mode/line in).

Troubleshooting:

If the speaker gets stuck during use, please hold the power button for 8 seconds to reset and shutdown.

Recycling

Electronic and electrical products must not be thrown into household waste (mixed waste). Dispose of the waste at the end of the product's useful life in accordance with applicable regulations statutory provisions. Save the environment.

This product meets all the essential requirements of the EU directives that apply to it.

EU declaration of conformity: www.winner-mobile.com

Technical support

If you have any questions, please contact our technical support at servis@winner-mobile.com

Distributor & produced by: WINNER GROUP-WG, s.r.o. Zihla 997, 739 91, Jablunkov, CZ ICO: 26788357

WINNER GROUP-WG, Sp. z o.0 Motelowa 21, 43-400, Cieszyn, PL

www.winner-mobile.com

Documents / Resources





When places, stillages have a real studies a so raise, Admire 1. Team states in strate provided injection that they distribly policy is well only of the deposition of the state of provided and the places price and the places provided provided in the state of the state of the state of the places price and the places provided by the provided or the state of the sta WG AirFlex7 Portable Speaker [pdf] User Manual AirFlex7 Portable Speaker, AirFlex7, Portable Speaker, Speaker

References

• User Manual

Manuals+,