 




T805 Tablet

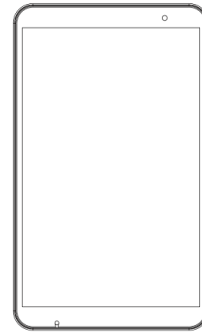

WR T805 Tablet User Guide

 
[Home](#) » [WR](#) » WR T805 Tablet User Guide 

Contents

- [1 WR T805 Tablet](#)
- [2 Product Usage Instructions](#)
- [3 Frequently Asked Questions](#)
- [4 SAFETY INFORMATION](#)
- [5 KEY FUNCTIONS](#)
- [6 Charging the Phone](#)
- [7 Product Safety Information](#)
- [8 FCC Warning](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)



WR T805 Tablet

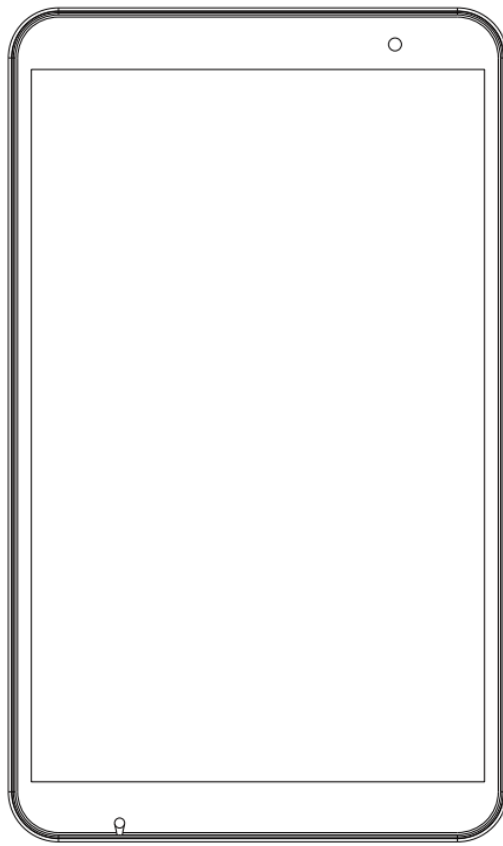

Product Specifications

- **Model:** T802
- **Headset Port:** T-FLAFH
- **Ports:** Type-C port
- **Cameras:** Front camera, Rear Camera with Flash
- **Buttons:** Volume up/down, Power button, Home, Recent Apps, Back
- **Speaker:** Included

Product Usage Instructions

Safety Information

To avoid hearing damage, limit high-volume listening. Follow safety guidelines in hospitals, airports, and near water. For emergency calls, ensure the device is on and in the service area.

Battery Usage

Charge the battery fully before first use. Complete two to three charge cycles for optimal performance and battery life.

Key Functions

- **T-FLAFH Headset Port:** Connect earphones for hands-free use or listening to music.
- **Type-C Port:** Charge the device and transfer data between the device and the PC.
- **Front Camera:** High-resolution camera for pictures and videos, ideal for self-portraits.
- **Rear Camera with Flash:** High-resolution camera with flash for low-light conditions.

- **Volume Buttons:** Adjust ringer, call, and multimedia volume.
- **Power Button:** Long press to power on/off or lock the screen.
- **Home Button:** Returns to home screen and pauses current action.
- **Recent Apps Button:** Displays recently opened apps for easy switching or closing.
- **Back Button:** Returns to the previous screen or closes keyboard/programs/menus.

Charging the Phone

- Use only approved chargers and cables. Connect the adaptor to the charging jack correctly, plug the charger into the AC outlet, and disconnect when fully charged.

Screen Freeze or Slow Response

- If the screen freezes, press and hold the Power key for about 10 seconds to restart the device.

Select Language & Wi-Fi

- On the Welcome screen, select a language and connect to a Wi-Fi network for internet access.
- Choose secured networks with passwords for connection.

Frequently Asked Questions

Q: Is the device waterproof?

A: No, the device is not waterproof. Keep it away from water or liquids to prevent damage.

Q: How should I charge the battery for the first time?

A: It is recommended to fully charge the battery before using the tablet for the first time and complete two to three charge cycles for better performance and longer battery life.

Q: What should I do if the screen freezes?

A: If the screen freezes or takes too long to respond, try pressing and holding the Power key for about 10 seconds to restart the phone.

SAFETY INFORMATION

To avoid possible hearing damage, limit the time listening at high volumes.

Hospital Safety

- Please follow hospital rules and limitations.
- Please turn off your tablet PC when near medical instruments.

Airport Safety

- Remember to follow all airport and flight safety regulations.

Water Hazard

- Your device is not waterproof. Keep your device away from water or liquid to avoid damage.


Emergency Calls

- Make sure your device is switched on and in a service area. On the home screen, tap the tablet key and dial the emergency number

Battery usage

- For better performance and longer battery life, it is recommended that you charge the battery fully before using the tablet for the first time and that you initially complete two to three charge cycles

KEY FUNCTIONS

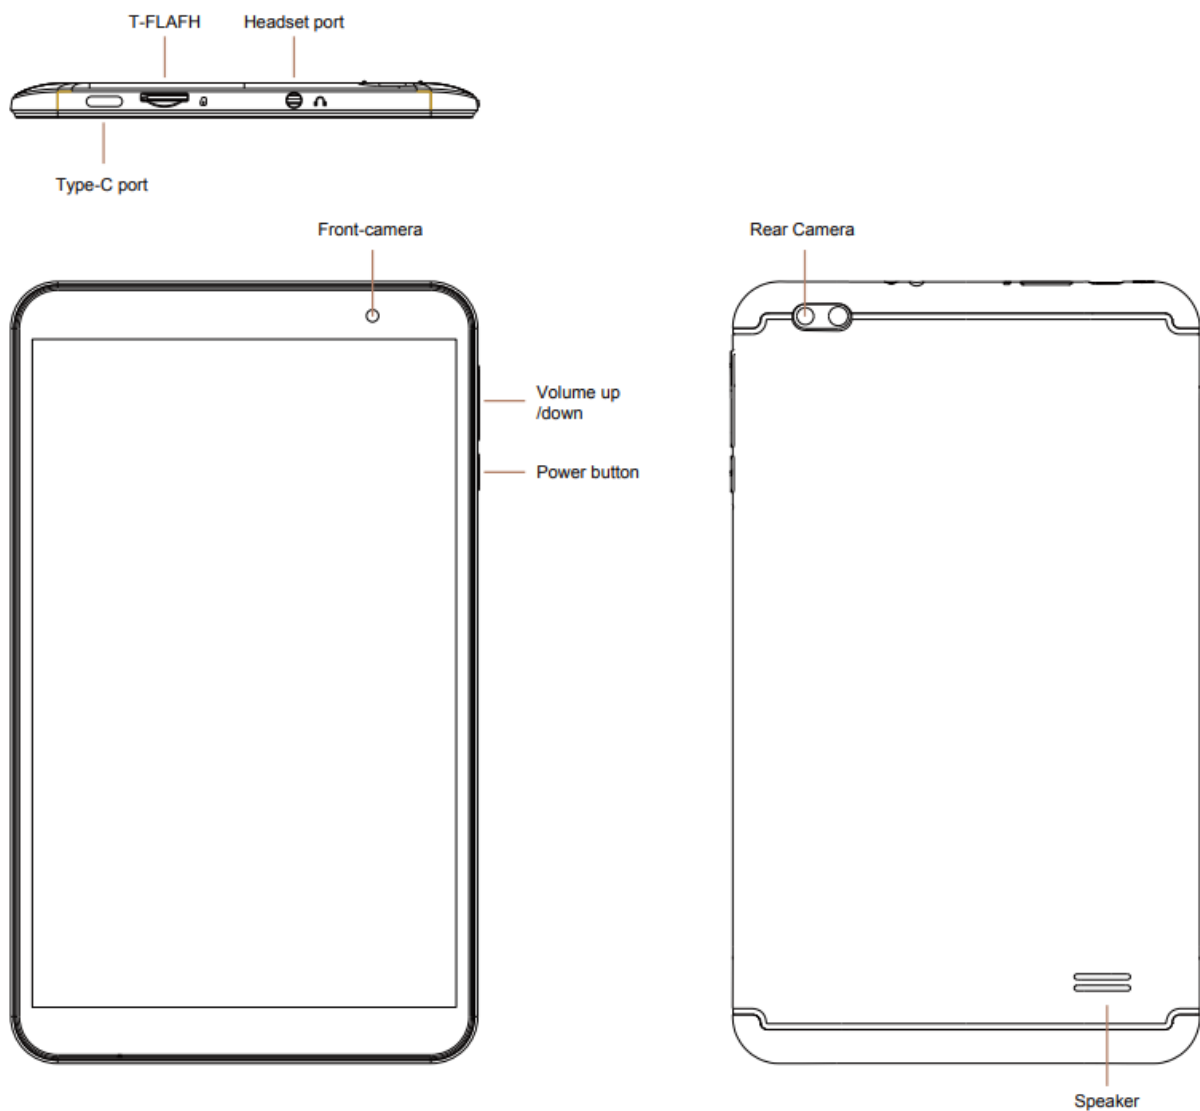

Power On/Off

- Long press the power button to power on;
- While the device is powered on, long press to access the power off menu or click to lock the screen.

Volume

- Adjusts the ringer volume, call volume, and multimedia volume.

Home

- The home button pauses any current action and returns to the home screen.

Recent Apps

- Opens a list of recently opened applications that allows you to switch conveniently between them. This option can also close any open applications by swiping to the side.

Back

- Returns to the previous screen; Closes the keyboard, any open program, or any menu option.

Type-C Port

- Charges the device and transfers data such as documents, music, and video between your device and a PC

Headset Port

- Connect earphones to this port for hands-free capabilities. You may also listen to music or FM radio.

Front Camera

- A high-resolution front camera to take pictures and video. This option is ideal for self-portraits.

Rear Camera

- A high-resolution rear camera to take pictures and video.

Flash

- Provides light for pictures in low-light conditions. It also may be used as a flashlight.

Charging the Phone

Your phone's battery should have enough power for the Tablet PC to turn on, find a signal, and make a few calls. You should fully charge the battery as soon as possible.



WARNING!

Use only IPRO-approved chargers and USB cables. The use of unapproved accessories could damage your phone or cause the battery to explode.

1. Connect the adaptor to the charging jack. Ensure that the adaptor is inserted in the correct direction.
2. Connect the charger to a standard AC power outlet.
3. Disconnect the charger when the battery is fully charged.

NOTE: If the screen freezes or takes too long to respond, try pressing and holding the Power key for about 10 seconds to restart the phone.

SELECT LANGUAGE

While on the Welcome screen, please scroll to select your language.

SELECT WI-FI

- This process allows the device to connect to the internet. Click on the desired Wi-Fi network that the device will be connected to.
- Please note that any unsecured Wi-Fi networks can be connected to without credentials and any secured Wi-Fi networks require a password for credentials before connection.
- It is recommended that you connect to a Wi-Fi network to check for software updates before starting.

ADD YOUR ACCOUNT

- TMSign into your Google account to keep accounts streamlined with Google services. Your Gmail account will be used for some Google programs. If you do not have a Google account, click to create a new account.
















GOOGLE SERVICES

- Click to add or remove Google services that include Backup, Location Service, etc.

RESTORE APPS & DATA

- You can restore your previous applications and data that was stored on another device.
- Google and Gmail are trademarks of Google LLC.

Product Safety Information

	Don't make or receive phone calls while driving. Never text while driving.
	Keep your phone at least 5 mm away from your body while making calls.
	Small parts may cause choking.
	Your phone can produce a loud sound.
	To prevent possible hearing damage, do not listen at high volume levels for long periods. Exercise caution when holding your phone near your ear while the loudspeaker is in use.
	Avoid contact with anything magnetic.
	Keep away from pacemakers and other electronic medical devices.
	Turn off when asked to in hospitals and medical facilities.
	Turn off when told to on aircraft and at airport.
	Turn off when near explosive materials or liquids.
	Don't use at gas stations.
	Your phone may produce a bright or flashing light.
	Don't dispose of your phone in fire.
	Avoid extreme temperatures.
	Avoid contact with liquids. Keep your phone dry.
	Do not attempt to disassemble your phone.
	Don't rely on your phone as a primary device for emergency communications.

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference,
2. this device must accept any interference received, including interference that may cause undesired operation.

Caution: Any changes or modifications to this device not explicitly approved by the manufacturer could void your authority to operate this equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, under part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used under the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 0cm between the radiator and your body.

Documents / Resources

	WR T805 Tablet [pdf] User Guide T805, T805 Tablet, Tablet
--	--

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.