

A4TECH®
FX61 Illuminate
Compact Scissor
Switch Keyboard



A4TECH FX61 Illuminate Compact Scissor Switch Keyboard User Guide

[Home](#) » [A4TECH](#) » A4TECH FX61 Illuminate Compact Scissor Switch Keyboard User Guide 

Contents

- [1 A4TECH FX61 Illuminate Compact Scissor Switch Keyboard](#)
- [2 Product Usage Instructions](#)
- [3 Product Features](#)
- [4 Package Including](#)
- [5 Windows/Mac OS Keyboard Layout](#)
- [6 Other FN Shortcuts Switch](#)
- [7 Dual-Function Key](#)
- [8 Product Specifications](#)
- [9 FAQ](#)
- [10 Documents / Resources](#)
 - [10.1 References](#)



 
A4TECH FX61 Illuminate Compact Scissor Switch Keyboard




Product Usage Instructions

- To lock the FN mode for Multimedia features, press FN+ESC. To unlock, press FN+ESC again.
- To switch between Windows and Mac OS layouts, press and hold the win key for Windows layout or the mac key for Mac OS layout.
- To adjust the keyboard backlight, use the shortcuts provided (Device Brightness – / +).
- To activate Scroll Lock, press Fn+Enter.
- Explore various shortcuts like adjusting device brightness, controlling volume, and media playback using the provided FN keys.


Product Features

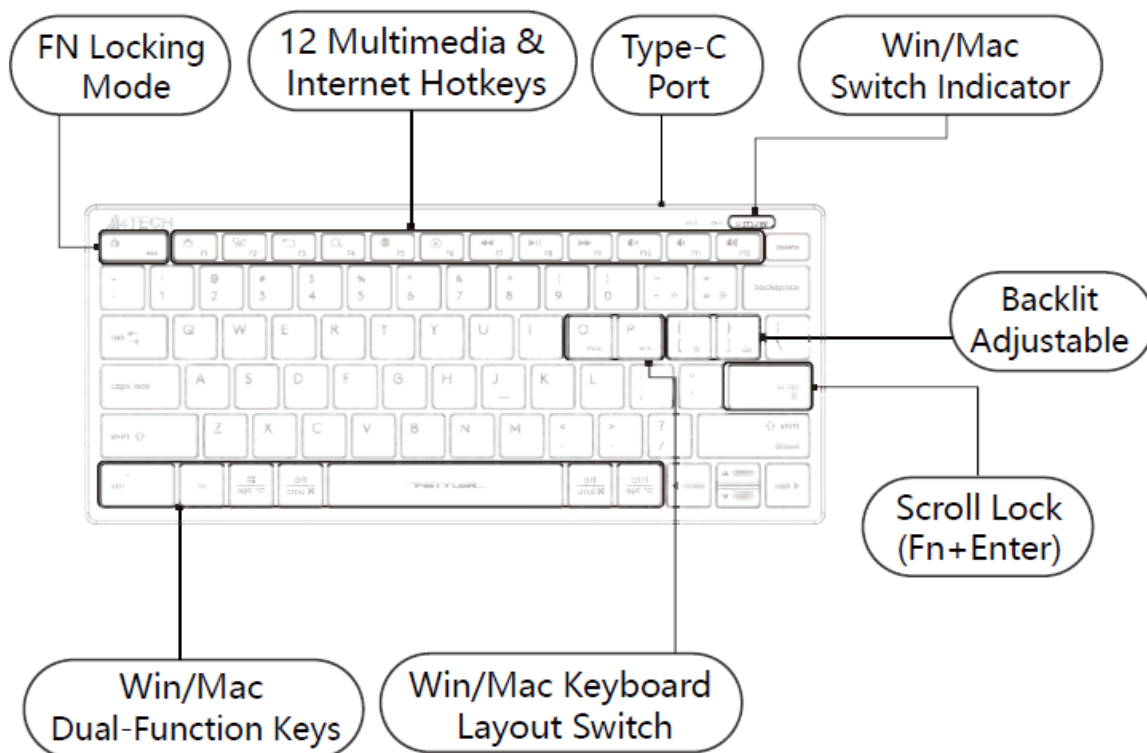

Package Including

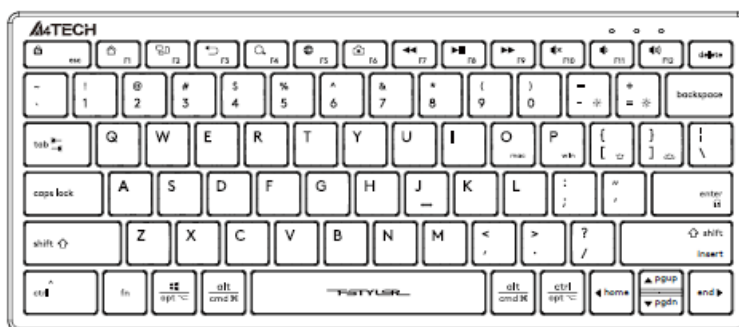 

Keyboard

 






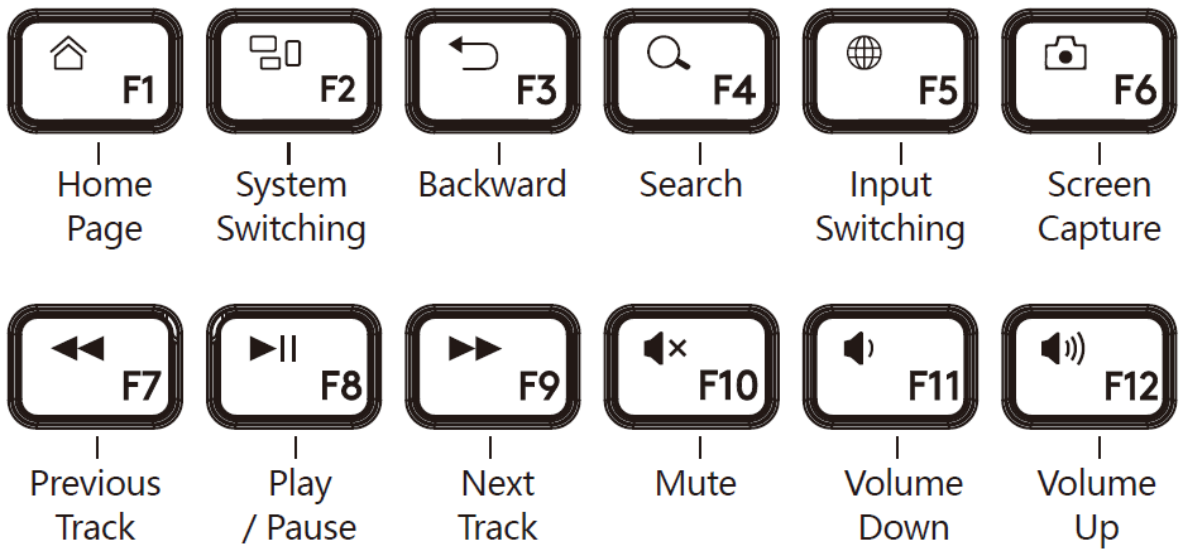 
USB Type-C Cable














User Manual

Windows/Mac OS Keyboard Layout

System	Shortcut [Long Press for 3S]	Indicator Light
Windows	 + 	 m/w Flashing Off
Mac OS	 + 	










Other FN Shortcuts Switch

Shortcuts	win (Windows)	mac (Mac OS)
 / 	Device Brightness - / +	
 / 	Keyboard Backlit - / +	
	Home	
	End	
	Page Up	
	Page Down	
	Insert	
	Pause Break	Device Brightness +
	Scroll Lock	Device Brightness -

Note: The final function refers to the actual system.

Dual-Function Key

Shortcuts	win (Windows)	mac (Mac OS)
	Switching Steps: ① Choose Windows layout by pressing win. ② Choose Mac OS layout by pressing mac.	
	Ctrl	Control ⌘
	Start 	Option ⌥
	Alt	Command ⌘
	Alt (Right)	Command ⌘
	Ctrl (Right)	Option ⌥

Product Specifications

- **Model:** FX61
- **Switch:** Scissor Switch
- **Actuation Point:** 1.8 ± 0.3 mm
- **Keycaps:** Chocolate Style
- **Character:** Silk Printing + UV
- **Keyboard Layout:** Win / Mac
- **Hotkeys:** FN + F1~F12
- **Report Rate:** 125 Hz
- **Cable Length:** 150 cm
- **Port:** USB
- **includes:** Keyboard, USB Type-C Cable, User Manual
- **System Platform:** Windows / Mac

FAQ

- Can the keyboard support Mac platforms?

Support: Windows Mac keyboard layout switching.
- Does the layout can be remembered?

The layout you used last time will be remembered.

Why does the function light not indicate in Mac OS System?

Because the Mac OS system does not have this function.


Can the mobile phone USB-Type C charging cable be used here?

Only supports 5-core USB Type-C data cables. (Suggest to use the package included cable.)



www.a4tech.com



Documents / Resources

	A4TECH FX61 Illuminate Compact Scissor Switch Keyboard [pdf] User Guide FX61, FX61 Illuminate Compact Scissor Switch Keyboard, Illuminate Compact Scissor Switch Keyboard, Compact Scissor Switch Keyboard, Scissor Switch Keyboard, Switch Keyboard
---	---

References

-  [ch.com](#)
-  [A4TECH Official Website](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.