



AandD AD-4329A-03 Multifunctional Weight Indicator Instruction Manual

[Home](#) » [AANDD](#) » AandD AD-4329A-03 Multifunctional Weight Indicator Instruction Manual 

Contents

- [1 AandD AD-4329A-03 Multifunctional Weight Indicator Instruction Manual](#)
- [2 Installation](#)
- [3 Read More About This Manual & Download PDF:](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)

AandD AD-4329A-03 Multifunctional Weight Indicator Instruction Manual




Installation

Install the AD-4329A-03 option board as described below:

1. Remove the power cord and other cables from the

2. Remove four screws and four bolts from the rear
3. Remove two slide-rails, one on each
4. Pull out the rear panel and main board from the case. Then the connector between the main board and the display board may be disconnected smoothly.
5. Remove two screws and the RS-232C board from the indicator's rear
6. Install the AD-4329A-03 option board on the rear panel from inside. Fasten the board to the rear panel from outside, using the two screws removed in step 5.
7. Connect the option cable to the option board connector and to the main board J3 connector, using much care as to the connector direction.
8. Insert the main board into the both main board Then the connector between the main board and the display board is re-connected. If the rear panel will not close completely, retry step 8 to insert the main board correctly.
9. Attach both slide-rails. Fasten the rear panel using four screws and bolts removed in step


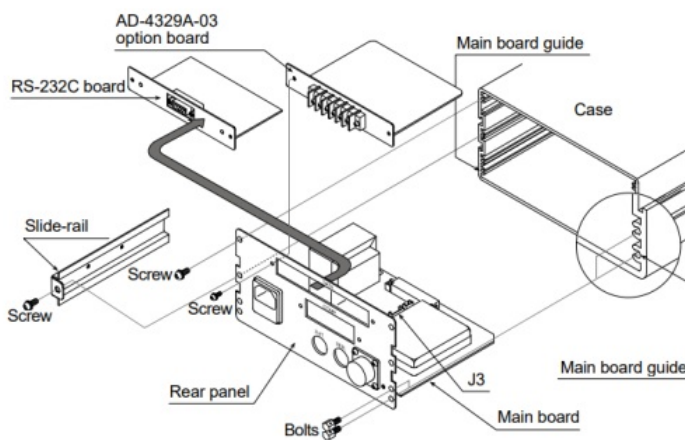


Note: Do not remove or loosen any screws other than those described above.

Specifications


AD-4329A-03	RS-422 / 485 interface	
Transmission	Asynchronous, half-duplex	
Baud rate	600, 1200, 2400, 4800, 9600 bps	
Data bits	7 bits	
Parity bits	1 bit, Even	
Start bit	1 bit	
Stop bit	1 bit	
Code	ASCII	
Terminator	CR LF	(CR: 0Dh, LF:
0Ah) Number of indicators to be connected	Max.10	
Terminal	M3 compression terminal	

 Circuit and Pin Connection

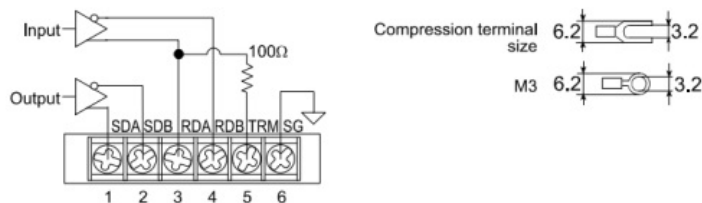

Bit Format

Signal	RS-422 / RS-485
1	SDA < SDB RDA < RDB
0	SDA > SDB RDA > RDB

 

Switching between RS-422 and RS-485


Item	Parameter	Description
RS-422 / RS-485	f-47	RS-422 (Factory setting)
	f-47 1	RS-485

Switching between RS-422 and RS-485 is performed by the function setting F-47. For details on the setting procedure, refer to the AD-4329A instruction manual.

Data format and commands are the same as those of RS-232C. For details, refer to the description of RS-232C in the AD-4329A instruction manual.


Connection example

Note: Signal polarities (A, B) of some host computers may be reversed.
SG is not available for some host computers.

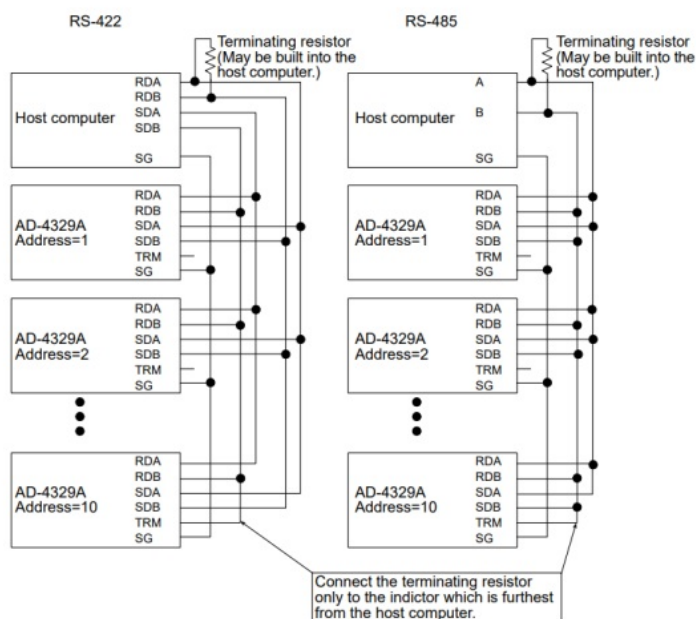

Read More About This Manual & Download PDF:

Documents / Resources

	<p>AandD AD-4329A-03 Multifunctional Weight Indicator [pdf] Instruction Manual AD-4329A-03, AD-4329A-03 Multifunctional Weight Indicator, Multifunctional Weight Indicator, Weight Indicator, Indicator</p>
---	---

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.