



Aangler OCTAGONAL FastBox Octagonal Softbox Instruction Manual

[Home](#) » [Aangler](#) » Aangler OCTAGONAL FastBox Octagonal Softbox Instruction Manual 

 
Contents

- [1 Aangler OCTAGONAL FastBox Octagonal Softbox Instruction Manual](#)
- [2 INSTRUCTIONS](#)
- [3 INSTRUCTIONS](#)
- [4 Attaching the Diffusers](#)
- [5 Removing the BoomBox](#)
- [6 Changing the Adapter Ring](#)
- [7 Specifications](#)
- [8 Accessories](#)
- [9 One-Year Limited Warranty](#)
- [10 Read More About This Manual & Download PDF:](#)
- [11 Documents / Resources](#)
 - [11.1 References](#)

Aangler OCTAGONAL FastBox Octagonal Softbox Instruction Manual




INSTRUCTIONS

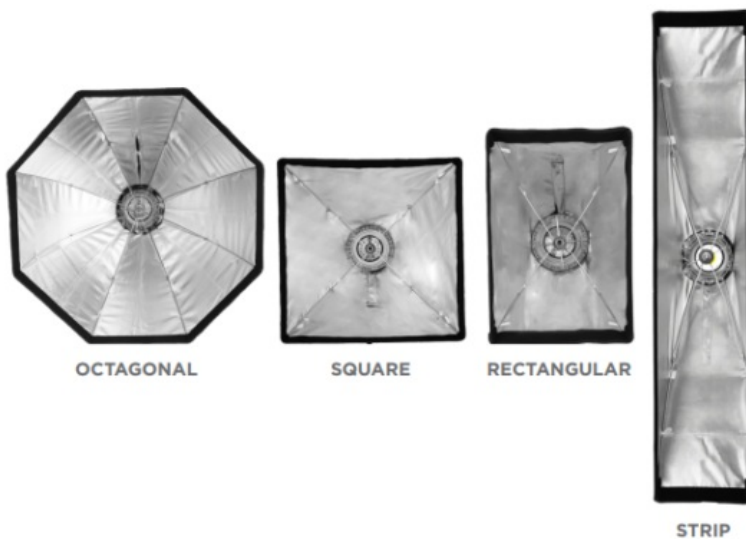


INSTRUCTIONS

 1. For Monolights and studio strobes with Bowens mounts, align the mounting tabs with the Bowens mount and insert the BoomBox into the Bowens. Turn the BoomBox clockwise until it locks.

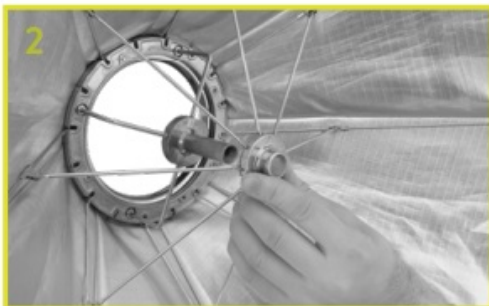

2. Open the BoomBox, and push the center ring over the shaft until it's all the way in, just like an

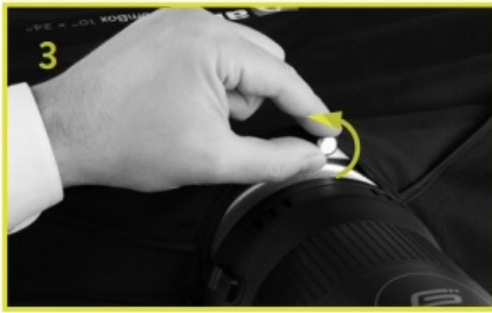

Tip: You may find it easier to hold the base of the shaft through the side opening while pushing the center ring over it.

3. Adjust the BoomBox's orientation by loosening the adapter ring's thumbscrew and rotating the BoomBox. Tighten the thumbscrew until secure.




Optional: To add the deflector to the BoomBox, screw the deflector extension into the center stem. Once it's attached, slide the deflector plate onto the extension. Try experimenting with the curved side of the deflector facing out or in, and by varying the distance from the light source.

Attaching the Diffusers

The inner and outer diffusers add two levels of diffusion that soften and spread the light for an even and flattering effect. The diffusers can be used with or without the deflector plate.

1. Attach the inner diffuser by attaching the diffuser's touch-connect strips to the touch-connect tabs inside the

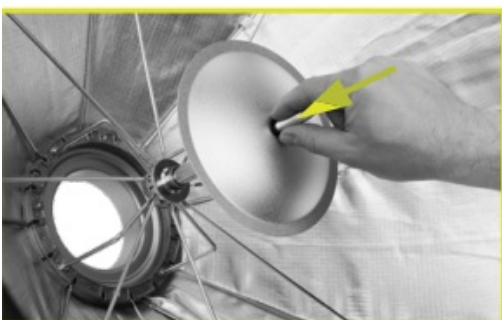

2. Attach the outer diffuser by pressing the touch-connect strips against the inner rim of the

Tip: Attach the outer diffuser to the inner edge of the touch-connect strip. This will leave enough room to add a grid (available separately).


Removing the BoomBox

To remove the BoomBox from a Bowens mount:

1. Press the light fixture's Bowens



2. Turn the BoomBox counterclockwise and remove it from the

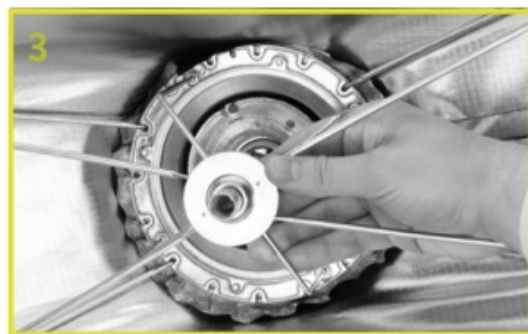

3. If necessary, remove the diffuser, deflector, and Then close the BoomBox by carefully pulling on the center ring.

Changing the Adapter Ring

Adapter Rings for Broncolor, Elinchrom, and Profoto are available separately. Make sure to use V2 (144 mm) adapter rings.


1. Unfasten the zipper and pull back the fabric around the BoomBox adapter



2. Use a Phillips screwdriver to remove the screws and washers, then remove the thumbscrew and



3. Remove the adapter ring from the

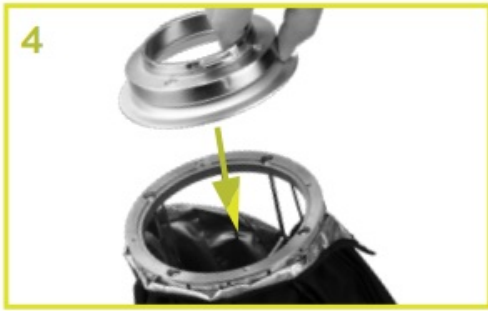

4. Insert the replacement adapter



5. Replace the washers and screws. Make sure to insert the thumbscrew in the recessed hole. Tighten until

Specifications

	OCTAGONAL			
		BB-26DB-V2	BB-36DB-V2	BB-48DB-V2
SIZE		26 IN.	36 IN.	48 IN.
		(66 CM)	(91.4 CM)	(121.9 CM)
WEIGHT		1.9 LB.	2.5 LB.	3.4 LB.
		(0.84 KG)	(1.2 KG)	(1.54 KG)

	STRIP			
		BB-ST-1024-V2	BB-ST-1236-V2	BB-ST-1255-V2
SIZE		10×24 IN. (25.4×61 CM)	12×36 IN. (30.5×91.4 CM)	12×55 IN. (30.5×139.7 CM)
WEIGHT		1 LB. (0.45 KG)	2.5 LB. (1.1 KG)	2.3 LB. (1 KG)

	SQUARE		
		BB-SQ-2424-V2	BB-SQ-3636-V2
SIZE		24 × 24 IN. (61 × 61 CM)	36 × 36 IN. (91.4 × 91.4 CM)
WEIGHT		1.6 LB. (0.7 KG)	3 LB. (1.4 KG)

	RECTANGULAR	
BB-RE-2436-V2		
SIZE		24×36 IN. (61×91.4 CM)
WEIGHT		3 LB. (1.4 KG)

Accessories



ADAPTER RINGS

MODEL #

MOUNT TYPE

BBAR-PRO-144

PROFOTO

BBAR-BRL-144

BRONCOLOR

BBAR-EL-144

ELINCHROM

GRIDS	
MODEL #	COMPATIBLE BOOMBOX
BB-G26-V2	BB-26DB-V2
BB-G36-V2	BB-36DB-V2
BB-G48-V2	BB-48DB-V2
BB-G-2436-V2	BB-RE-2436-V2
BB-G-1024-V2	BB-ST-1024-V2
BB-G-1236-V2	BB-ST-1236-V2
BB-G-1255-V2	BB-ST-1255-V2
BB-G-S36-V2	BB-SQ-3636-V2
BB-G-S24-V2	BB-SQ-2424-V2



One-Year Limited Warranty

This Angler product is warranted to the original purchaser to be free from defects in materials and workmanship under normal consumer use for a period of one (1) year from the original purchase date or thirty (30) days after

replacement, whichever occurs later. The warranty provider's responsibility with respect to this limited warranty shall be limited solely to repair or replacement, at the provider's discretion, of any product that fails during normal use of this product in its intended manner and in its intended environment. Inoperability of the product or part(s) shall be determined by the warranty provider. If the product has been discontinued, the warranty provider reserves the right to replace it with a model of equivalent quality and function.

This warranty does not cover damage or defect caused by misuse, neglect, accident, alteration, abuse, improper installation or maintenance. EXCEPT AS PROVIDED HEREIN, THE WARRANTY PROVIDER MAKES NEITHER ANY EXPRESS WARRANTIES NOR ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS

FOR A PARTICULAR PURPOSE. This warranty provides you with specific legal rights, and you may also have additional rights that vary from state to state.

To obtain warranty coverage, contact the Angler Customer Service Department to obtain a return merchandise authorization ("RMA") number, and return the defective product to Angler along with the RMA number and proof of purchase. Shipment of the defective product is at the purchaser's own risk and expense.

For more information or to arrange service, visit www.anglerlights.com or call Customer Service at **212-594-2353**.


Product warranty provided by the Gradus Group. www.gradusgroup.com

Angler is a registered trademark of the Gradus Group.

© 2024 Gradus Group LLC. All Rights Reserved.

Read More About This Manual & Download PDF:

Documents / Resources

	<p>Aangler OCTAGONAL FastBox Octagonal Softbox [pdf] Instruction Manual OCTAGONAL FastBox Octagonal Softbox, OCTAGONAL, FastBox Octagonal Softbox, Octagonal Softbox, Softbox</p>
---	---

References

- [A Angler | Lighting Equipment & Accessories](#)
- [A Angler | Lighting Equipment & Accessories](#)
- [G Gradus | Gradus Group](#)
- [User Manual](#)

Manuals+. Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.