



abl UDM Under Desk Power Module User Manual

[Home](#) » [ABL](#) » abl UDM Under Desk Power Module User Manual 

Contents

- [1 abl UDM Under Desk Power Module User Manual](#)
- [2 UDM ► under desk power module](#)
- [3 INSTALLATION:](#)
- [4 MAIN FEATURES:](#)
- [5 SAFETY NOTES:](#)
- [6 CONTENT](#)
- [7 MAINTENANCE:](#)
- [8 WARRANTY CONDITIONS:](#)
- [9 Read More About This Manual & Download PDF:](#)
- [10 Documents / Resources](#)
- [11 Related Posts](#)


abl UDM Under Desk Power Module User Manual



UDM ► under desk power module

Thank you for purchasing ABL's UDM power module.

UDM has been manufactured and tested in accordance with relevant standards (see contact page).

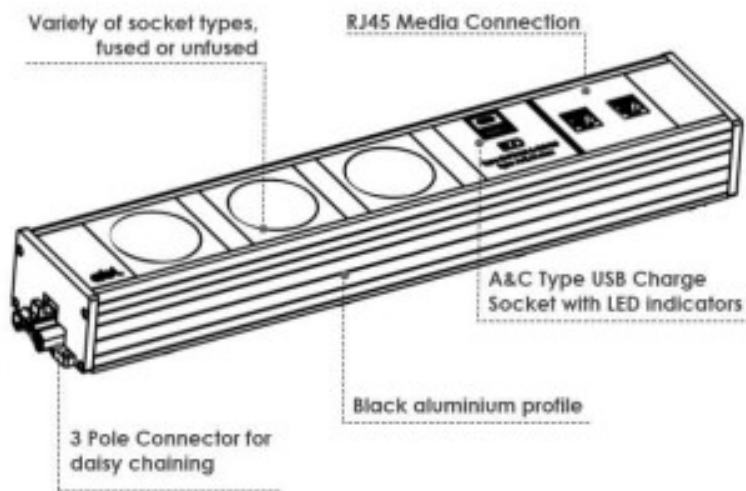


INSTALLATION:

! Black aluminium profile

OPTION 1 – Fix the module onto a flat surface

1. Check the screw fixing points on the module
2. Fixate using the provided screws according to the designated positions on the fixators

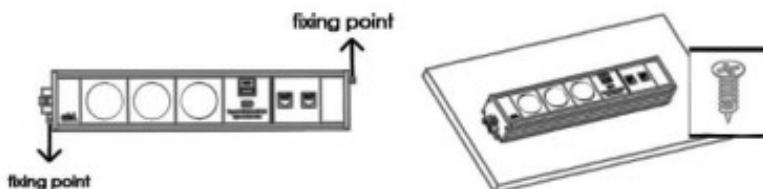

OPTION 2 – Fix the module into a wire basket

Simply place the module into the wire basket




MAIN FEATURES:

- The module is available in Black, with Black aluminium profile

- Available in variations of sockets, USB charge sockets and RJ45 media connections
- Integrated 3 Pole Connector enables daisy chaining with other compatible products
- Rated voltage of UDM power module unit is 250V AC (C, E, F, G, J, L), for B type sockets 120V AC
- Nominal intensity of the unit:
 - 13A for G type socket
 - 16A for B, C, E, F, J, L type sockets
- G type sockets are individually fused with 3.15A or 5A fuse. Available in up to four sockets with 5A fuse, and in up to six sockets with 3.15A to comply with BS6396.
- When used with ABL Conference Top Access, it is perfectly suitable for meeting rooms
- It is easily installed and fits perfectly into ABL wire basket. Alternatively secured under the desk

Note: The most common socket types:

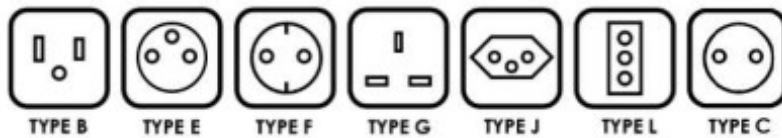

Contact us for more information.

SAFETY NOTES:

- Items such as Vacuum Cleaners, Kettles, Coffee Makers, and Fan Heaters should not be connected via these power modules
- Installation is to be carried out by a qualified professional

Complies with BS 5733 (UK) IEC 60884-1 and IEC 60884-2-7 (Europe)




Kitemark certified on 13A Plugs and Socket outlets (KM686563)



Manufacturing in-house within central Europe under strict compliance with ISO 9001 :2015

CONTENT

- UDM
power module

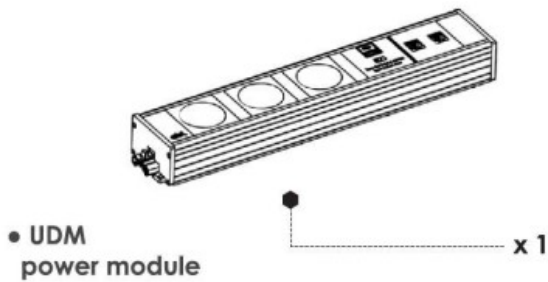

Note: Use mains lead cable to connect UDM power module with the main power supply

MAINTENANCE:

Do not open, disassemble, change, or modify the device. Every unauthorized opening or repairing of the device leads to loss of warranty. During device usage, you need to follow basic safety measures. since safety requirements vary, please check with local laws.

WARRANTY CONDITIONS:

ABL warrants this product as free of defects in material, design, and workmanship for the period of twenty-four (24) months from the original date of receipt of the product, unless applicable national laws stipulate otherwise. If during the period of warranty this product proves defective under normal use and service you should return the product to the retailer from whom it was originally purchased. The liability of the ABL is limited to the cost of repair and/or replacement of the unit under warranty. The warranty is void if a failure occurs due to the following reasons:

- Improper device installation
- Improper handling
- Improper transport
- Force majeure




WARNING: Do not use this product for any other purpose other than which it was designed for..



Read More About This Manual & Download PDF:

Documents / Resources

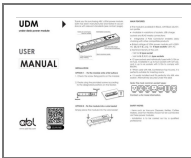

[abl UDM Under Desk Power Module](#) [pdf] User Manual
UDM, Under Desk Power Module, UDM Under Desk Power Module