



acesstyle Amaranth II 10MDQ Power Bank User Manual

[Home](#) » [acesstyle](#) » [acesstyle Amaranth II 10MDQ Power Bank User Manual](#) 



acesstyle

Amaranth II 10MDQ



User's Manual

Thank you for purchasing Amaranth II 10MDQ Power Bank. Please read this manual carefully and keep it for future reference.

Contents

- 1 Specifications
- 2 Package content
- 3 Product appearance
- 4 Charging the Power Bank
- 5 Power on/off
- 6 Charging your devices from the Power Bank
- 7 Indication of charger connecting/disconnecting
- 8 Safety notices:
- 9 Accesstyle warranty terms and conditions
- 10 Warranty certificate
- 11 Documents / Resources
- 12 Related Posts

Specifications

Battery capacity	10000 mAh
Battery type	Li-Ion
Input voltage, current	Micro USB (QC): 5V/2A, 9V/2A, 12V/1.5A USB Type-C (PD): 5V/2.4A, 9V/2A, 12V/1.5A
Output voltage, current	Mirco USB(QC): 5V/3A, 9V/2A, 12V/1.5A, 4.5V/5A, 5V/4.5 A Type-C(PD): 5V/2.4A, 9V/2.22A, 12V/1.67A, 4.5V/5A, 5 V/4.5A
Maximum power output, W	22.5W
Casing material	Aluminum alloy
Size, mm	89x49x24 mm
Weight. g	190 g
Charging time	3-4 h (QC/PD), 5-6 h (standard)
Charging cycles	>300

Package content

1. Power Bank — 1.
2. User manual —1.
3. USB charging cable – 1.


Product appearance



ID	Name	Function
1	Power button	Press once to power the Power Bank on Press twice to power the Power Bank off
2	Display	Indicates the Power Bank's charge level in percent
3	USB Output	Charges your devices from the Power Bank
4	USB Type-C	For charging the Power Bank, or charging your devices from the Power Bank
5	Micro USB Input	For charging the Power Bank

Charging the Power Bank

Connect one end of the charging cable to a power supply: a power adapter* or a PC's USB port. The other end should be connected to an input port of the Power Bank. You will see 100% on the display when the power bank is fully charged. Power Bank's input is compatible with quick charge protocol and can be charged quicker than usual if connected with a quick charge compatible cable to quick charge compatible power adapter*. When quick charge is active, symbol "PD" on display appears.

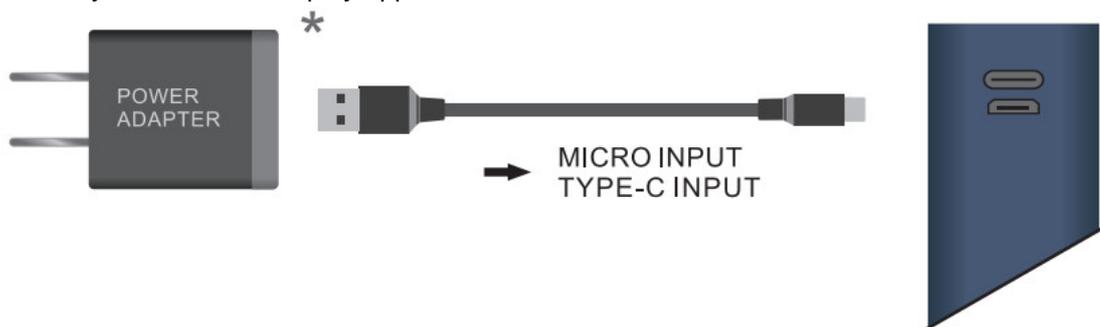


* a power adapter is not supplied with the Power Bank and should be purchased separately!

Power on/off

To switch on the Power Bank click the power button or connect your device to the Power Bank. To turn off the Power Bank click the Power button twice. Power Bank will also switch off automatically in 35 seconds if no other device is connected.

Charging your devices from the Power Bank

Please use only the original cable to charge your devices from the Power Bank. Turn on the Power Bank to start charging. Connect one end of the charging cable to the Power Bank output port, and the other end to the input port of your device (Apple or Android). Power Bank's output is compatible with quick charge protocol and can charge devices quicker than usual if connected with a quick charge compatible cable to quick charge compatible device. When quick charge is active, symbol "PD" on display appears.

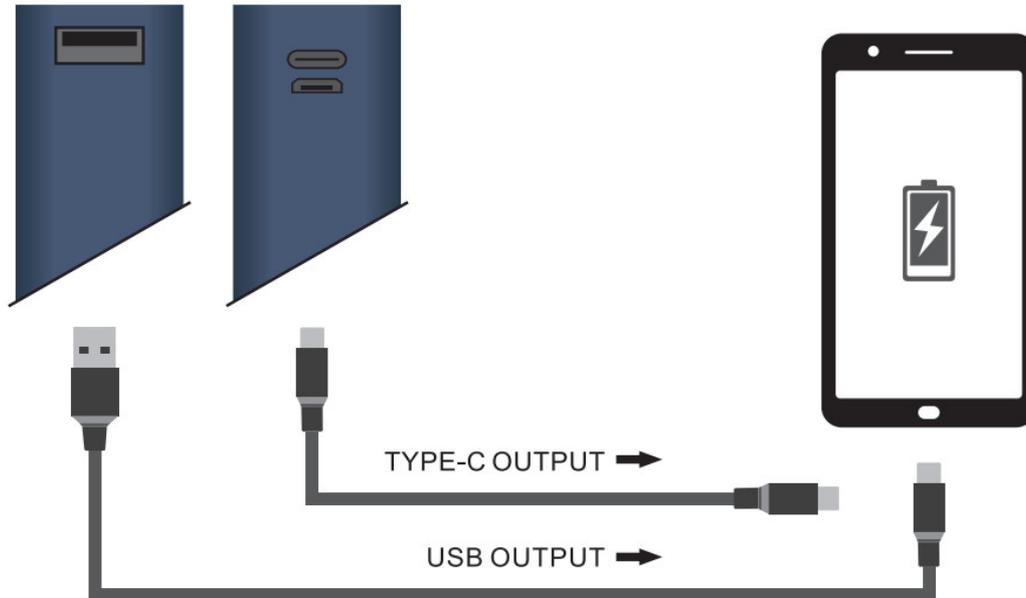

Charging status indication

The Power Bank battery charge level is shown on the display (in percentage of its maximum capacity).

Note: Please kindly put the Power Bank on charge when the battery charge level is less than 20%. When the device is fully charged, "100" symbol will appear on its display. The battery has a protection triggering when overcharged, deeply discharged as well as in cases of current overload and risk of a short circuit. Operation temperature: -2 to 40 °C; storage temperature: -10 to 45 °C.

Indication of charger connecting/disconnecting

The indication will automatically turn on after connecting a device to the Power Bank. The indication will turn off in 35 seconds after a device is disconnected and no other device is connected. Please put the Power Bank on charge if it does not respond when you press buttons or connect it to other devices.

Safety notices:

The device is powered by a battery. Improper use of the battery may cause a risk of fire, explosion or other hazards. Please kindly use the battery in a proper way.

Do not disassemble, open, bend, puncture, affect the battery mechanically or immerse in liquids. The battery may explode when damaged. In the event of battery leak, flush the affected area with clean water and seek medical help immediately. In case the battery smells, take it to a safe place away from open flames.

Use of a damaged battery may cause severe injuries.

Do not swallow!

Keep away from children!

Do not leave a fully charged battery connected to a charger as overcharging may shorten its lifetime. The battery runs down if not used.

Do not disassemble the device, avoid a short circuit. Keep the metal contacts of the battery clean.

Do not leave or keep your device in vehicles in hot weather under direct sunlight. This may cause the battery to overheat and reduce its life. The device may shut down or the capacity may not be fully consumed when used outside operating temperature requirements (below -10°C and above +45°C).

The battery contains toxic substances such as mercury, cadmium and lead. The used battery should be properly disposed of. Dispose of the battery separately from household waste to avoid leaching of heavy metals to soil, ground and surface water.

Do not burn the battery to avoid emission of heavy metals to the atmosphere and accumulation thereof in smoke and ashes. For the purpose of natural resource protection please kindly separate the battery from other wastes and submit it for recycling. The product is to be transported in the manufacturer's packing by all means of transport at any distance.

Accesstyle warranty terms and conditions

1. The warranty period of this Product is 1 (one) year starting from the time of the original purchase.
2. The product's lifetime is 2 (two) years and shall commence at the date of purchase, or, failing that, production date;
3. This warranty shall not apply to:
 - 3.1. Cables, adapters, variety of media (discs, memory cards with software), cases, extension cables, clips, variety of holders, package and documents.
 - 3.2. Normal wear and tear or the product's outer surface damages.
 - 3.3. Defects caused by moisture, dampness, extreme temperature, microwave energy, pressure, hit, influence of animals and insects, liquids, food, dust and chemicals entering the product.
 - 3.4. Product, repaired or modified by persons, except those names in paragraph 5.
 - 3.5. Product, misused or used in violation of the user manual.
4. Warranty service shall be performed by dully authorized bodies: authorized service centers listed on Support webpage: <http://www.accesstyle.ru> and available on 8-800-250-07-17. During the warranty period any production defects shall be repaired free of charge upon presenting the filled valid warranty certificate and/ or documents indicating the proof of purchase and the date of purchase (cash receipt). The documents shall contain model name of the product, date of purchase, trade organization details. An authorized body shall be entitled to refuse warranty service in case of absence of the required documents.
5. Warranty period shall be extended to the service period. Replacing of parts, components or the whole package shall not result in a new warranty period for the product or for the replaced parts.
6. Under no circumstances shall the Producer, Importer and organizations authorized by the Importer be liable for any direct, indirect, incidental, special or consequential damage or including but not limited to, any loss of profit, loss/ loss of use of information or data; information or data restoration costs, loss arising out of

Warranty certificate

Product name:.....

Serial number:.....

Date of purchase:.....

Signature of the sales person:.....

Trade organization name and address:.....

The quality of product has been checked in my presence / have no claims. / have obtained the full and complete product. / hereby declare that / have read and agree with the warranty terms and conditions.

Customer signature.

			
https://acesstyle.ru/catalog/vneshnie-akkumulyatory/amaranth-10mdq/UMARM	https://acesstyle.ru/catalog/vneshnie-akkumulyatory/amaranth-10mdq/UMKAZ	https://acesstyle.ru/catalog/vneshnie-akkumulyatory/amaranth-10mdq/UMGEO	https://acesstyle.ru/catalog/vneshnie-akkumulyatory/amaranth-10mdq/UMAZ



Documents / Resources

	<p>acesstyle Amaranth II 10MDQ Power Bank [pdf] User Manual Amaranth II 10MDQ Power Bank, Amaranth II, 10MDQ Power Bank, Power Bank, Bank</p>
-----------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------

[Manuals+](#)