



accessstyle TS2M300S Toasters User Manual

[Home](#) » [accessstyle](#) » accessstyle TS2M300S Toasters User Manual 

Contents

- [1 accessstyle TS2M300S Toasters](#)
- [2 IMPORTANT SAFEGUARDS](#)
- [3 PRODUCT DESCRIPTION](#)
- [4 OPERATION MANUAL](#)
- [5 MAINTENANCE AND CLEANING](#)
- [6 TECHNICAL SPECIFICATIONS](#)
- [7 ACCES STYLE WARRANTY TERMS AND CONDITIONS](#)
- [8 Documents / Resources](#)
- [9 Related Posts](#)



accessstyle TS2M300S Toasters



Thank you for purchasing Accesstyle Toaster! Please read this manual carefully and keep it for future reference.

Warning: This user manual contains important safeguards. Household use only.

IMPORTANT SAFEGUARDS


1. Before commissioning this device, please read the instruction manual carefully.
2. Please keep these instructions, the guarantee certificate, the sales receipt and, if possible the carton with the inner packaging!
3. The device is intended exclusively for private and not for commercial use!
4. Always remove the plug from the socket whenever the device is not in use, when attaching accessory parts, cleaning the device or whenever a disturbance occurs. Switch off the device beforehand. Pull on the plug, not on the cable,
5. In order to protect children from the dangers of electrical appliances, never leave them unsupervised with the device. Consequently, when selecting the location for your device, do so in such a way that children do not have access to the device, Take care to ensure that the cable does not hang down.
6. Test the device and the cable regularly for damage. If there is damage of any kind, the device should not be used.
7. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
8. Keep the device and the cable away from heat, direct sunlight, moisture, sharp edges and suchlike.
9. Never use the device unsupervised! Switch off the device whenever you are not using it, even if this is only for a moment.
10. Use only original accessories.

11. Do not use the device outdoors
12. Under no circumstances must the device be placed in water or other liquid, or come into contact With such. Do not use the device With wet or moist hands.
13. Should the device become moist or wet, remove the mains plug from the socket immediately. Do not reach into the water
14. Bread may burn. Therefore toasters must not be used near or below curtains and other combustible materials, They must be watched.
15. The temperature of accessible surfaces may be high when the appliance is operating. Never touch the metal parts with your fingers!
16. Use the device only for the intended purpose.

Caution

1. Always watch the unit while it is being used (Very dry bread can start to burn when being toasted)
2. The metal parts on top will be heating up! DANGER OF BURNS.
3. When first time to use the unit, there will be slight smoke and smell come out, they are from the heating elements and harmless. it will disappear after 5-10mins dry baking.
4. Do not set up the unit next to inflammable objects (e.g. curtains, wood, etc.).

PRODUCT DESCRIPTION

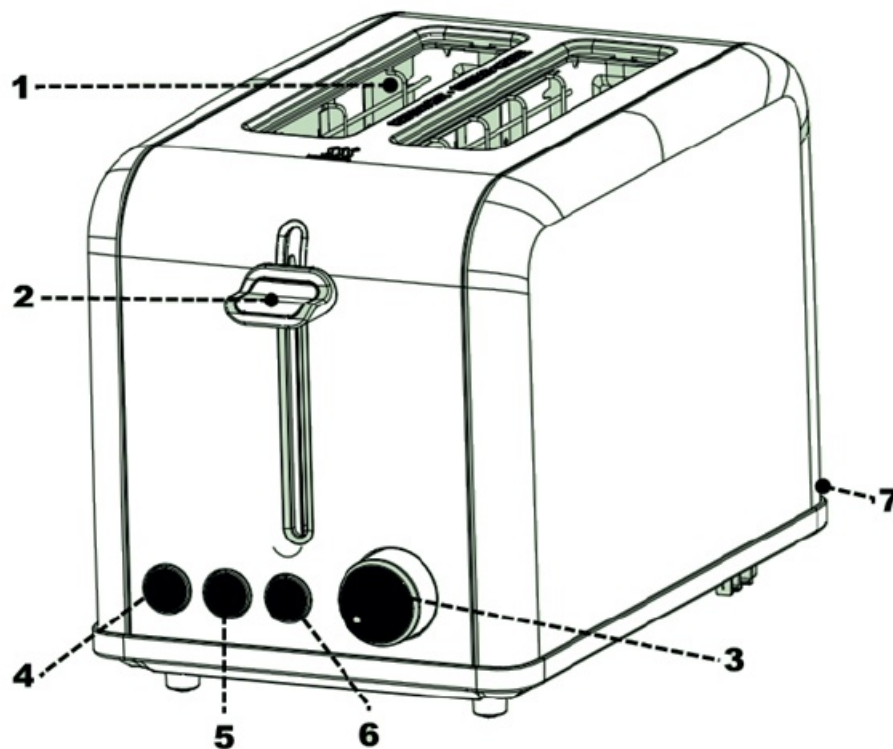

1. Bread Slots
2. Bread Lever
3. Browning Knob
4. Cancel Button

5. Reheat Function
6. Defrost Function
7. Crumb Tray

OPERATION MANUAL

1. Only connect the unit to a properly installed and earthed power socket (220~240 V 50Hz).
2. To set the toasting level turn the selector clockwise from the lightest setting:
 1. to the darkest setting
 2. If you are not sure, start with a lower setting. Normally our golden setting will be between setting 4-5, you will get an excellent bread with this level.
3. Insert one slice of bread per toasting slot and lower the slot with the lever until it snaps into place.
4. The unit starts to toast and switches off automatically at the end. The slide pops up automatically.
5. Cleaning the bread crumbs by the removable tray on the bottom of the unit.
6. Allow the unit to cool down before you put it away.

Cancel: For the anticipated stopping of the toasting procedure.

Reheat: It allows you to reheat already toasted bread or to toast bread that is not toasted enough during a short time without modifying the browning degree.

1. Insert the bread slices in the slots.
2. Carefully press down the on/off handle until it engages in the Browning position.
3. Press the REHEAT button. The power indicator of the button illuminates.

Defrost: It allows you to toast the bread that has been frozen beforehand.

1. Insert the frozen bread slices in the slots and select the desired browning.
2. Carefully press down the on/off handle until it engages in the Browning position.
3. Press the DEFROST button. The power indicator of the button illuminates.

MAINTENANCE AND CLEANING

1. Pull the mains plug out of the mains socket before you clean the unit and allow the unit to cool down.
2. Only use a slightly damp cloth to clean the outside of the unit.
3. Do not use abrasive or aggressive cleaners.
4. Pull the crumb tray out, remove any bits of bread and put the tray back in.
5. All other maintenance and repair should be performed by a qualified technician.
6. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
7. Children should be supervised to ensure that they do not play with the appliance.
8. Appliances are not intended to be operated by means of an external timer or separate remote-control system.

TECHNICAL SPECIFICATIONS

- **Product Type:** Toaster
- **Max Power:** 815 W
- **Bread slots Quantity:** 2
- **Body material:** Metal
- **Defrost function:** Yes
- **Reheat function:** Yes
- **Auto-off function:** Yes
- **Automatic centering of toasts:** Yes
- **Roasting levels:** 6
- **Type of control:** Mechanical
- **Cancel Button:** Yes
- **Crumb tray:** Yes
- **Power cord length:** Yes
- **Power Cord compartment:** 0,75 m
- **Rated Voltage:** 220-240 V 50 Hz
- **Max Dimensions, W*H*D:** 159*180*265 mm
- **Net Weight:** 1,3 kg
- **Main color:** Grey

Correct disposal of this product

To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle this product responsibly to promote sustainable reuse of material resources.

ACCES STYLE WARRANTY TERMS AND CONDITIONS

1. The warranty terms and conditions set forth below comply with the Russian Federation's applicable legislation on consumer goods trading.
2. The warranty period of this Product is 1 (one) year starting from the time of the original purchase.
3. The product's lifetime is 2 (two) years and shall commence at the date of purchase, or, failing that, the production date;
4. This warranty shall not apply to:
 1. Cables, adapters, variety of media (discs, memory cards with software), cases, extension cables, clips, a variety of holders, package and documents.
 2. Normal wear and tear or the product's outer surface damages.
 3. Defects caused by moisture, dampness, extreme temperature, microwave energy, pressure, hit, influence of animals and insects, liquids, food, dust and chemicals entering the product.
 4. Product repaired or modified by persons, except those names in paragraph 5.
 5. Product, misused or used in violation of the user manual.
 6. Defects caused by use of incompatible equipment or accessories.
5. Warranty service shall be performed by dully authorized bodies: authorized service centers listed on Support webpage: <http://www.accesstyle.ru> and available on 8-800-250-07-17. During the warranty period any production defects shall be repaired free of charge upon presenting the filled valid warranty certificate and/ or documents indicating the proof of purchase and the date of purchase (cash receipt). The documents shall

contain model name of the product, date of purchase, trade organization details. An authorized body shall be entitled to refuse warranty service in case of absence of the required documents.

6. Warranty period shall be extended to the service period. Replacing of parts, components or the whole package shall not result in a new warranty period for the product or for the replaced parts.
7. Under no circumstances shall the Producer, Importer and organizations authorized by the Importer be liable for any direct, indirect, incidental, special or consequential damage or including but not limited to any loss of profit, loss of use of information or data; information or data restoration costs, loss arising out of use or inability to use Accesstyle products resulted in interruption of a commercial, production or other activity.

WARRANTY CERTIFICATE


- **Product name:**
- **Serial number:**
- **Date of purchase:**
- **Signature of the sales person:**
- **Trade organization name and address:**

The quality of product has been checked in my presence, I have no claims. I have obtained the full and complete product. I hereby declare that I have read and agree with the warranty terms and conditions.

<https://accesstyle.ru/service/>



Documents / Resources

	accesstyle TS2M300S Toasters [pdf] User Manual TS2M300S Toasters, TS2M300S, Toasters
-------------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------------------