

## **ACCSOON CoMo Wireless Intercom System User Manual**

Home » ACCSOON » ACCSOON CoMo Wireless Intercom System User Manual



# Accsoon CoMo



#### **Contents**


- 1 Packaging list
- **2 Product Description**
- **3 Product Features**
- 4 Instruction
- **5 Specifications**
- 6 FAQ
- **7 Warranty**
- 8 After sales
- 9 Safety information
- 10 Documents /

Resources


- 10.1 References
- 11 Related Posts

## **Packaging list**


Accsoon CoMo (1 host headset, 8 remote headsets) package includes

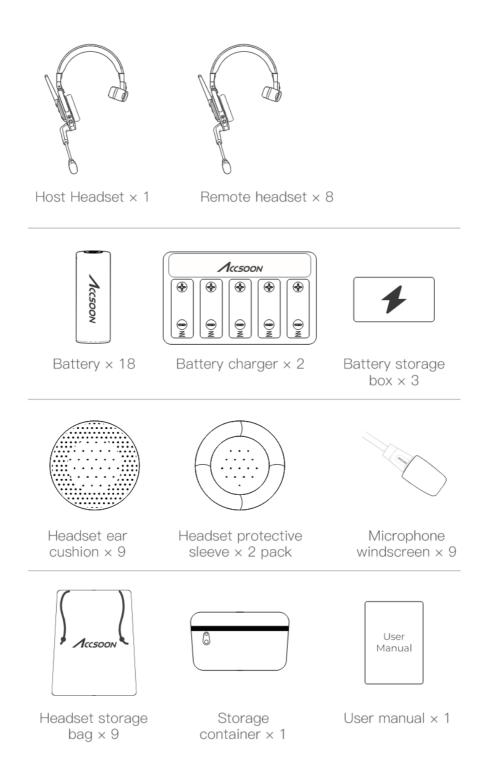


Accsoon CoMo (1 host headset, 6 remote headsets) package includes

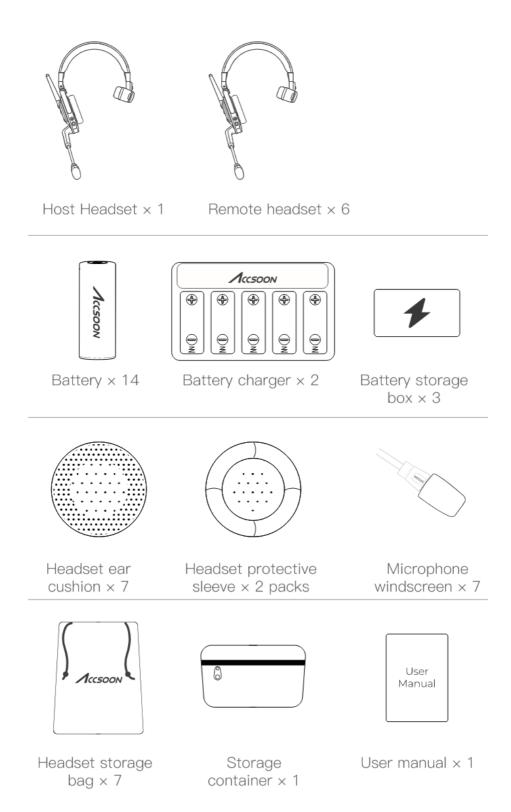


Accsoon CoMo (1 host headset, 4 remote headsets) package includes

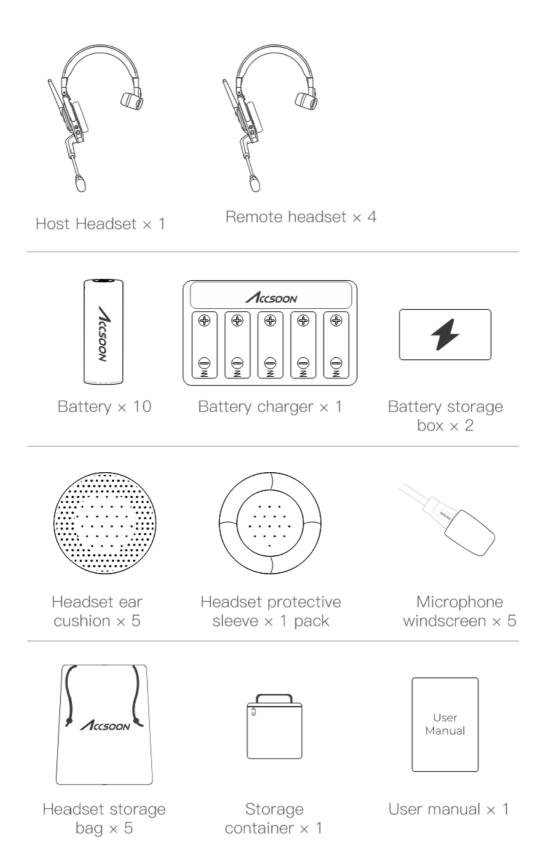

Accsoon CoMo (1 host headset, 2 remote headsets) package includes

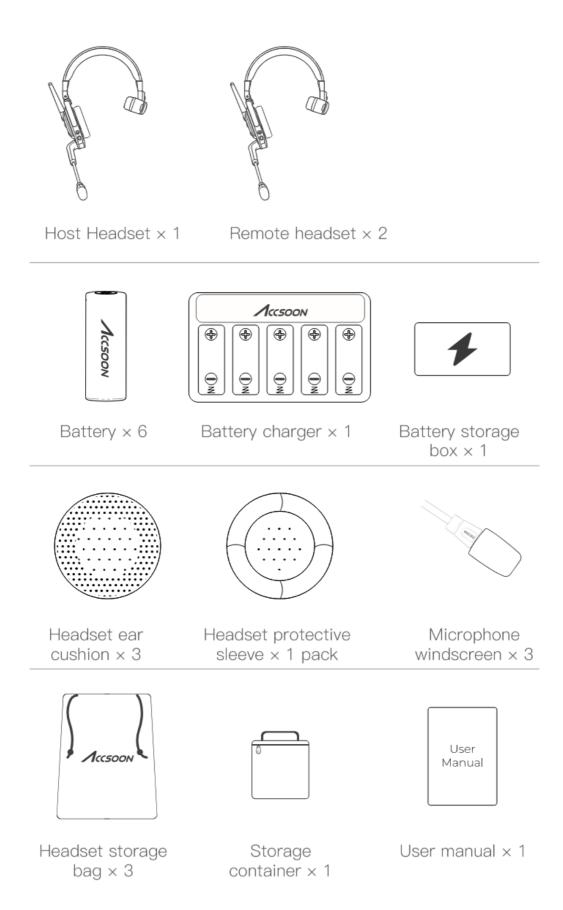

Accsoon CoMo (Single headset) package includes:

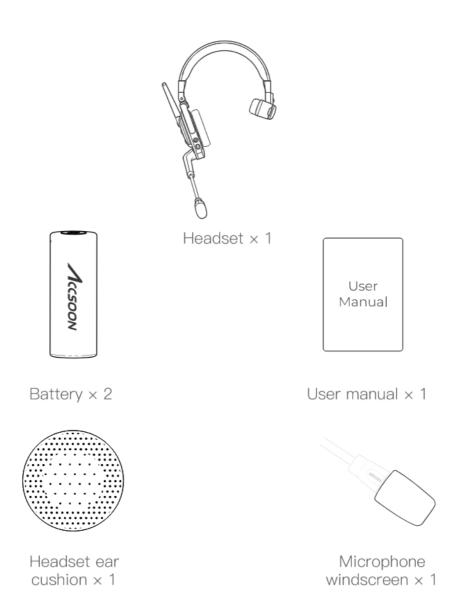

#### **Product Description**

Thank you for choosing the Accsoon CoMo — A full-duplex wireless intercom system.


Accsoon CoMo is equipped with Accsoon stability, seamlessly supporting communication for teams of up to 9 people. With its all-new product design and enhancements from ENC technology, the Accsoon CoMo, with no need of base station, can provide a 400-meter (1312 ft) line of sight connection range and over 10 hours of noisefree communication experience. The Accsoon CoMo could be your perfect team communication solution for added convenience and better connectivity.

#### **Product Features**


- Flip-to-mute microphone
- 10+ hours of extended battery life
- Environmental noise cancellation(ENC)
- 1312ft line of sight transmission range
- Full duplex real-time audio communication
- 1 host headset can support up to 8 remote headsets
- Industry leading wireless stability for easier real time communication
- Ergonomic headset design, compatible for both left ear and right ear wearing
- Simply power on for immediate use, rebuild connection automatically after signal loss

## Instruction

#### **Accsoon CoMo**

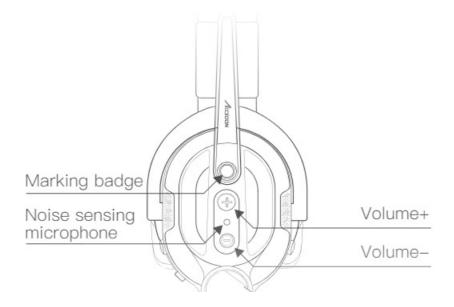


Green badge for the host headset Grey badge for remote headsets

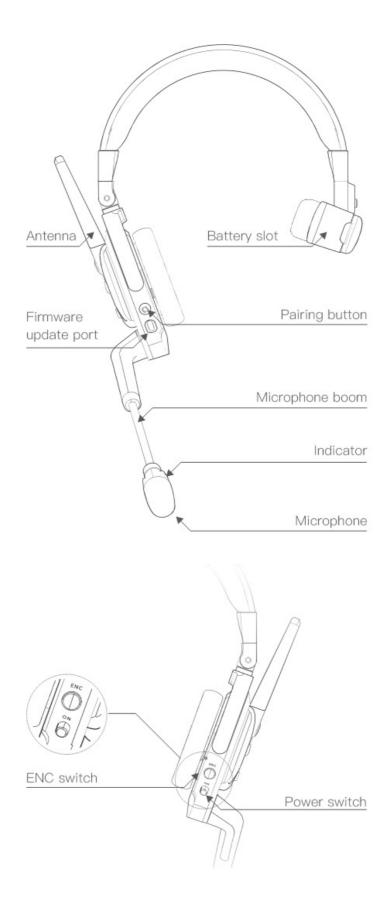

### First use


## STEP 1

As the picture shown, open the battery slot and put in the battery.

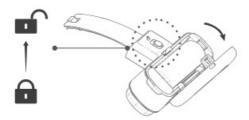

#### STEP 2

Push the host and remote headsets' power switch to "ON", the headset will be powered on and play "Power On" voice prompt. Indicator will show a slow green flicker.

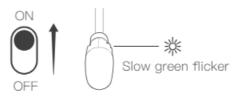


#### STEP 3

Headset connection

- Host and remote headsets are pre-paired in default. The headsets will automatically start connecting when powered on.
- The remote headsets will play "Connected" voice prompt once successfully connected to the host headset.

#### STEP 4

Turn on the microphone

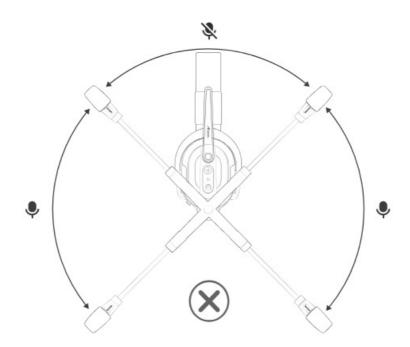

• As the picture shown, when the microphone boom is placed at 55°, the inidicator will remain on with red light and the microphone is muted.

- To turn on the microphone, push the microphone boom forward to 55° the indicator will remain on with a green light.
- You will hear a "Toot" voice prompt, when the microphone is turned on/off.

Note Maximum swivel angle of the boom axle is 115°.

#### **Volume control**

- 1. Push the volume "+" or "-" button on the side of the headset to turn the volume up or down.
- 2. The volume "+" or "-"button on the headsets can only be used for hearing volume control, not the microphone volume nor the sound effect.
- 3. The headsets have 7-level adjustable volumes. and is initially set to level 4. The headset can remember the last setting of the volume level.
- 4. The environmental noise cancellation (ENC) is set to be ON by default when the headset's powered on. You can manually turn off the ENC mode by clicking the ENC switch button.



Indicator status and voice prompt

Manual Instruction	Indicator	Voice Prompt
Push the power switch to "ON"	Disconnected Slow green flicker Connected Green light stays on	Power On
Push the power switch to "OFF"	Indicator off	Power Off
Lift up the mic boom Mic mute on Put down the mic boom Mic mute off	Mute on: Red light stays on Mute off: Green light stays on	Toot
Connection success	Indicator stays on (light color foll ows microphone status)	Connected
Connection drops	Slow green flicker	Disconnected (Remote headset only)
Pairing	Fast green flicker	Pairing
Pairing success	Indicator stays on (light color foll ows microphone status)	Pairing success
Press the "ENC" Button	/	ENC On Noise Cancelling On ENC Off Noise Cancelling Off
Battery Level lower than 10%	Slow red flicker	Battery Level Low

## **Specifications**


Label	Description
Communication Range	1312ft / 400m (with no barriers and interference))
Battery Capacity	2320 mAh (single battery)
Operating Time	Remote headset: 13 hour Host headset: 10 hour (4 remotes in connection) Host headset: 8 hour (8 remotes in connection)
Signal-to-noise Ratio	>65dB
Microphone Type	Electret
Communication Sampling Rate	16KHz/16bit (8 remotes in connection)
Weight	170g (single headset with battery)
Size	241.8 x 231.5 x 74.8 mm (single headset)
Operating Temperature	-15~45°C

#### **FAQ**

#### **Connection drops**

- 1. If the host headset was powered off, or the distance between host and remote headsets is too far, the remote headsets will be disconnected from the host, and the indicators on the remote headsets will turn into slow green flickers and play "Disconnected" voice prompt.
- 2. When the remote headsets are disconnected from the host headset, you can reconnect the headsets by powering on the host headset or put the host and remote headsets back into the communication distance, the remote headsets will automatically reconnect to the host headset. Remote headsets' indicator will stay on with green light and will play "Connected" voice prompt.

#### Pairing and host headset memory clearing Pairing

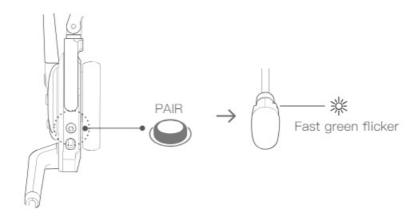

- 1. Switch the power button on both the host and remote headsets to "ON".
- 2. Press and hold the pairing button on the host headset for 3 seconds to enter pairing mode. The indicator will show fast green flickers, with no prompt voice.
- 3. Press and hold the pairing button on remote headsets for 3 seconds to enter pairing mode. The remote headsets will play "Pairing" voice prompt, and the indicator will show fast green flickers.
- 4. If the pairing succeed, remote headsets will play "Pairing success" voice prompt and the indicator will show slow green flickers.
- 5. Please press and hold the pairing button on the host headset for 3 seconds to exit pairing.

Note: Please ensure you exit pairing mode before using Accsoon CoMo for communication.

Memeorize pairing information



- 1. One host headset can connect and memorize 8 remote headsets at the maximum. If your host headset's memory isn't fully used, you can follow previous guideline to pair and add new remote headset(s).
- 2. A single remote headset can only store pairing information of one host headset at a time. To pair it with a new host headset, please follow the instructions in previous guideline to clear the remote headset's pairing memory and then pair it with the new host headset.

**Note:** If you have multiple Accsoon CoMo host and/or remote headsets, follow previous guideline to arrange the pairing memory of each host/remote group. Two seperate groups of Accsoon CoMo can work in the same place without interference.

#### Pairing overtime

The pairing mode will last for 120s. The headsets will automatically exit pairing mode. If host/remote headsets are unable to pair up within the time limit, follow previous guideline to restart pairing.

#### Pairing memory clearing

If your host headset has already memorized 8 remote headsets, to replace the remote headsets, please follow the steps below to clear the existing pairing memory.

- 1. Switch your host headset power switch to "ON".
- 2. Press and hold both the volume up "+" and down "-" button for 3 seconds. The host headset's indicator will

alternately flash red and green lights, indicating that the host headset has entered the memory clearing process

3. Once the pairing memory is fully cleared, the host headset's indicator will change to slow green flickers.

**Note:** You only need to execute the pairing memory clearing process on the host headset. After you fully cleared the memory of the host headsets, please follow previous guideline to pair up the host and remote headsets, The new pairing information will be automatically memorized after successful pairing.

#### Warranty

#### Warranty period

- 1. If product quality related issues occur within 15 days of receiving the product, Accsoon provides complimentary maintenance or replacement.
- 2. Under proper use and maintenance, from the date of receipt, Accsoon provides a one-year warranty on the main product (headset, battery charger) and a three-month warranty on the battery. Free maintenance service is available during the warranty period.
- 3. Please keep the proof of purchase and the user manual.

#### Warranty exclusion

- 1. Out of warranty period (If the proof of purchase is unavailable, the warranty will be calculated from the date the product is delivered from the manufacturer).
- 2. Damage caused by use or maintenance of not following the requirements of the user manual.
- 3. Accessories not covered by warranty (ear cushions, windscreens, headset sleeves, storage bags and containers).
- 4. Unauthorized repair, modification or disassembly.
- 5. Damage caused by force majeure such as fire, flood, lightning strike, etc.

#### After sales

- Please contact your local Accsoon authorized dealers for after-sales service. When there is no authorized dealer available in your region, you can contact Accsoon through email at <u>support@accsoon.com</u> or contact our customer service through our website (<u>www.accsoon.com</u>).
- 2. You can get detailed solutions from authorized dealers or Accsoon.
- 3. Accsoon reserves the right to review the damaged product.

#### Safety information

- 1. When operating this equipment, read and follow all the instructions in this manual.
- 2. Use only accessories/batteries/chargers specified or recommended by Accsoon.
- 3. Do not expose to moisture, excessive heat or fire.
- 4. Keep away from water and other liquids.
- 5. Keep the equipment properly during lightning storms or when unused for long periods of time.
- 6. Please do not use the product in a place overheating, under cooling or with lots of moisture, or nearby strong magnetic devices.

7. To reduce the risk of fire or electric shock, refer servicing to qualified service personnel.

#### **Contact Us**

Facebook: Accsoon

Facebook Group: Accsoon Official User Group

Instagram: accsoontech
YouTube: ACCSOON

Email: Support@accsoon.com

#### **Federal Communication Commission Interference Statement**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation. Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body. Operations in the 5.15-5.25GHz and 5.25-5.35GHz band are restricted to indoor usage only.



Certificate of Quality

This product is confirmed to meet quality standards and permitted for sale after strict inspection. QC Inspector



#### **Documents / Resources**



ACCSOON CoMo Wireless Intercom System [pdf] User Manual CoMo Wireless Intercom System, Wireless Intercom System, Intercom System, System

#### References

- ACCSOON ///
- ACCSOON / / /
- <u>O Accsoon Wireless Video Transmitter and Receiver for Camera, Motorized Camera Slider, Wireless Follow Focus Systems- Official Site</u>
- User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.