



ACCUREX RX series Weighing Indicators User Manual

[Home](#) » [ACCUREX](#) » ACCUREX RX series Weighing Indicators User Manual 

Contents



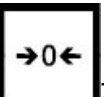

- [1 ACCUREX RX series Weighing Indicators](#)
- [2 Keypad Functions](#)
- [3 Display Status](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)
- [5 Related Posts](#)




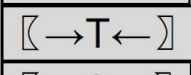


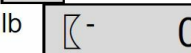

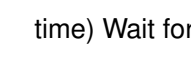
ACCUREX RX series Weighing Indicators





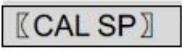
Keypad Functions


 

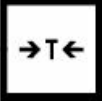
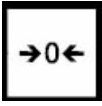

-  Off function.
-  On function and function selection during normal operation and configuration.
-  Zero display and set zero point or enter a tare value.
-  A weight is tare and display net weight.

Display Status

	Mains power is applied to the indicator.
	A weight has been tarred and display the net weight.
	Zero display.
	Weight is stable.
	The display is temporarily set to high resolution.
	The unit of weighing is lb.
	

Calibration

- Press the  key continuously and switch on the device (do not release the key at any time) Wait for a short beep and release suddenly.
- Let the counting cycle continue and when finished press the  key.  will be displayed.

- Press the  key. CAL 00 will come out.
- Press the  key. The unit will perform a zeroing operation and the weight to be calibrated will be displayed (default total capacity – e.g. 60.00)
- If you want to change the calibration value, press the  key and 0000.00 will appear.
- Press  until the digit to be modified flashes, then press to modify it  to the desired value (e.g. 10k = 0010.00) Place the calibration weight on the scale.
- Once the weight has been deposited, press the  key and the calibration will be performed and the actual weight will appear. Calibration completed.

A/D Counts Display

- Press ON/* three times, display -A-d- , press →T← , display 123456 , A/D (Digital/Analog) counts 123456, press the ON/* to return to weighing mode.

Select Display Mode

- In normal weighing status, press ON/* for 2 seconds, unit of weighing is lb, press ON/* for 2 seconds, unit of weighing is kg.

Zero

- When the weight is stable, press →0← , display 0.00 , zero status LED is turned on. Zero range is $\pm 2\%$ FS.

Tare and Remove Tare

- **Tare:** When Tare status LED is off and the weight is ≥ 0 and stable, press →T← to acquire tare and switch to net mode, the tare status LED is turned on.
- **Remove tare:** When Tare status LED is on, press →T← will switch to gross mode and removed tare. The tare status LED is off.

Battery Capacity

- When after turn on indicator, display bt 85 is battery capacity.

Low Battery Warning


- When the battery is capacity less than 10% of full charge, display will flash. When the battery has no power, the indicator display bAtt turn off immediately.

LED Error Code

- Display OUEr , weight > FS + 9d, display –OUEr , weight < -2% FS, Display Error , calibration error.

Gram Precision S.L. Travesía Industrial, 11 · 08907 Hospitalet de Llobregat · Barcelona (Spain) Tel. +34 902 208 000 · +34 93 300 33 32 Fax +34 93 300 66 98 comercial@gram.es www.gram-group.com

Documents / Resources

	<p>ACCUREX RX series Weighing Indicators [pdf] User Manual RX series Weighing Indicators, RX series, Weighing Indicators, Indicators</p>
---	--

References

- ▼ [Gram Group - Gram Group · Weighing Systems](#)

Manuals+.