



acecomputers Raptor XI Portable Workstation Instructions

[Home](#) » [acecomputers](#) » acecomputers Raptor XI Portable Workstation Instructions 

Contents

- [1 acecomputers Raptor XI Portable Workstation](#)
- [2 Product Information Raptor XI Portable Workstation](#)
- [3 Power Management](#)
- [4 Battery Insertion](#)
- [5 Documents / Resources](#)
- [6 Related Posts](#)



ACECOMPUTERS

acecomputers Raptor XI Portable Workstation





Product Information Raptor XI Portable Workstation

The Raptor XI Portable Workstation is a portable computer designed for professional use. It features a battery that provides power to the device and can be removed if needed. The device also has a bottom cover that can be removed for battery removal.

Power Management

The Raptor XI Portable Workstation is designed to manage power effectively. To remove the battery, follow the instructions below:

1. Turn off the computer and carefully turn it over.
2. Slide the latch 1 in the direction of the arrow.
3. Slide the latch 2 in the direction of the arrow and hold it in place.
4. While holding the latch 2 in place, slide the battery out from point 3 in the direction of the arrow 4.
5. Remove the battery.

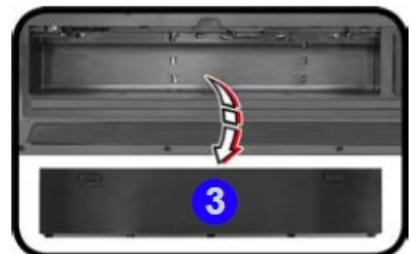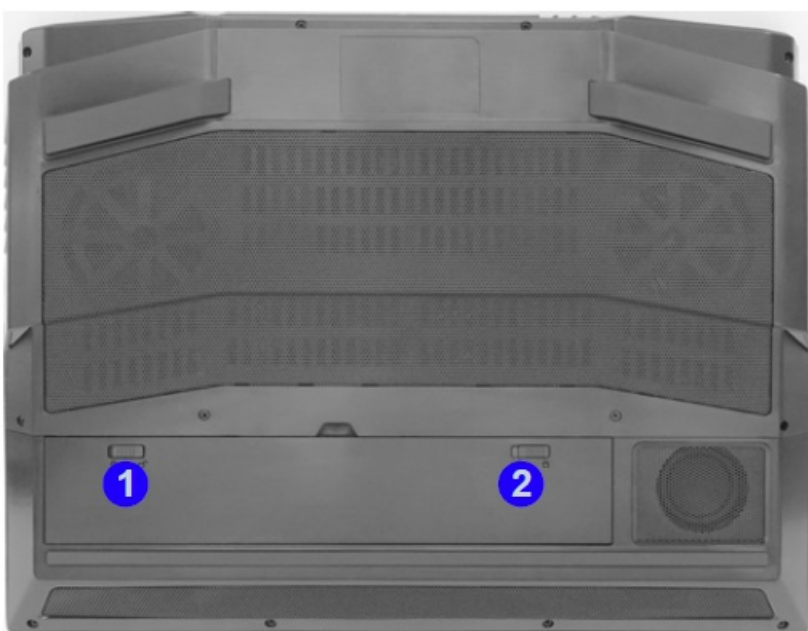

Note that removing any cover(s) and/or screw(s) for device upgrade may violate the terms of your warranty. If you need to replace or remove the hard disk, RAM, optical device, or other components, please contact your distributor/supplier for further information.

Battery Insertion

To insert the battery, follow the instructions below:

1. Orientate the battery as illustrated and align it with the edges of the battery compartment.
2. Insert it into the compartment in the direction of the arrow 1 (it should click into place).
3. Slide the latch 2 in the direction of the arrow into the lock position.



Bottom Cover Removal Warning

Do not remove any cover(s) and /or screw(s) for the purposes of device upgrade as this may violate the terms of your warranty. If you need to replace/ remove the hard disk/ RAM/optical device etc., for any reason, please contact your distributor/ supplier for further information

Documents / Resources



[acercomputers Raptor XI Portable Workstation](#) [pdf] Instructions
Raptor XI Portable Workstation, Raptor XI, Portable Workstation, Workstation