



[Home](#) » [ACEFAST](#) » **ACEFAST S1 Button Type Positioning Device User Guide** 

Contents [[hide](#)]


- [1 ACEFAST S1 Button Type Positioning Device](#)
- [2 Product information](#)
- [3 User manual](#)
- [4 Battery](#)
- [5 Specifications](#)
- [6 FCCS statement](#)
- [7 CONTACT](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)



ACEFAST S1 Button Type Positioning Device



Product information

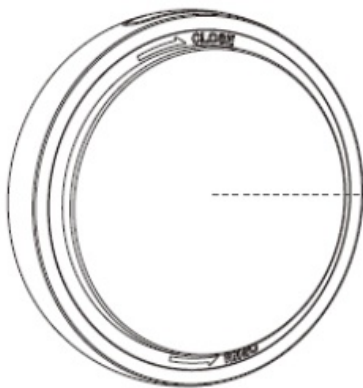

Battery cover
Rotate to open
(Battery cover needs to be
placed facing outwards
when the case is fitted)

Power key



Thank you for purchasing this product,

Please read this user manual carefully and keep it for future reference. If you need any assistance, please contact our support team with your product model number and

Amazon order number.

User manual

Note: iOS or macOS is version 145 or above.

- Place the product near your Apple device (such as an iPhone)-
- Turn on BT on your Apple device (such as an iPhone) and connect to the Internet-
- Remove the insulation sheet, tap the product switch button to turn on the power, and you hear a beep.
- In the 'Find' APB, click Add Item-Other supported items.
- Click •Continue.
- Name your product and click 'Continue',
- Select an emoji.
- Click Continue then click "Finish" to complete the pairing.

Battery

The product contains a battery in the shape of a coin. During the service life of the product. The battery may need to be replaced. Only the same type of battery can be replaced correct negative and positive connections. (CR2032) and the rated battery.

Other tips

1. To switch from working mode to disabled mode (airplane mode), just remove the battery.
2. TO switch from disabled MCDE (airplane mode) to working mode, reinstall the battery, and the product will be successfully paired.
3. Press and hold the switch button, knowing that you hear 1 tone, then 2 consecutive tones, and then 3 consecutive tones, continue to press for 5 seconds. When you hear a long tone, release the switch button, and the device will be restored to factory settings.
4. To delete a product from your Apple device, open the Find* APR select "Items", find the device, then scroll down and click Temove This Device".
5. If the product cannot connect to the Find My application, please follow the instructions in Point 3, perform a factory reset, and then restart the pairing process.

Specifications

Model: S1	Battery capacity: 230mAh
Product size: $\phi 31 \times 9.3\text{mm}$	Battery voltage: 3V
Product weight: 8g	Product power consumption: 2 μ Ah
Product material: ABS	Standby time: 10-12 months
Battery type: CR2032 button battery	BT distance: $\leq 20\text{m}$

Legal Requirements

- Use of the Works with Apple badge means that a product has been designed to work specifically with the technology identified in the badge and has been certified by the product manufacturer to meet Apple Find My network product specifications and requirements.
- Apple is not responsible for the operation of this device or use of this product or its compliance with safety and regulatory standards. Apple, Apple Watch, iPad, iPadOS, iPod touch, Mac, and macOS are trademarks of Apple Inc., registered in the U.S. and other countries. ICS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.

FCCS statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates and uses can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected,
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. The operation is subject to the following two conditions

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

Warranty & Customer Support

- For questions, support. or warranty claims, contact us at the mail below
- Support@acefast.com

CONTACT

- Shenzhen Houshuxia Technology Co, Ltd
- support@acefast.com
- Rm203, 2nd Floor Building C., Youth Pioneer Park,
- Jianshe East Road, Tsinghua Community
- Longhua Street, Longhua District, Shenzhen P. R. China
- Shenzhen 518000@China

Documents / Resources



[ACEFAST S1 Button Type Positioning Device \[pdf\]](#) User Guide

S1, S1 Button Type Positioning Device, Button Type Positioning Device, Positioning Device

References

- [User Manual](#)

◆ ACEFAST, Button Type Positioning Device, Positioning Device, S1, S1 Button Type Positioning

■ ACEFAST Device

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.