

 


ACEFAST Z4 PD218W GaN 3xUSB C Plus USB A Desktop Adapter User Guide

[Home](#) » [ACEFAST](#) » ACEFAST Z4 PD218W GaN 3xUSB C Plus USB A Desktop Adapter User Guide 

ACEFAST

Z4

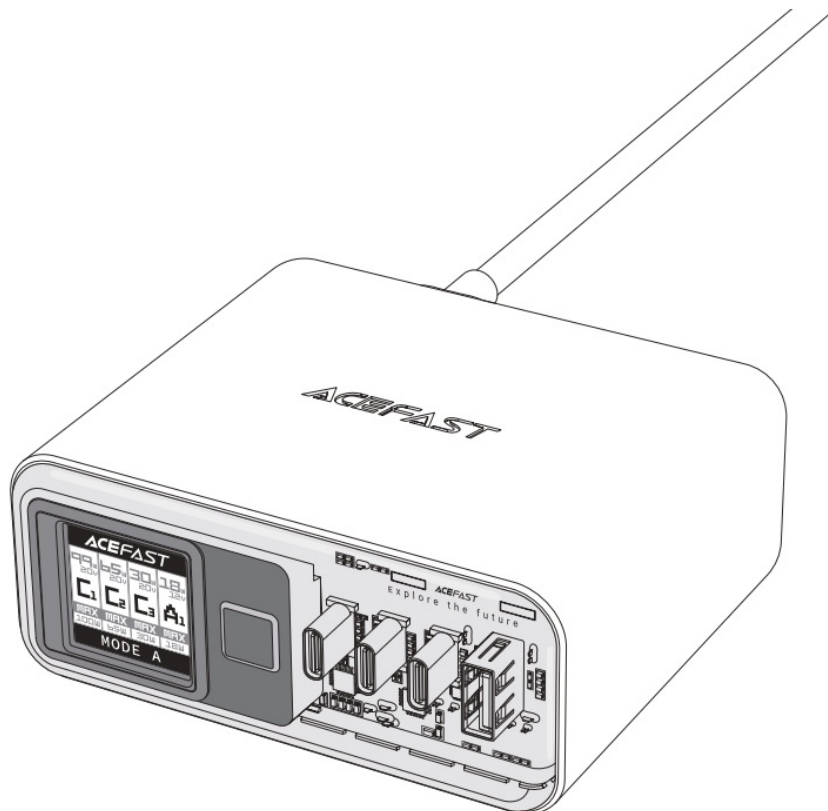


Quick Start Guide

PD218W GaN (3xUSB-C+USB-A) desktop adapter

Contents

- 1 Product Diagram
- 2 Package Contents
- 3 Specifications
- 4 Getting Started
- 5 Use environment
- 6 Warranty & Customer Support
- 7 Documents / Resources
 - 7.1 References

 Product Diagram

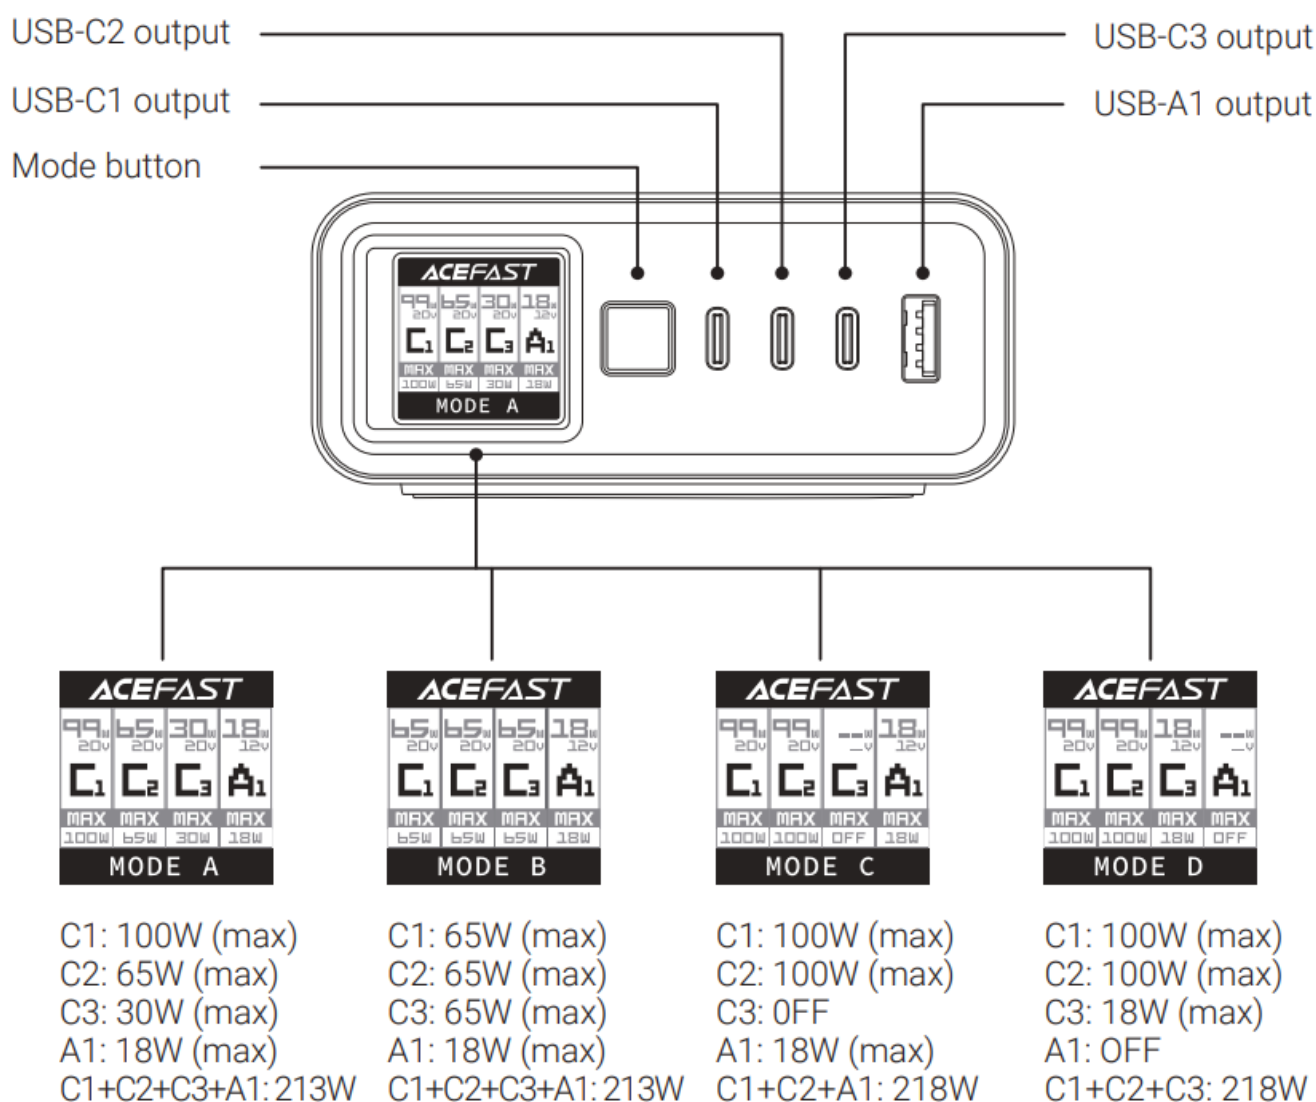

Package Contents

PD218W GaN (3xUSB-C+USB-A) desktop adapter×1

User Manual×1

Thank you for purchasing the PD218W GaN (3xUSB-C+USB-A) desktop adapter.

Please read this user manual carefully and keep it for future reference. If you need any assistance, please contact our support team with your product model number and Amazon order number.

Specifications

Input		AC110V-240V, 50/60Hz, 2.5A
Output Mode A	CI	3.3-21V=== 5A(PPS), 5V/9V/12V/15V=== 3A, 20V=== 5A (100W max)
	C2	3.3-11V=== 5A(PPS), 5V/9V/12V/15V=== 3A, 20V=== 3.25A (65W max)
	C3	3.3-11V === 3A(PPS), 5V/9V=== 3A, 12V=== 2.5A, 15V-2A, 20V=== 1.5A (30 W max)
	AI	5V=== 3A, 9V=== 2A, 12V=== 1.5A (18W max)
	CI +C2+C3+A1	100W+65W+30W+18W (213W max)
Output Mode B	CI /C2	3.3-11V=== 5A (PPS), 5V/9V/12V/15V=== 3A, 20V=== 3.25A (65W max)
	C3	3.3-11V=== 3A (PPS), 5V/9V/12V/15V=== 3A, 20V=== 3.25A (65W max)
	AI	5V=== 3A, 9V=== 2A, 12V=== 1.5A (18W max)
	CI +C2+C3+A1	65W+65W+65W+18W (213W max)
Output Mode C	CI /C2	3.3=== 21V=== 5A (PPS), 5V/9V/12V/15V=== 3A, 20V=== 5A (100W max)
	AI	5V-3A, 9V-2A, 12V-1.5A (18W max)
	CI +C2+A1	100W+100W+18W (218W max)
Output Mode D	CI /C2	3.3=== 21V=== 5A (PPS), 5V/9V/12V/15V=== 3A, 20V=== 5A (100W max)
	C3	3.3-11V=== 2A (PPS), 5V=== 3A, 9V-2A, 12V=== 1.5A (18W max)
	CI +C2+C3	100W+100W+18W (218W max)
Total output		218W (max)
Support fast charge protocols		
Output CI /C2/C3		PD 3.0/iP2.4A/DCP/AFC/SCP/QC2.0/QC3.0/QC4+/PPS/SAM 5V-2A
Output AI		iP2.4A/DCP/AFC/SCP/QC2.0/QC3.0/SAM 5V-2A

Getting Started

1. Insert the AC cord of the adapter into the power socket and the screen will light up.
2. Connect the charging cable (not included) to the device that needs to be charged and plug it into the adapter.
The screen will display the output voltage and power.
3. The product has four charging modes: A, B, C and D. Press the button to switch between modes. Each mode has different output power. Select the most suitable mode for charging according to your device.
4. The screen brightness will automatically adjust according to the surrounding environment.
5. Double-click the button to turn off the screen.
6. Disconnect the device after use.

Use environment

1. Working environment temperature: use at altitudes below 2000 meters and under non-tropical climate conditions.
2. The device is only suitable for indoor use.

3. Storage temperature: -20 °C to 40 °C.

Note:

Please read all instructions and warnings before using this product. Improper use will cause damage to the product.

1. Please do not store this product in high temperature, strong light, or strong magnetic environments. Avoid placing it in harsh environments such as near a heat source. If it gets wet, please let it dry naturally before using it again.
2. When over-voltage, over-current or over-temperature occurs during charging, the charger will automatically stop charging to avoid damage. When returning to the normal state, charging will continue.
3. Do not disassemble, repair or modify this device by yourself.
4. Do not touch the power adapter with wet hands or immerse it in water or any other liquids. Avoid electric shock, fire or damage to the device.
5. It is prohibited to loop or wrap the power cord to avoid overheating of the power cord.

Product Care

Keep away from liquids and extreme heat

Warranty & Customer Support

For questions, support, or warranty claims, contact us at the mail below that corresponds with your region. Please include your Amazon order number and product mode number.

Amazon US orders: support1@acefast.com

Amazon EU orders: support2@acefast.com

Amazon UK orders: support3@acefast.com

Amazon CA orders: support4@acefast.com

Amazon JP orders: support5@acefast.com

Other region orders: support6@acefast.com


*Please note, ACEFAST can provide after sales service for products purchased from any official ACEFAST store. If you have purchased from local seller, you can also contact them directly for service or warranty issues.

Shenzhen Houshuxia Technology Co., LTD

www.acefast.com | support@acefast.com

Rm203, 2nd Floor, Building C, Youth Pioneer Park,
Jianshe East Road, Tsinghua Community,
Longhua Street, Longhua District, Shenzhen, P. R. China
Shenzhen, 518000, China

 Documents / Resources

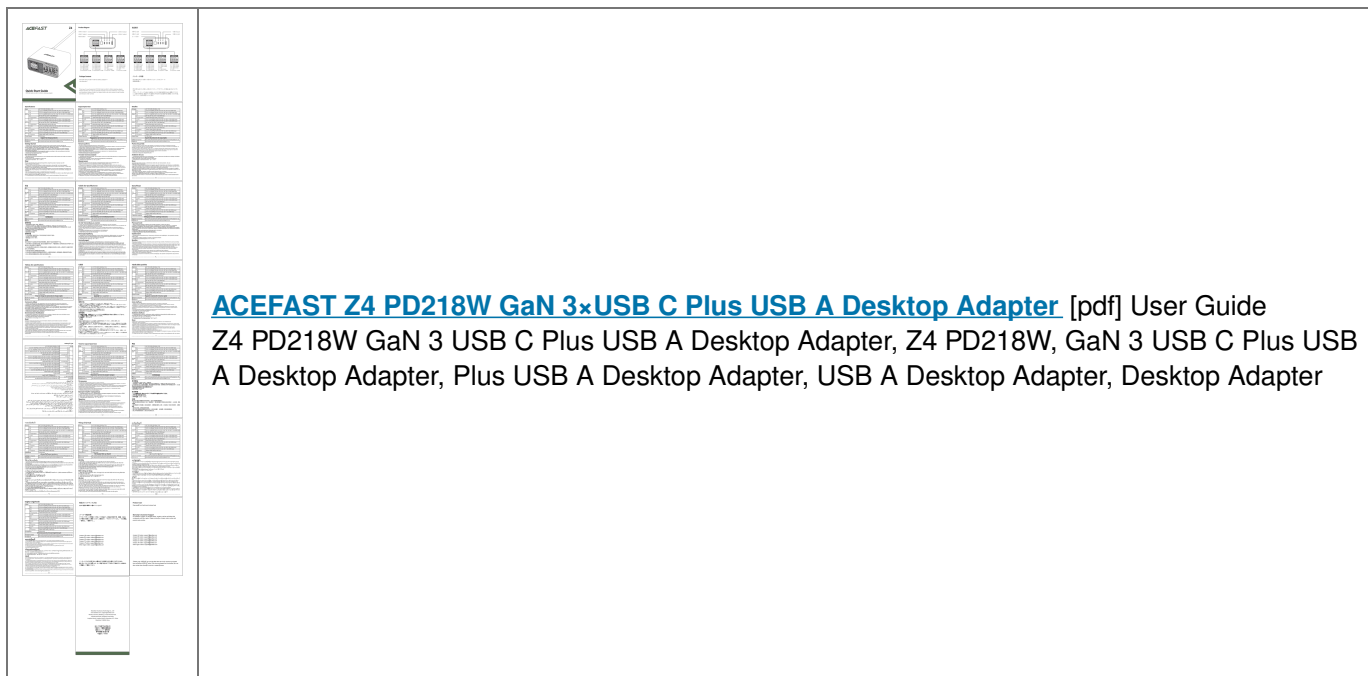

[ACEFAST Z4 PD218W GaN 3xUSB C Plus USB A Desktop Adapter](#) [pdf] User Guide
Z4 PD218W GaN 3 USB C Plus USB A Desktop Adapter, Z4 PD218W, GaN 3 USB C Plus USB
A Desktop Adapter, Plus USB A Desktop Adapter, USB A Desktop Adapter, Desktop Adapter

References

- [▲ ACEFAST - High End Accessories](#)
- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.