



ACEMAGIC AX15 PC Portatile 16GB DDR4 RAM 512GB SSD Notebook User Manual

[Home](#) » [ACEMAGIC](#) » ACEMAGIC AX15 PC Portatile 16GB DDR4 RAM 512GB SSD Notebook User Manual 

ACEMAGIC User Manual AX15

Contents

- [1 AX15 PC Portatile 16GB DDR4 RAM 512GB SSD Notebook](#)
- [2 Appearance](#)
- [3 Using the Touchpad](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)

AX15 PC Portatile 16GB DDR4 RAM 512GB SSD Notebook



Welcome

Thank you for choosing the ACEMAGIC Notebook . This Notebook is designed to provide distinct and different experiences for both study and entertainment

This manual will introduce the main function, operation method and other information. Please read this manual carefully before using the device. This user guide describes features that are common to most models.

Package Contents

- Notebook
- Charger
- User Manual

Product Specifications

Processor: Intel Alder Lake-N9S

Memory Storage: 16GB RAM 512GB ROM

Screen Resolution: 15.6" IPS FHD 1920×1080

Build-in Camera: 1MP

Lithium-ion Polymer Battery: 38Wh

Wi-Fi: 802.11/b/g/n/ac WiFi 5 / Bluetooth: 5.0

Interfaces:

1xType C charge jack

2xUSB 3.2, 1xUSB20, 1xType-C data, 1xType A HDMI, 1xHeadphone jack, 1XTF card reader-up to 128G8

2xStereo speakers 4R 1.5w, 2xMicrophone

Powerful adaptor: 19V/2.1A

Notice

1. Do not store the Notebook in extreme hot, cold, dusty, dry, or humid environment.
2. Handle the Notebook with care. The device can be damaged if dropped, burned, punctured, or crushed, or if it comes in contact with liquid. Do not put heavy object on Notebook or damage it. Consider using a case or cover to protect the device.
3. Do NOT attempt to open the Notebook by yourself. Disassembling the device may damage it or cause injury to you. We do NOT shoulder the responsibility of data loss by unauthorized repairs or wrong operation.
4. The storage capacity on the operating system will be smaller than the storage specified. This is normal and standard as the software takes some space.
5. Please note that the new battery is only able to achieve best performance after two or three full charge and

discharge cycles. During the first three full charge and discharge cycles, please make sure to charging for at least 8-10 hours. After this, the battery can be fully charged in about 4 cycles. This ensures that the lithium battery will achieve its best performance in the future.

6. Please charge the battery under below situations:

- The battery icon shows a low battery level
- The Notebook powers off automatically




Do NOT throw the device in Household waste. The symbol of the crossed out wheeled bin indicates that device should not be placed in municipal waste. Check local regulations for disposal of electronic products.




The Notebook contains a lithium-polymer battery that is flammable. Do NOT throw the Notebook in fire. Do NOT short circuit the contacts.

Appearance

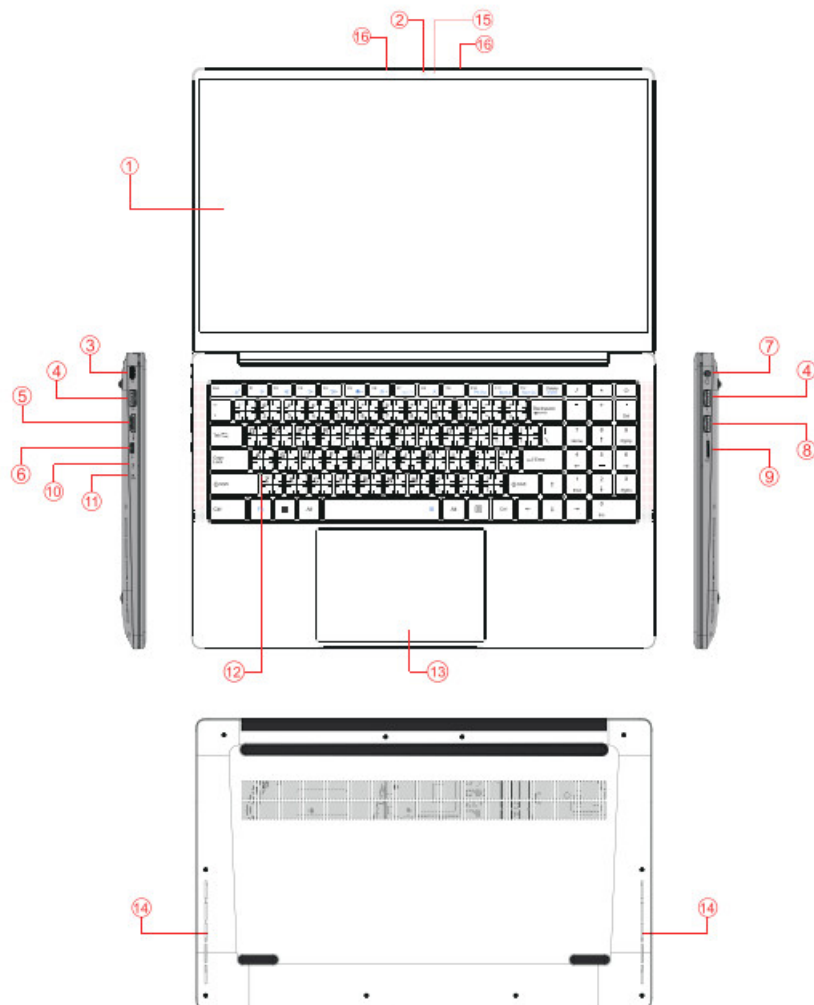

1. Display	9. TF Card
2. Front Camera	10. Power Indicator
3. TYPE-C Power in	11. Charging Indicator
4. USB 3.2*2	12. Keyboard
5. HDMI	13. Touchpad
6. TYPE-C	14. Speakers
7. Headphone Jack	15. Camera LED
8. USB 2.0	16. Mic


Using the Touchpad

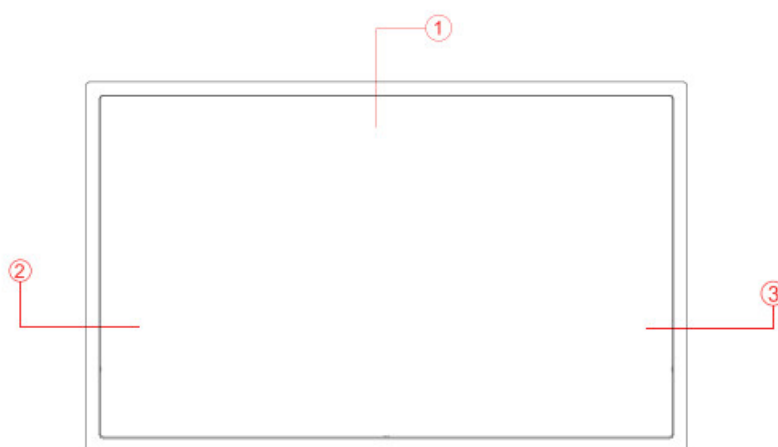


The touchpad with its buttons is a pointing device that functions as an optional mouse, which can perform navigation, scrolling and selection functions. The components of the touchpad are described as follows,

No	Component	Function
1	Touchpad	Moves the pointer, selects or activates items on the screen
2	Left Touchpad Button	Equivalent to the left button of a mouse button
3	Right Touchpad Button	Equivalent to the Right button of a mouse button


To use the touchpad as a mouse, press the left and right bottom button, which provide the same click functions as an external mouse does. To move the pointer, slide one finger with slight pressure across the TouchPad in the direction you want the pointer to go.

-  Do not use a pen, pencil, marker or any object on the touchpad, Use only your fingertip.
- To set the touchpad preferences in Windows 11, select Settings > Control Panel > Hardware and Sound > Mouse

Fonction	Left Touchpad Button	Right Touchpad Button	Touchpad
Select	Click once	—	Tap once
Execute	Click twice quickly	—	Tap twice quickly
Drag	Click once and hold, then slide your finger across the touchpad to drag.	—	Tap twice quickly and hold, then slide your finger across the touchpad to drag.
Display the contextual menu	—	Click once	—
Open the charms (Search, Share, Start, Devices, Settings).			Swipe in from the right edge.
Open a recently used app.			Swipe in from the left edge. Keep swiping to switch between all of your recently used apps.
See a list of recently used apps.			Slide in from the left edge without lifting your finger, and then push the app back toward the left edge.
Open another app at the same time.			Slide in from the left edge without lifting your finger and drag the app until a divider appears. Then move the app where you want it/ and slide the divider to adjust the app size.
Show commands for the current apps, like New and Refresh			Swipe in from the top or bottom edge
Close an app.			Slide down from the top edge without lifting your finger, and then drag the app to the bottom of the screen

-  The touchpad is a pressure sensitive device that requires proper care to avoid damage.
- Do not rest heavy objects on the touchpad or its buttons
- Do not scratch the touchpad with sharp-pointed objects or your fingernails.

ACEMAGIC

<div>User Manual</div> <div></div> <div>AX15</div>	<p>ACEMAGIC AX15 PC Portatile 16GB DDR4 RAM 512GB SSD Notebook [pdf] User Manual AX15 PC Portatile 16GB DDR4 RAM 512GB SSD Notebook, AX15, PC Portatile 16GB DDR4 RAM 512GB SSD Notebook, Portatile 16GB DDR4 RAM 512GB SSD Notebook, 16GB DDR4 RAM 512GB SSD Notebook, DDR4 RAM 512GB SSD Notebook, RAM 512GB SSD Notebook, 512GB SSD Notebook, Notebook</p>
---	---

References

- [User Manual](#)