



Acer W6 Predator Connect Wireless Router User Guide

[Home](#) » [Acer](#) » Acer W6 Predator Connect Wireless Router User Guide 

Contents

1	Acer W6 Predator Connect Wireless Router
2	1. Overview
3	2. Installation and Setup
3.1	2.1. Plug in the AC adapter.
3.2	2.2. Plug into an outlet.
3.3	2.3 Plug-in Internet cable.
3.4	2.4 Power on the device.
3.5	2.5 Connect to PredatorW6 Wi-Fi.
3.6	2.5 Connect to PredatorW6 Wi-Fi.
3.7	2.7 The device can be either setup via Predator Connect mobile App or via the browser web admin.
4	3. Initial Configuration
5	4. Dashboard
6	5. Hybrid QoS
7	6. Quick Setup
8	7. WAN
9	8. Wi-Fi
10	Disadvantages:
11	8.7 Smart Home Wi-Fi
12	9. LAN
13	10. IPv6
14	11. Home Network Security
15	12. SYSTEM
16	13. Troubleshooting
17	14. Appendix Factory Default Setting
18	15. Router Basic Specification
19	Specifications
20	FAQ (Frequently Asked Questions)
20.1	Q: What should I do if I forget my admin password?
20.2	Q: Can I change the Wi-Fi password after initial setup?
20.3	Q: How can I update the firmware of the router?
21	Documents / Resources
21.1	References

Acer W6 Predator Connect Wireless Router



USER GUIDE

All Rights Reserved. © 2023.


Important: This manual contains proprietary information that is protected by copyright laws. The information contained in this manual is subject to change without notice. Some features described in this manual may not be supported depending on the Operating System version. Images provided herein are for reference only and may contain information or features that do not apply to your device. Acer Group shall not be liable for technical or editorial errors or omissions contained in this manual.

1. Overview


Acer Connect series W6, a whole new Wi-Fi 6 Dual-band wireless router, is optimized for gamers with intensive features and simple setup steps via a 1-2-3 wizard. A new stylish 4-antenna desktop wireless router tuned for optimal gaming experience and for your household. Network Security protection is embedded. Live updates ensure your network is immune from malware and vulnerability threats 24-7. Smart home (IoT) devices can be set up on their Wi-Fi network. ACS (Automatic Channel Selection) dynamically chooses the most suitable channel for the W6d when you experience interference from nearby 5GHz SSIDs. Port forwarding profiles for most game consoles (PS5, XBOX, etc.) are readily available inside for gameplay. Hybrid QoS is the best fit for your Predator router, ensuring prioritization of your gaming traffic and bandwidth utilization. The VPN feature provides a secure connection for your device when surfing the website.

2. Installation and Setup


2.1. Plug in the AC adapter.

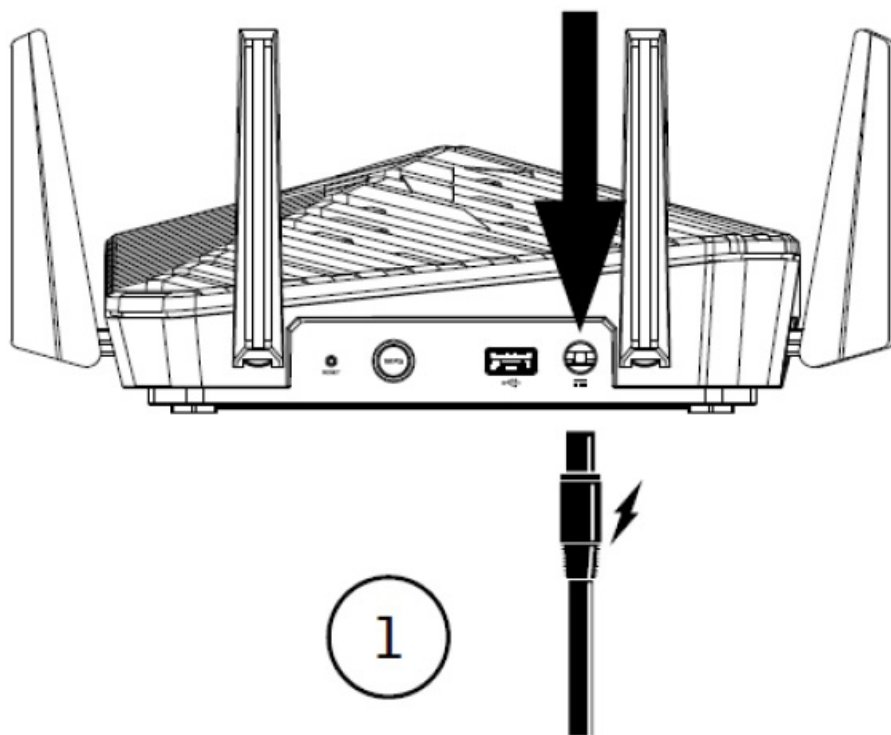


2.2. Plug into an outlet.

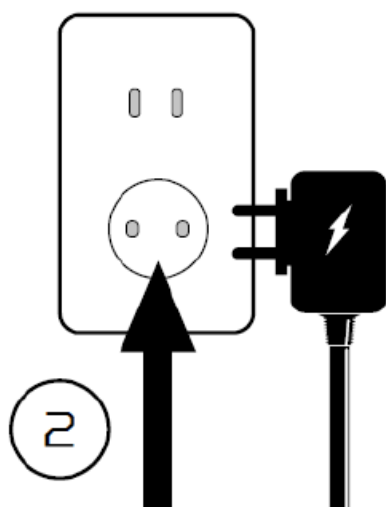


2.3 Plug-in Internet cable.

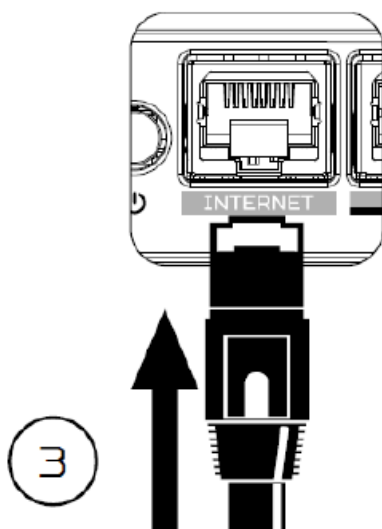

2.4 Power on the device.

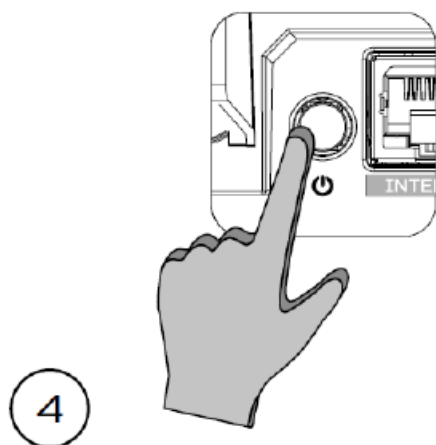

2.5 Connect to PredatorW6 Wi-Fi.

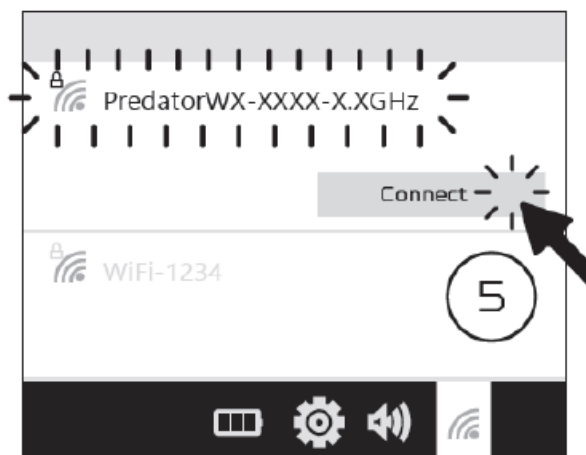

2.5 Connect to PredatorW6 Wi-Fi.



2.7 The device can be either setup via Predator Connect mobile App or via the browser web admin.

How to setup the router via Predator Connect Mobile App:

- Use a mobile device camera to scan the QR code below. Download the Predator Connect mobile App via Play Store or App Store.



- Open the Predator Connect Mobile App and follow the steps for registering an account. Go to your email inbox, review the registration email, and input the 4- digit registration code onto the mobile App. When the whole process is completed, you will be automatically signed in.
- Enable the mobile Wi-Fi function and scan the device QR-code printed on the bottom label. The default admin and Wi-Fi password will be automatically exported into the mobile app.(SSID: PredatorW6d-YYYY)
- Device setup completed.

Setup the router via browser:

- Please make sure that the wireless function on your laptop is already enabled.
- Check the device bottom label, and find the router's default SSID (PredatorW6d-YYYY) and password and then connect.
- Open the browser on your laptop/desktop, input the device web admin URL:
<http://acer-connect.com> or IP: <http://192.168.76.1>
- The device will automatically redirect to a quick setup wizard. Follow the easy 1-2-3 steps and get ready to access the internet.

Note: The admin login password requires modification within the setup wizard for a first-time use. Please create a strong password and keep it in a safe place. (New password cannot be the same as the prior one.)

Note: The router web admin portal will automatically lock after five consecutive incorrect attempts. You have to


power cycle the router to unlock the web admin.

- **Note:** The SSID Wi-Fi password can't be same as the admin login password.

Both the App & browser can help the router to do a quick setup. Web UI can execute all functions and settings of the router. Mobile App allows the user to remotely control some functions of the router and receive notifications.

3. Initial Configuration

Please log in to the Predator Connect W6d Web Portal (<http://acer-connect.com> or IP: <http://192.168.76.1>) by using the current valid Admin password. You can select the language of Web UI by clicking on the drop-down arrow.

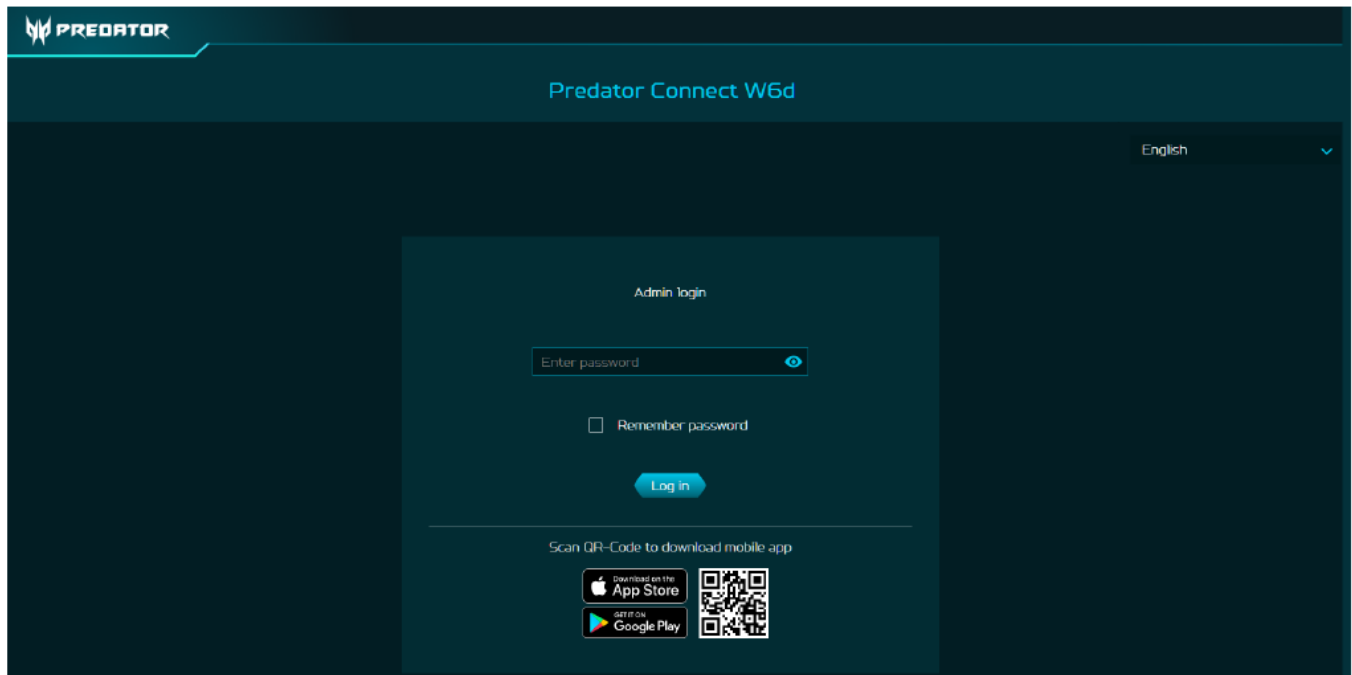


Enter the login password to see the dashboard and other settings of your Predator Connect W6d. The router will automatically guide you step by step on how to set up and configure internet access and basic network settings.

You can scan the QR code (on the login screen using your Android mobile or iPhone) to download the mobile app and manage your router remotely.

4. Dashboard


Once you have successfully logged in, the following key information will be displayed on the Predator Connect W6d dashboard.

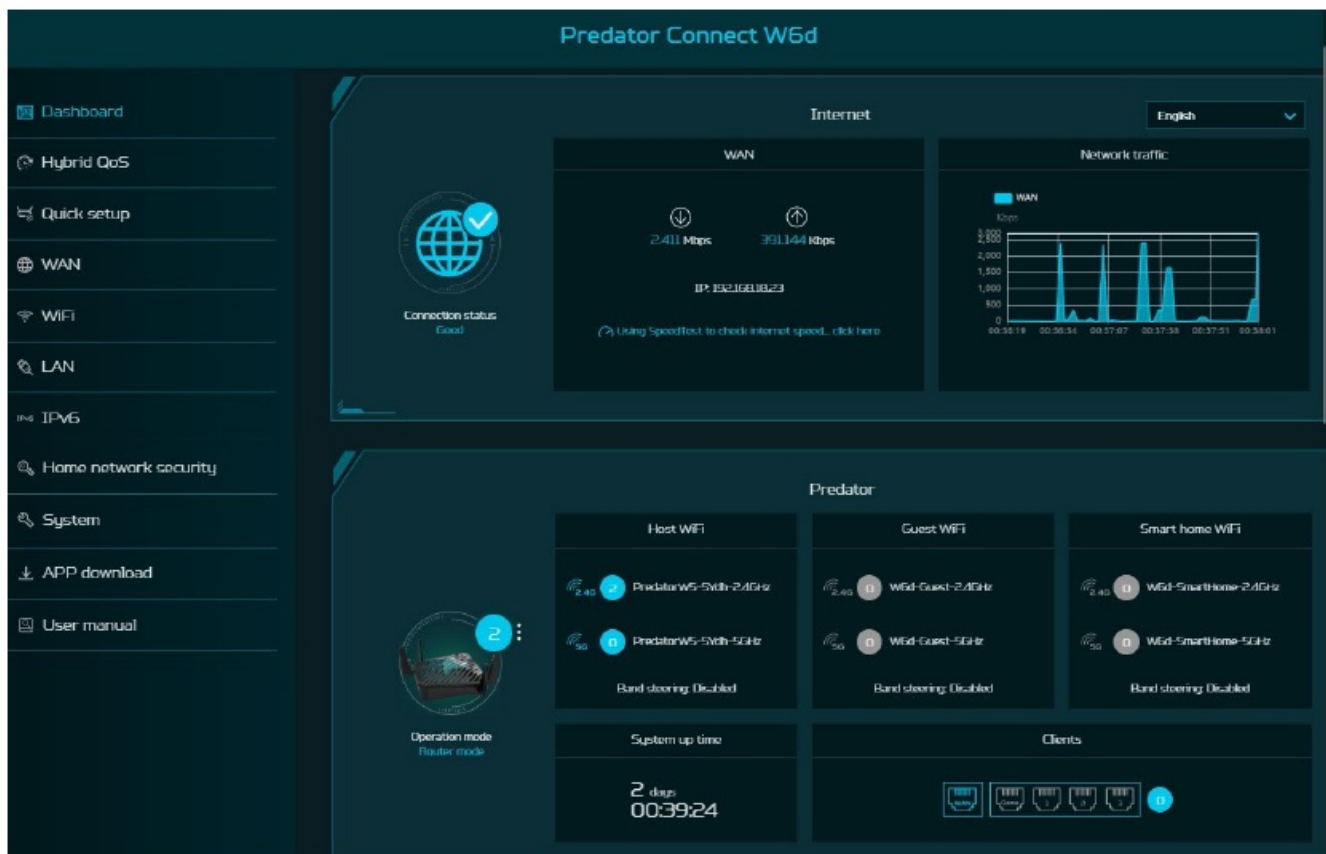

Connection Status: shows the current connection status of Internet.

WAN Status: shows WAN connectivity and Download/Upload speed and WAN IP.

System Uptime: shows a system uptime since the last reboot.

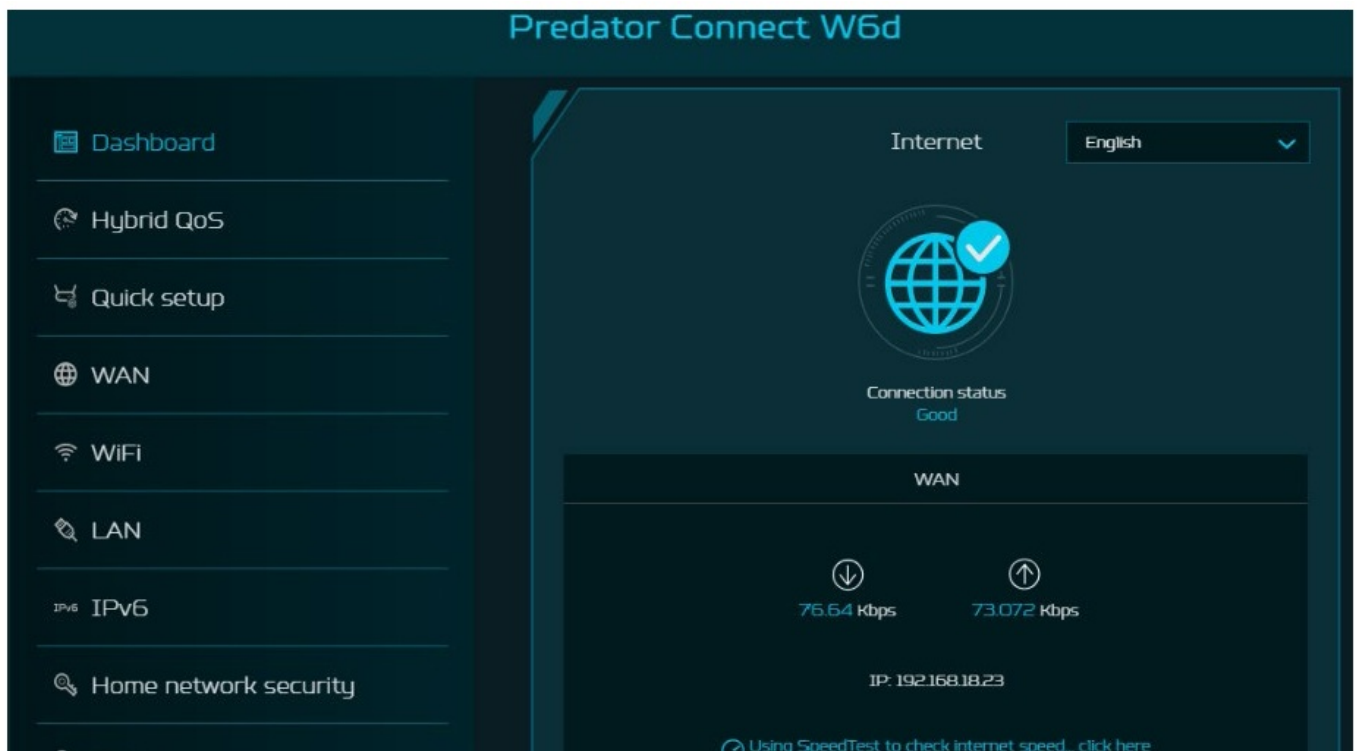


Wi-Fi Status: shows the number of wireless client devices connected with 2.4GHz and 5GHz bands.

LAN Status: quickly indicates the status of LAN ports. Predator Connect W6d has one WAN port, one Game port and three LAN ports i.e. LAN 1, LAN 2, LAN 3.






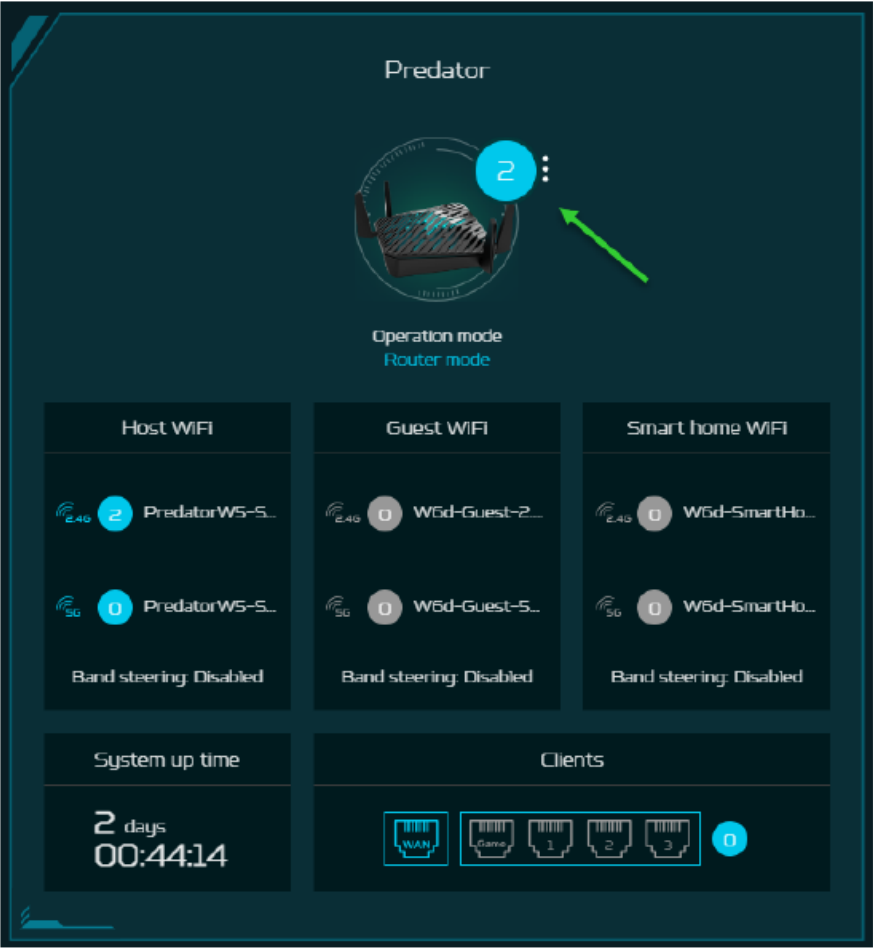




The "icon" (at the far right) represents the number of devices connected to the W6d router. Clicking on this icon will

display the table shown below



  Connected Devices: shows how many client devices are connected with your Predator Connect W6d through Wi-Fi or LAN. You can also modify the device name by clicking on the pencil icon.

 
This tab displays the client device name, the IP address allocated by the router, MAC address of the device, mode of connection (whether the device is connected with the router through Ethernet or Wi-Fi), and duration of device connectivity with the router. You can even block the device from accessing the Internet by clicking on the “block” button.

Connected devices					
Connected devices - Host WiFi and others (5)					
Device	IP address	MAC address	Connection	Duration	Edit
SRComputer-PC 	192.168.76.168	0011ec2a38407	Host WiFi-5GHz	00:57:33	
	192.168.76.211	a2698365bcd7	Host WiFi-2.4GHz	00:12:12	
Galaxy A10s 	192.168.76.179	da8081297964	Host WiFi-2.4GHz	00:48:13	
	192.168.76.210	260f5c2a0bde	Host WiFi-2.4GHz	00:24:43	
DESKTOP-171R00P 	192.168.76.149	100ba9e794c4	Host WiFi-5GHz	00:06:22	
Connected devices - Guest WiFi (0)					
Device	IP address	MAC address	Connection	Duration	Edit
Connected devices - Smart home WiFi (0)					
Device	IP address	MAC address	Connection	Duration	Edit
Blocked devices (0)					
Device	MAC address		Edit		

Network Traffic: helps indicate real time status of the Download (DL) and Upload (UL) speeds across the WAN.

Network Speed Test:

- 1) Powered by Ookla. A single push of the "GO" button tests the speed of the WAN connectivity.
- 2) You can even manually select the server option. Click on the dropdown arrow and it will display the available servers.
- 3) Clicking the "Go" Button will test the network speed and display the results as shown in the image below.

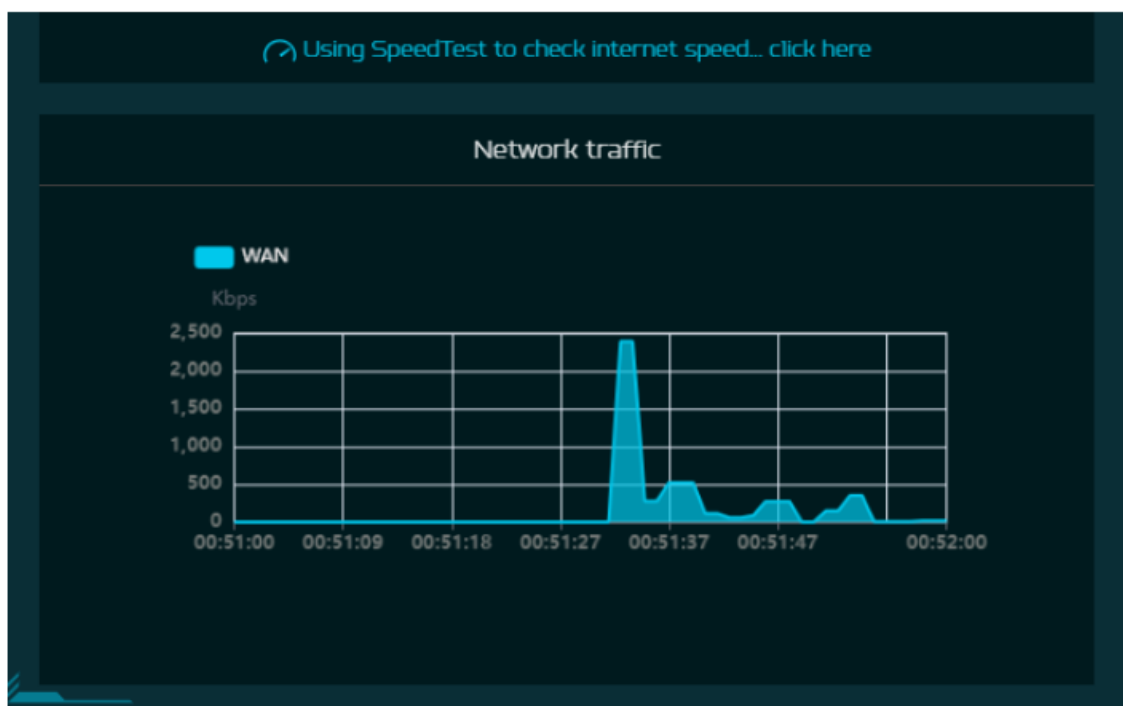

It will test and clearly show the network download and upload speed in Mbps, ping rate, and jitter in milliseconds. After getting the speed test results, you have the option to run the speed test again.



5. Hybrid QoS

Hybrid QoS combines application priority and device priority with bandwidth limitation. The Killer-Enabled PC can set applications priority and send packets with DSCP values to the Predator Connect W6d router, then the router will classify packets and set priority for all different applications based on the below definition.

For non-Killer-Enabled devices, Predator Connect W6d can identify game consoles, streaming devices, computers, smartphones and IoT devices in the network and allocate them to a priority group according to the default settings, or the user can manually set priority for devices connected to the router.

* **Note:** Device identification requires the network security engine option enabled. Application-based QoS* priority: (Enabled by default)


* **Note:** Application Priority will use the DSCP value in the IP header for packet classification. Laptop/desktop with Killer™ embedded traffic priorities in four grades by application. I.e. Extreme (Games), High (Streaming), Normal (Browsing), Low (Download).

Priority	Extreme (Games)	High (Streaming)	Normal (Browsing)	Low (Download)
Applications (DSCP) Intel Killer Teams/Zoom, GT-Booster	<ul style="list-style-type: none"> · Killer Priority 1 (Games) · Killer Priority 2 (Real Time) 	<ul style="list-style-type: none"> · Killer Priority 3 (Streaming) 	<ul style="list-style-type: none"> · Killer Priority 4 (Browsing) 	<ul style="list-style-type: none"> · Killer Priority 5 & 6 (Cloud Download)
Devices	<ul style="list-style-type: none"> · Game Port Connected · Game Console: PS, Xbox, Switch 	<ul style="list-style-type: none"> · Chromecast, FireTV, Roku · SmartTV 	<ul style="list-style-type: none"> · Computers, Smartphones · Other Devices 	<ul style="list-style-type: none"> · IoT Devices, Wearable

Device priority:

Note 1: Game console device is set to default extreme priority whether connected by wired Ethernet or by wireless. The connected device via game port will also get extreme priority.

Note 2: You may drag and drop connected clients into the desired priority level. The change is effective immediately.

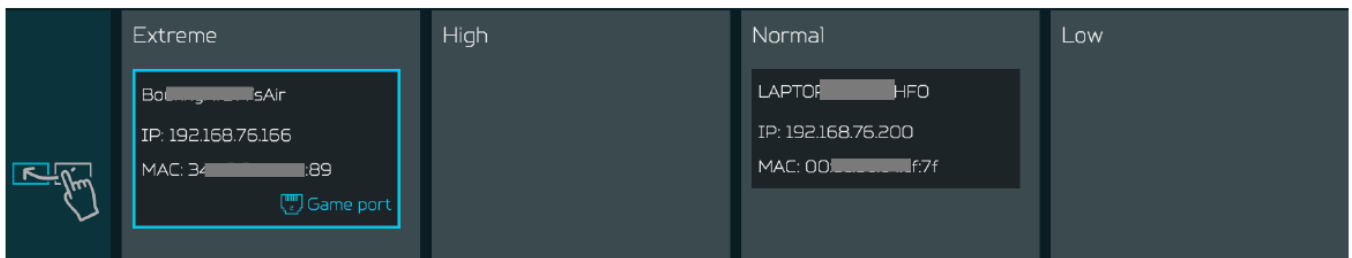

For the upload and download bandwidth configuration, please contact your ISP to get the exact value of the upload and download bandwidth. Once the bandwidth is configured, QoS will reserve the bandwidth according to the weighting percentage of each priority queue.

Bandwidth

For the upload and download bandwidth configuration, please contact your ISP to get the exact value of upload and download bandwidth. Or please connect to speedtest website and check the bandwidth result in your network. After the bandwidth is configured, QoS will reserve the bandwidth according to the weighting percentage for each priority queue.

☐ Use default configuration
 ☒ Setting manually

Upload bandwidth: Mbps

Download bandwidth: Mbps

Priority weighting:

Extreme:	High:	Normal:	Low:
<input type="text" value="85"/> %	<input type="text" value="10"/> %	<input type="text" value="3"/> %	<input type="text" value="2"/> %

You may select “use default configuration” and click on “Apply bandwidth”. Otherwise, you can select “setting manually” and enter the required upload and download bandwidth with priority weighting.

☒ Hybrid QoS
 ☐ GeForce NOW
 ☐ Max Throughput

Hybrid QoS
 Enable Application Priority and Device Priority with bandwidth limitation. Application Priority will use the DSCP value in the IP header for packet classification.

GeForce NOW
 Enable optimized performance for GeForce NOW gaming client without bandwidth limitation nor NAT acceleration.
 Note: TrendMicro engine will be stopped.

Max Throughput
 Enable maximum performance for router with NAT acceleration and without bandwidth limitation.

You can select GeForce NOW option to enable optimized performance for GeForce NOW gaming clients without bandwidth limitation or NAT acceleration.


Note: TrendMicro engine will be stopped.

For enabling router maximum performance with NAT acceleration and without bandwidth limitation, please select the option “Max Throughput” in this case.


6. Quick Setup

The Predator Connect W6d can operate as a standalone Wi-Fi router, Bridge, or establish a Mesh network. Please select a mode which this device will operate in:

- 1) Router Mode
- 2) Mesh Controller
- 3) Mesh Agent
- 4) Bridge mode

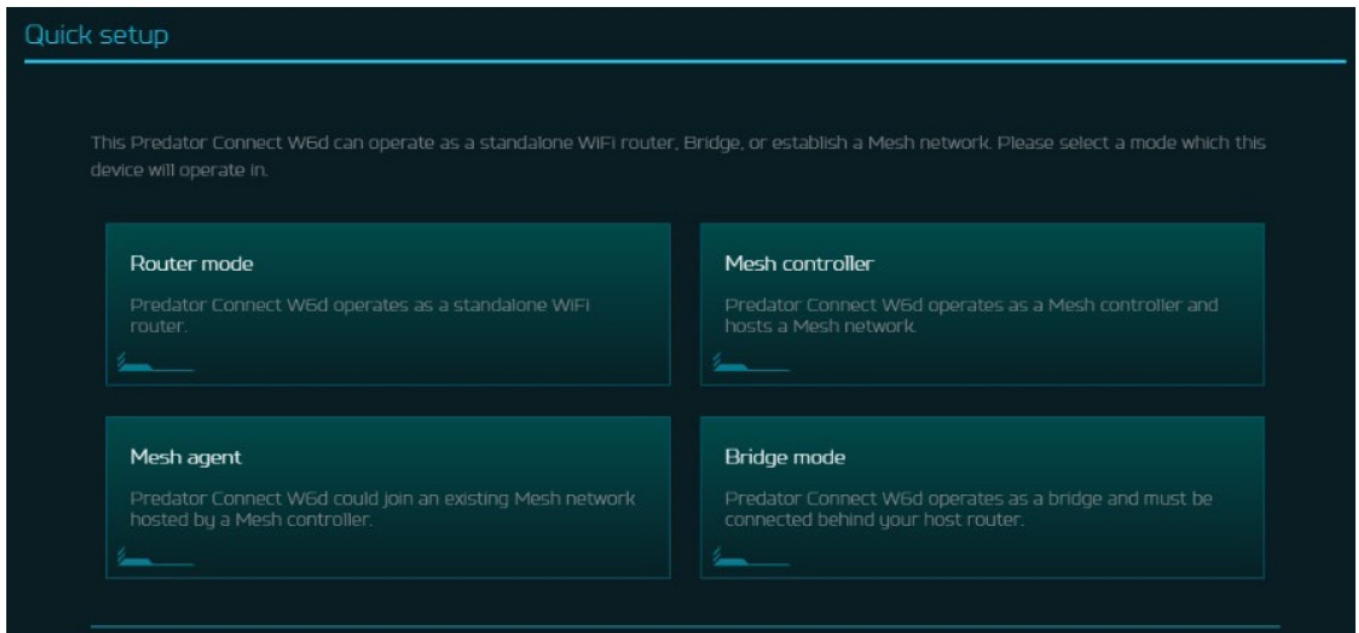

In Router mode: plug one end of the RJ-45 cable into your DSL or cable modem and the other end into Predator Connect W6d's WAN port.
Connect your device to Predator Connect W6d via Wi-Fi or LAN cable.

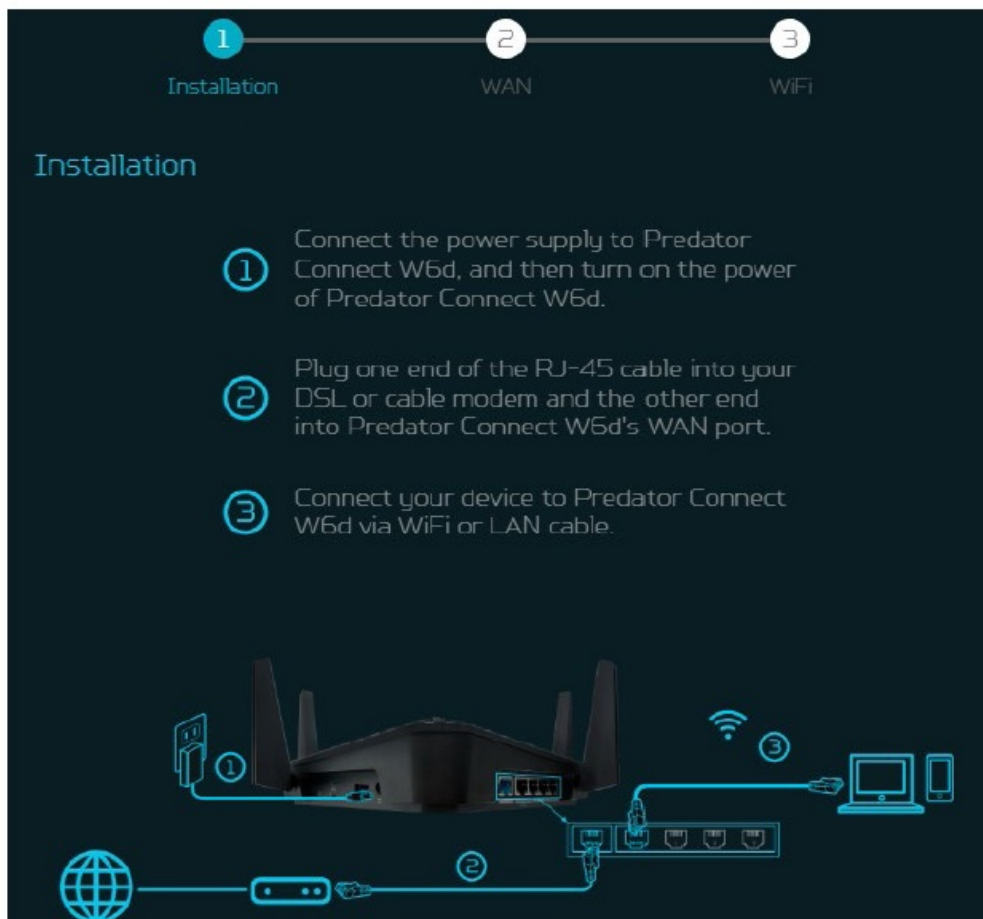


6.1 How to create a Mesh network

To create a mesh network, set one router as a Mesh controller (A) and set another router as a Mesh agent (B)

Note: To keep a better performance, please be aware that a controller could only have 3 agents under its network. For the fourth agent, it will be performed factory reset after connecting to the mesh network and switched back to router mode automatically.

Following are the steps to create a Mesh network;

1. Go to quick setup and set the main router as Mesh controller.
2. Power on the other Predator router and set it as Mesh Agent.
3. Place both routers close to each other.

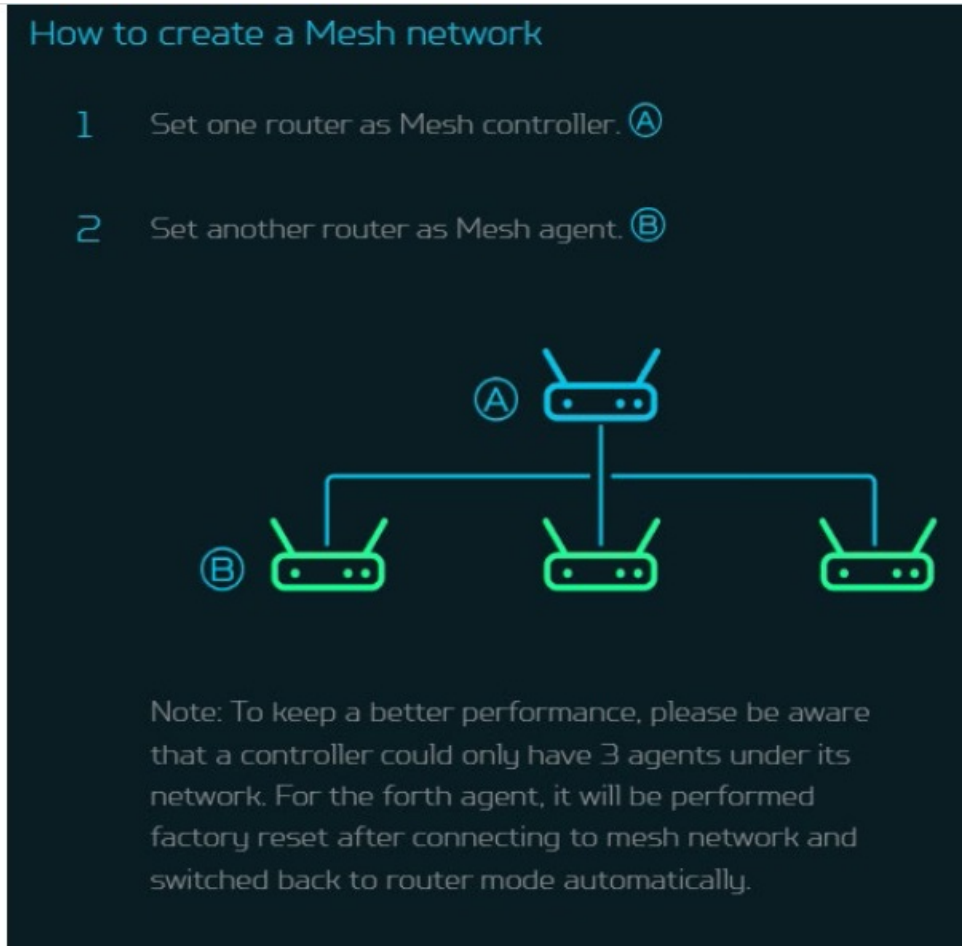


There are two ways to onboard an agent to a Mesh network.

- I. Press the WPS button on both devices for 2 seconds at the same time.
- II. Connect agent to the controller via LAN cable.

If agent onboard to controller successfully, the LED will be breathing blue, otherwise, LED will become solid red color.

- 3 There are two ways to onboard an agent to a Mesh network:
- Ⓒ Press the WPS button on both devices for 2 seconds at the same time.
 - Ⓓ Connect agent to controller via LAN cable.

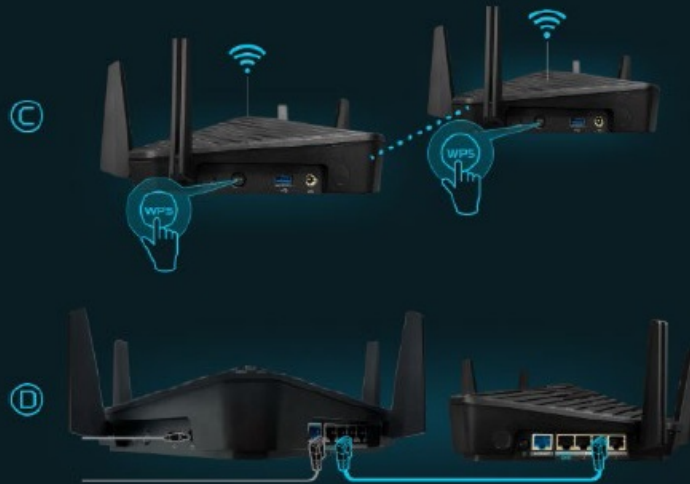

Power off the agent device, move it to some other place, and then power it ON. Then observe the agent's LED color. (Agent's LED color shows RSSI indication between controller and agent.

The Blue color means RSSI is good, Green color means RSSI is normal, Orange color means RSSI is poor, Red color means disconnected.

- 4 Please wait and check if the WiFi LED changes from flashing green to breathing blue, green, orange or solid red. ...
[LED definition](#)



- 5 After you add the agent to Mesh network, you can judge the quality of connection signal between agent and controller according to agent device's LED light, which will help you to place the agent on a suitable location. LED showing blue means signal is good; green is normal; orange is poor. ...
[LED definition](#)



6.1.1 Mesh Topologies


Following are the mesh topologies:

- Topology – One agent
- Start topology – 3 agents
- Daisy chain topology – 2 agents
- Daisy chain topology – 3 agents
- Tree topology – 3 agents

Topology – One Agent


In one agent topology, a controller is connected with one agent, and the medium between a controller and the agent can be wireless or wired connectivity.

Yellow color line indicates the poor signal strength between a controller and the agent, so it is recommended to place an agent close to the controller.

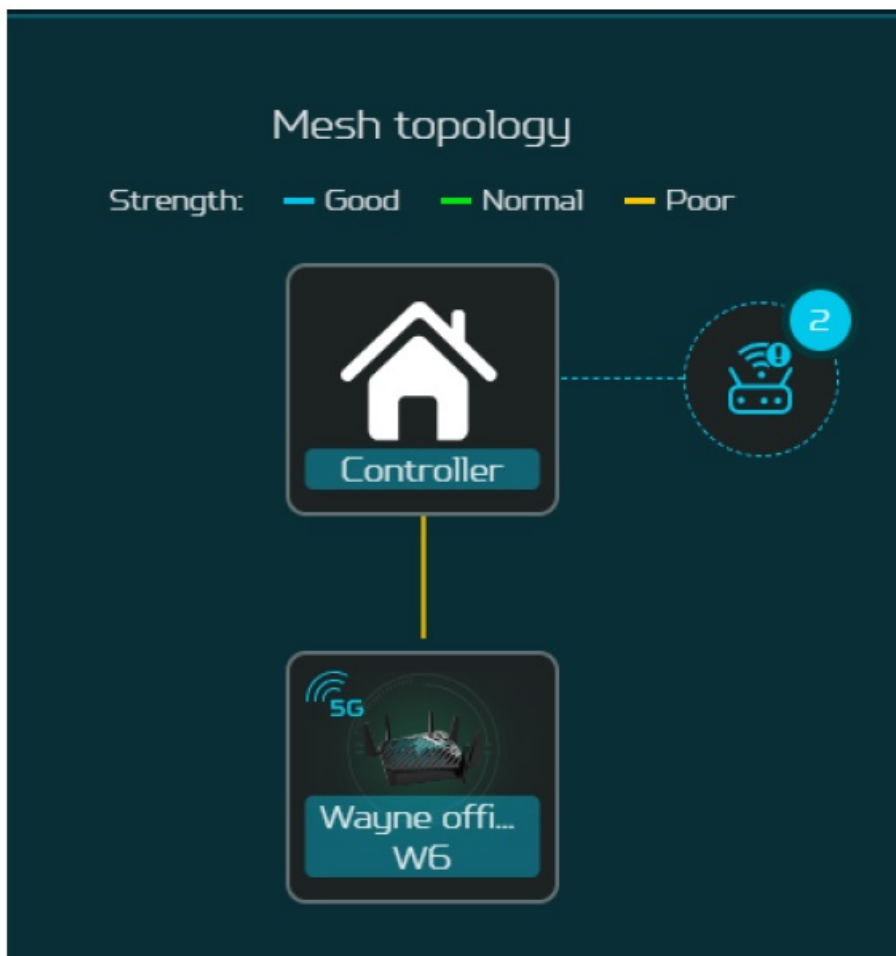

Star topology – 3 agents


In start topology of 3 agents, a controller is simultaneously connected with three agents, and the medium between a controller and the agents can be wireless or wired connectivity.

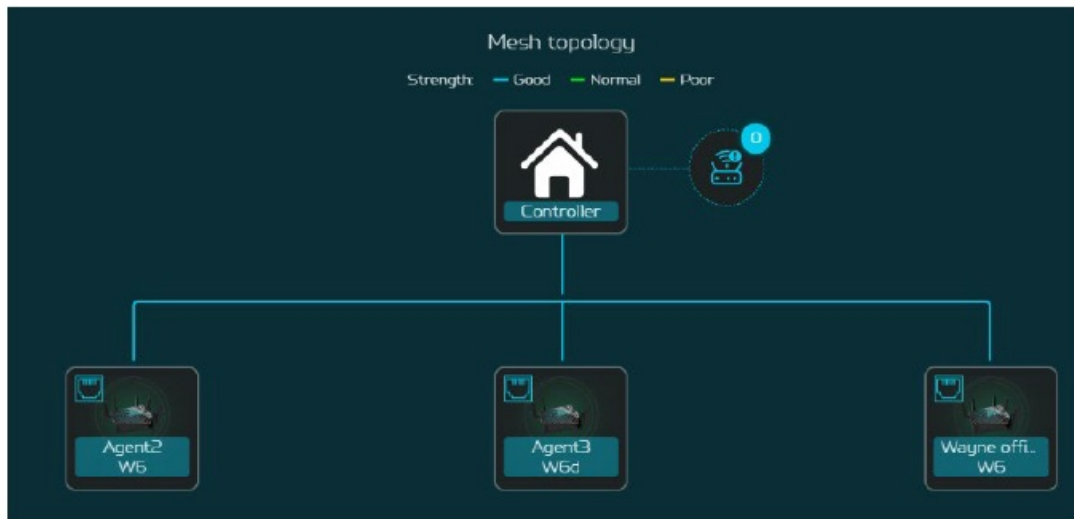

Daisy Chain topology – 2 agents

In daisy chain topology of 2 agents, a controller is connected with agent 2, and the agent 3 is connected with the agent 2, making a chain topology.

Medium between the agents and the controller can be wireless or wired connectivity.
Blue color line indicates a good signal strength.

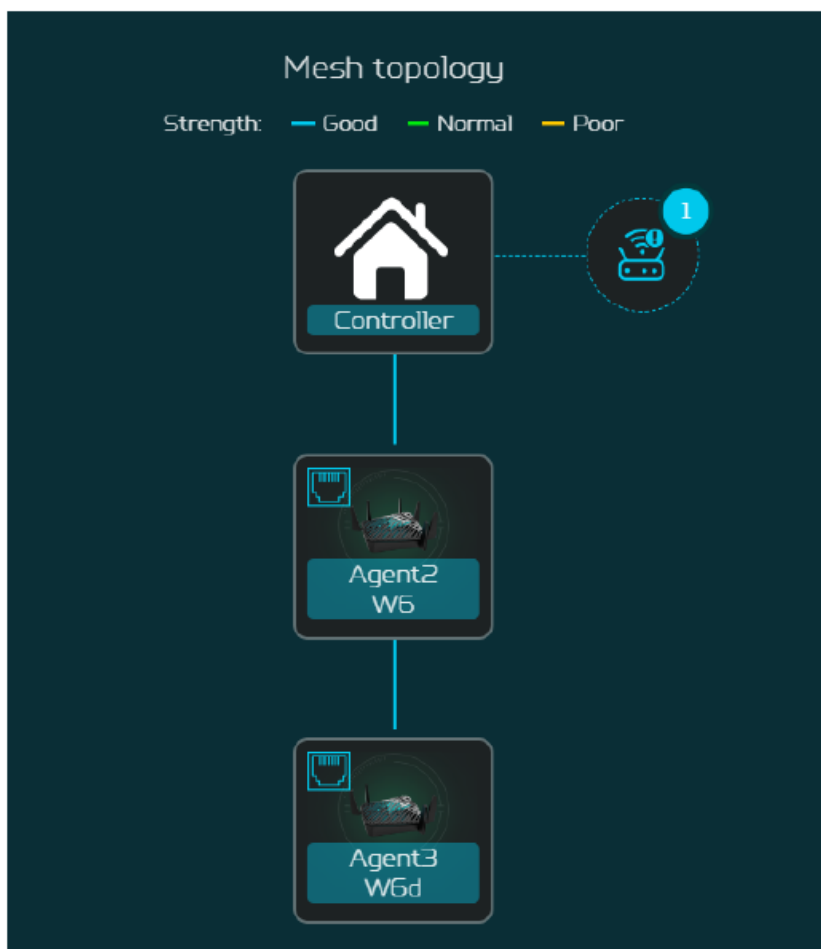


Daisy Chain topology – 3 agents

In daisy chain topology of 3 agents, a controller is connected with agent 2, agent 3 is connected with agent 2, and


last agent is connected with agent 3, making a chain topology of 3 agents.
Medium between a controller and the agents can be wireless or wired connectivity.

Blue color line indicates a good signal strength.

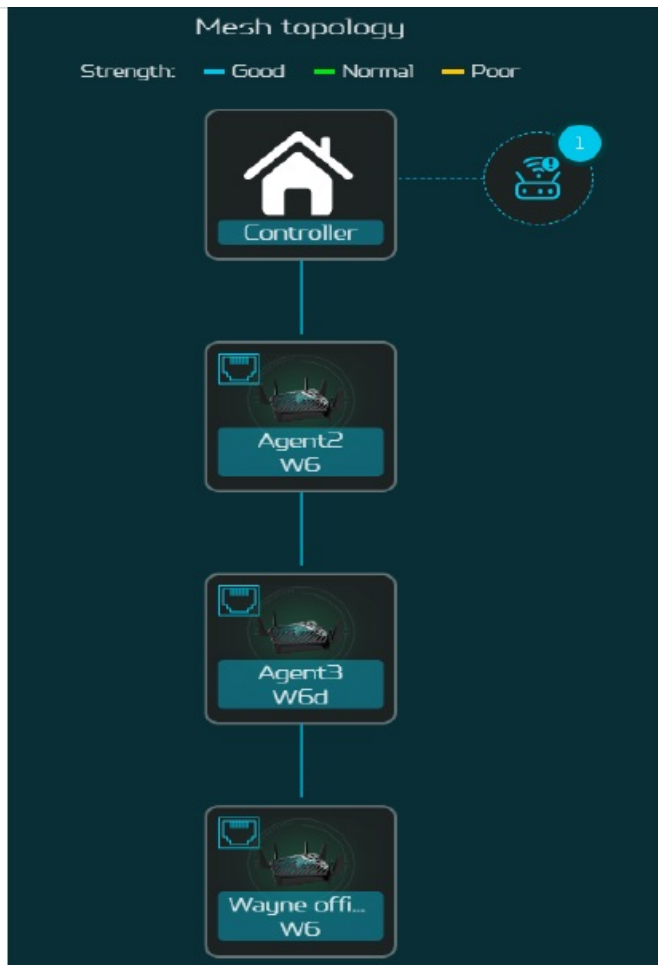

Tree topology – 3 agents


In tree topology of 3 agents, a controller is directly connected with two agents; whereas a third agent (Agent 3) is connected with agent 2, making a tree topology.
Medium between a controller and the agents can be wireless or wired connectivity.

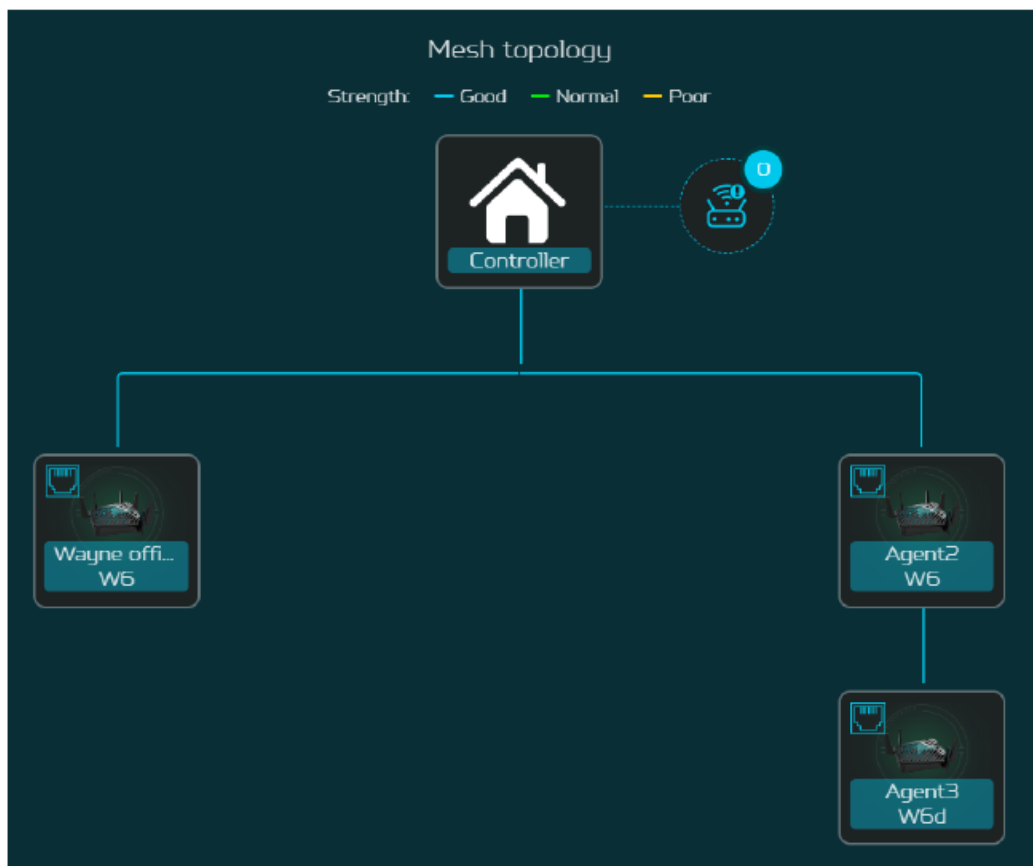

Agent connected via Wi-Fi

In this topology, a controller is wirelessly connected with the two agents; whereas the third agent (Agent 3) is connected with agent 2 through wired connectivity.


Yellow color line indicates a poor signal strength, and the blue color line indicated a good signal strength.

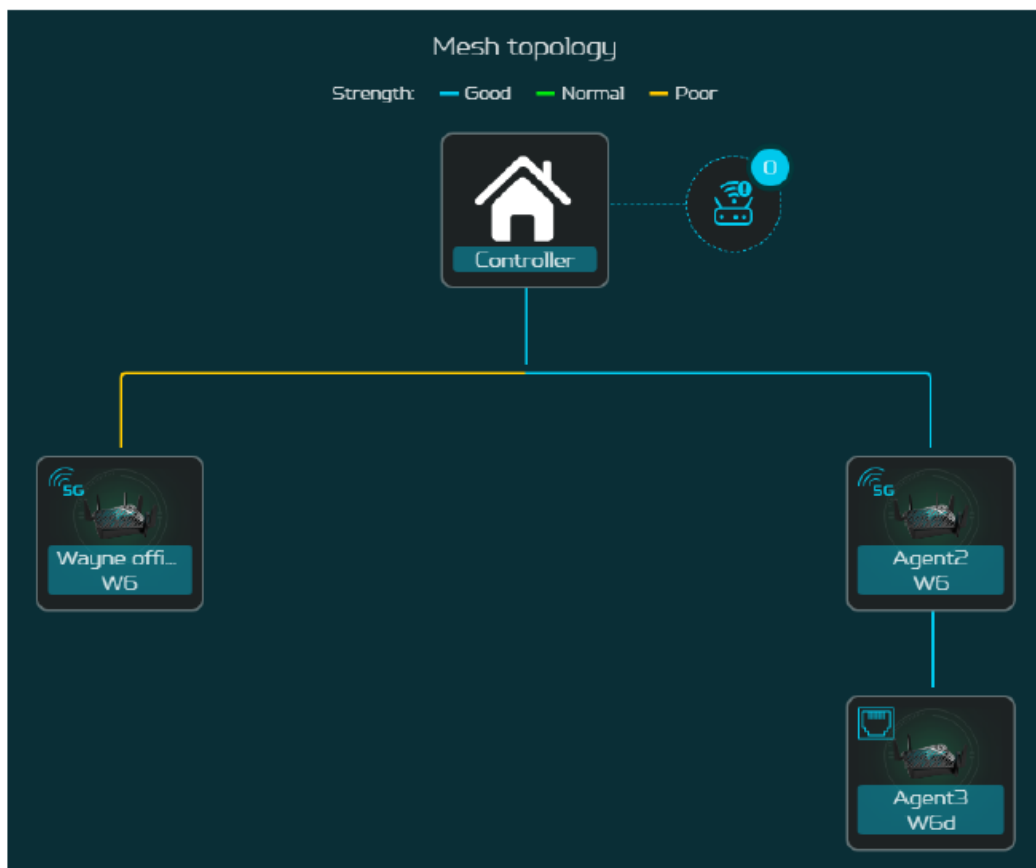

Agent information

From this tab, you can see the agent's information including:

- 1) Location
- 2) Model number
- 3) IP address
- 4) Serial number
- 5) Firmware version
- 6) Devices connected with the agent
- 7) Agent backhaul connectivity.

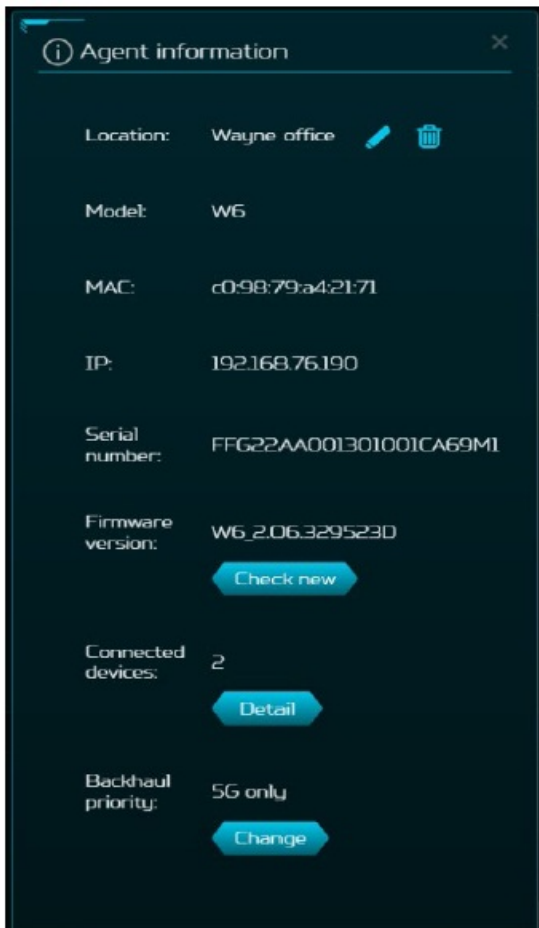

There are some limitations in our mesh which are listed below:

I. Due to the adoption of front-haul and backhaul sharing bandwidth to connect various nodes in the Mesh network, if the Mesh agent is in a daisy-chain configuration, each layer of connected nodes needs to simultaneously handle communication with both upper-layer nodes and lower-level devices. As a result, the available bandwidth speed will be halved and evenly distributed. Based on this limitation, we recommend that users assemble the Mesh network using Ethernet cables to connect the nodes. This will avoid rate loss due to shared bandwidth (achieving lossless conditions). If users must connect the nodes wirelessly, we suggest forming a star topology network to prevent significant rate reduction caused by multi-tiered connections.

II. All client devices connect to the Mesh network through the front-haul interface of each node, while the connection between nodes relies on the backhaul bandwidth to reach the controller and then access the Internet. In other words, the speed at which clients connect to the Internet cannot exceed the backhaul bandwidth. Users can configure their preferred band for the backhaul using the GUI.

Here are the maximum rates achievable when using each band as backhaul:

- 5GHz with 80MHz bandwidth: DL1201Mbps/UL1201Mbps (default using 5GHz bandwidth to avoid DFS radar interference or CAC connection wait).
- 2.4GHz with 20MHz bandwidth: DL286Mbps/UL286Mbps (default using 2.4GHz bandwidth to avoid interference from neighboring 40MHz bandwidth signals)

III. Limitations of the W6 series Mesh: A maximum of one controller + three agents are allowed. Products that can act as controllers: Predator Connect X5/W6/W6d, Acer Connect Vero W6m. Products that can act as agents:

Predator Connect W6/W6d, Acer Connect Vero W6m. Users will be reminded to avoid adding a fourth agent. When a user attempts to add a fourth agent, the fourth agent will be forcibly factory reset to the router state. The more agent nodes connected, the more devices share the bandwidth. Particularly in daisy-chain topology networks, we recommend keeping the number of agents connected to three or fewer.

IV. All devices are factory-defaulted as routers. Users can change the device role (e.g., Mesh controller, Mesh agent, or bridge) through Quick Setup.

V. Once a device has been set as a Mesh controller, Mesh agent, or bridge, changing the device role requires restoring the device to its factory settings before the role change can be made. Note: When the current device is a router, it can be changed to other roles such as Mesh controller, agent, or bridge (using GUI operation mode or Quick Setup).

VI. Currently, only the controller supports Guest & Smart Home Wi-Fi, while it cannot be used in agent nodes. Agent nodes will not have any Guest & Smart Home Wi-Fi options.

VII. Mesh supports WPS Onboarding, but in cases where connection is hindered due to environmental interference, it's recommended to move the agent closer to the controller, or restore the device to its factory default settings and follow the Quick Setup process to reconfigure the agent. Alternatively, you can perform the setup steps via Ethernet connection.

VIII. If the Mesh Wi-Fi SSID or password is changed in an existing Mesh network, agents will apply the new configuration after the synchronization process is done. If the agent does not apply the new configuration successfully or the agent is in the offline status, it must go through the onboarding process with the controller again. This is necessary for the updated SSID or password to be applied to these agents.

1
2

Installation
WiFi

Installation

- ①
Connect the power supply to Predator Connect W6d, and then turn on the power of Predator Connect W6d.
- ②
Plug one end of the RJ-45 cable into your host router and the other end into Predator Connect W6d's WAN port.
- ③
Connect your device to Predator Connect W6d via WiFi or LAN cable.

Note: After switching to Bridge mode,

1. Please disable the DHCP Server on the Predator Connect W6d according to your network topology.
2. Some functions may not work as how it does in router mode. Ex: Home network security, Hybrid QoS, Guest WiFi, Smart Home WiFi, IPv6, DMZ, Firewall, NAT passthrough, Port forwarding, VPN, WAN ping, WAN setting ,etc.
3. To access Predator Connect W6d's WebPortal, it is recommended to setup a static IP (the IP in the range 172.16.76.2-172.16.76.254, netmask 255.255.255.0) under your client network device and connect to W6d via ethernet cable with URL (<http://172.16.76.1>). The LAN gateway(172.16.76.1) of W6d should also be configured as the client network device's gateway (172.16.76.1) and DNS server (172.16.76.1).

VII. Mesh supports WPS Onboarding, but in cases where connection is hindered due to environmental interference, it's recommended to move the agent closer to the controller, or restore the device to its factory default settings and follow the Quick Setup process to reconfigure the agent. Alternatively, you can perform the setup steps via Ethernet connection.

VIII. If the Mesh Wi-Fi SSID or password is changed in an existing Mesh network, agents will apply the new configuration after the synchronization process is done. If the agent does not apply the new configuration successfully or the agent is in the offline status, it must go through the onboarding process with the controller again. This is necessary for the updated SSID or password to be applied to these agents.



7. WAN

7.1 WAN Status

This tab provides information about WAN connectivity status and the following key information:

- Time duration (format HH:MM:SS)
- MAC address
- Connection Mode: DHCP, static IP, PPPoE, switch WAN port to LAN (switch/bridge).

- IP address
- Subnet mask
- Default gateway
- Primary & secondary DNS server

Dashboard

Hybrid QoS

Quick setup

WAN

WiFi

LAN

IPv6

Home network security

System

APP download

User manual

WAN status

WAN setting

DMZ

WAN ping

Firewall

NAT passthrough

Port forwarding

VPN server

DDNS

WAN status

Duration:

07:36:30

Connection status:

Connected

MAC address:

AA:BA:01:F9:E4:4B

Connection mode:

DHCP

IP address:

192.168.100.97

Subnet mask:

255.255.255.0

Default gateway:

192.168.100.1

Primary DNS server:

192.168.100.1

Secondary DNS server:

7.2 WAN Setting:

On this page, you can set up Ethernet WAN connection mode to DHCP, Static IP, PPPoE or switch WAN port to LAN, depending on your connection usage. Click on the down arrow to reveal the drop-down menu to select your preferred WAN settings.

WAN status

WAN setting

DMZ

WAN ping

Firewall

NAT passthrough

Port forwarding

VPN server

DDNS

WAN setting

Set Ethernet WAN connection mode. It can be dynamic IP, static IP, PPPoE. You can also set this port as LAN port.

Connection mode:

DHCP

Primary DNS server:

e.g. 8.8.8.8

Secondary DNS server:

e.g. 8.8.4.4

Note: After switching to Bridge mode,

1. Please disable the DHCP Server on the Predator Connect W6d according to your network topology.

2. Some functions may not work as how it does in router mode. Ex: Home network security, Hybrid QoS, Guest WiFi, Smart Home WiFi, IPv6, DMZ, Firewall, NAT passthrough, Port forwarding, VPN, WAN ping, WAN setting ,etc.

3. To access Predator Connect W6d's WebPortal, it is recommended to setup a static IP under your client network device and connect to W6d via ethernet cable. The LAN gateway of W6d should also be configured as the client network device's gateway and DNS server.

Cancel

Apply

Note: After switching to Bridge mode,

- 1) Please disable the DHCP Server on the Predator Connect W6d according to your network topology.
- 2) Some functions may not work as how it does in router mode. E.g. Home network security, Hybrid QoS, Guest Wi-Fi, Smart Home Wi-Fi, IPv6, DMZ, Firewall, NAT pass-through, Port forwarding, VPN, WAN ping, WAN setting.
- 3) To access Predator Connect W6d's web portal, it is recommended to set up IP under your client network device and connect to W6d via Ethernet cable. The LAN gateway of W6d should also be configured as the client network device's gateway and DNS server.

7.3 DMZ

DMZ is physical or logical subnetwork that contains and exposes the firm's facing services to an untrusted, usually larger, network such as the Internet.


If external users can't access certain network services provided by the Local Area Network (LAN), use the DMZ function to set the client that provides the required network services as the DMZ host.

The screenshot shows the web portal interface for Predator Connect W6d. On the left is a sidebar menu with the following items: WAN status, WAN setting, DMZ (highlighted in blue), WAN ping, Firewall, NAT passthrough, Port forwarding, VPN server, and DDNS. The main content area is titled 'DMZ' in blue. Below the title is a descriptive text: 'If external users can't access certain network services provided by the Local Area Network (LAN), use the DMZ function to set the client that provides the required network services as the DMZ host. External users will then have access to all services. Note that clients in the DMZ will be exposed to WAN traffic.' Below this text, there is a 'DMZ:' label followed by a toggle switch that is currently turned off. Underneath, there is a label 'DMZ host IP address:' followed by a text input field containing the example IP 'e.g., 192.168.0.100'. At the bottom right of the main area are two blue buttons: 'Cancel' and 'Apply'.

7.4 WAN Ping

By enabling this feature, WAN port of Predator Connect W6d will respond to ping requests that are sent to the WAN IP address from the Internet.


For better security, keep the feature turned OFF, and the device will not respond to a WAN ping.

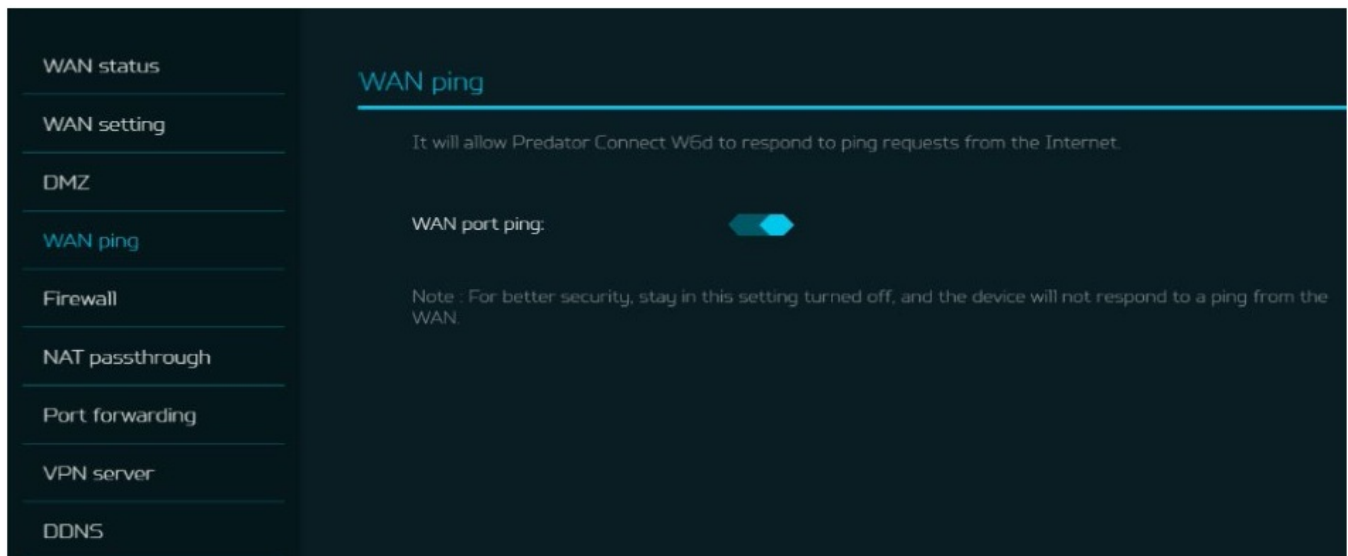

7.5 Firewall


Setup firewall rule to accept or drop network requests from Internet.

To set up a firewall, click on (+) icon and enter the name, source and destination port and IP address, protocol, target and status info.

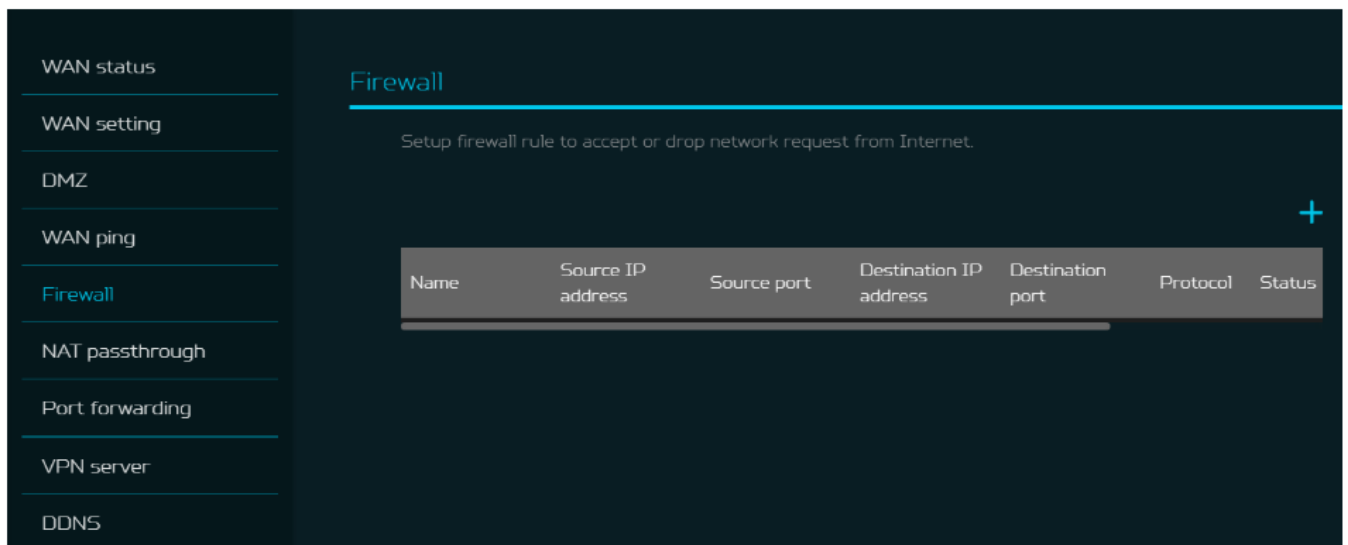

7.6 NAT pass-through

NAT pass-through allows a Virtual Private Network (VPN) connection to pass through the router to the external network.

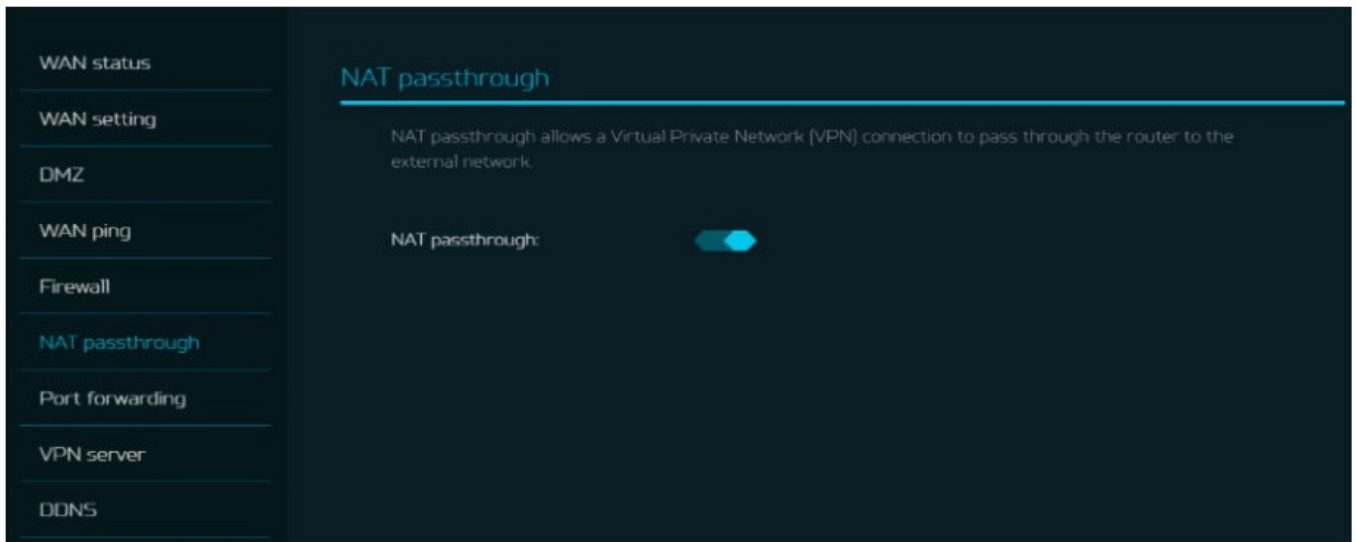

7.7 Port Forwarding

This feature allows external users to connect to Local Area Network (LAN) services using Hypertext Transfer Protocol (HTTP), File transfer protocols (FTP), and other protocols.

To add any application, click on (+) icon and select a required service.

You can select any service profile from common services tab and it will then automatically show its name, LAN & WAN port number and its protocol.

Enter the LAN IP address and select the status ON/OFF and click on the “Apply” button to activate the service.

We have added a new game console profile including:

- Xbox network
- Play Station 5
- Play Station 4
- Nintendo SWITCH
- Nvidia GeForce Now
- Steam

+

Add

Common services:

Select a service

Name:

FTP

LAN IP address:

SMTP

LAN port(s):

POP3

WAN port(s):

NNTP

Protocol:

SNMP

Status:

HTTP/PS4/Xbox/Steam TCP Port 80

PS4/Steam TCP Port 443
PS4/PS5 TCP Port 3478-3479
PS4/PS5/Steam UDP Port 3478-3479
PS4 TCP Port 3480
PS5 TCP Port 1935
PS5 UDP Port 3074
PS4/PS5 UDP Port 49152-65535
DNS/Xbox TCP Port 53
Xbox UDP Port 88
Xbox UDP Port 500
Xbox UDP Port 3544
Xbox UDP Port 4500
Switch TCP Port 6667
Switch TCP Port 12400
Switch TCP Port 28910
Switch TCP Port 29900-29901
Switch TCP Port 29920
Switch TCP Port 45000-65535
GeForce Now TCP Port 49006
GeForce Now TCP Port 49003-49006
Steam TCP Port 27015-27050
Steam UDP Port 4379-4380
Steam UDP Port 27000-27100

7.8 VPN Server

Setup VPN server on Predator Connect W6d for remote VPN connection over the Internet. This router offers two VPN services:

7.1.1. OpenVPN

7.1.2. IPsec VPN

WAN status

WAN setting

DMZ

WAN ping

Firewall

NAT passthrough

Port forwarding

VPN server

DDNS

VPN server

Setup VPN server for remote user to connect to the internal Internet.

OpenVPN:

IPsec VPN:

PSK

RSA


Connection type	Remote IP	Local IP	Duration	Edit
-----------------	-----------	----------	----------	------

The User needs to generate a certificate before enabling the VPN server. Once you create a VPN server, the VPN connection link establish, and the status with be shown. It will display the connection type, remote & local IP address and duration.

Open VPN is a SSL VPN and uses a chosen UDP or TCP port, allowing for flexible configuration choices.

User access comes with two different options; Home network, Internet and home network.
The user can also export OpenVPN configuration file (client.ovpn).
Enter the following information to configure Open VPN services.

- 1) WAN IP address
- 2) Service port
- 3) VPN subnet
- 4) VPN netmask

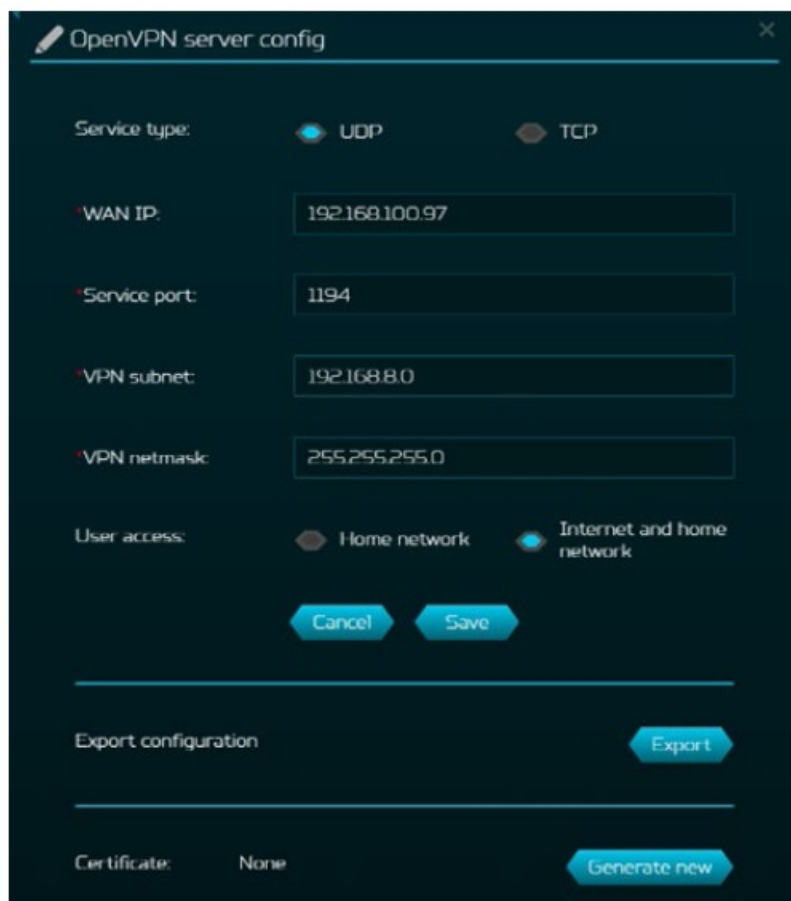

The screenshot shows the 'OpenVPN server config' window. It features a dark blue background with white text and orange buttons. The 'Service type' section has two radio buttons: 'UDP' (selected) and 'TCP'. The 'WAN IP' field contains '192.168.100.97'. The 'Service port' field contains '1194'. The 'VPN subnet' field contains '192.168.8.0'. The 'VPN netmask' field contains '255.255.255.0'. The 'User access' section has two radio buttons: 'Home network' and 'Internet and home network' (selected). Below these are 'Cancel' and 'Save' buttons. A horizontal line separates this from the 'Export configuration' section, which has an 'Export' button. Another horizontal line separates this from the 'Certificate' section, which shows 'None' and a 'Generate new' button.

IPsec VPN uses predefined communication channels, UDP 500 and UDP 4500, to establish the encrypted tunnel and ESP for the transmission of encrypted data.
Enter the following information to configure IPsec VPN services.

- 1) WAN IP address
- 2) Client IP address
- 3) Primary DNS server
- 4) Secondary DNS server
- 5) Pre-shared key

IKEv2 VPN server config (PSK)

* WAN IP: 192.168.100.97

* Client IP address: 192.168.7.11 ~192.168.7.18

* Primary DNS server: 8.8.8.8

Secondary DNS server: 8.8.4.4

* Pre-shared key: SsEeCcRrEeTt

Cancel Save

7.9 DDNS

A DDNS service provides a fixed domain name for your router's dynamic IP address. You will need to register with a DDNS service among the following ones.

1. Dyn.com
2. No IP
3. Google domain
4. Cloudflare.com

Once you select the DDNS service, enter the hostname, username and password, and click on the 'Apply' button to activate DDNS.

DDNS and WAN status will be shown once the DDNS information is entered.

DDNS


A dynamic domain name system service provides a fixed domain name for your router's dynamic IP address. You'll need to register with a DDNS service.

Enable DDNS: ☒

DDNS service:

*Host name:

*Username:

*Password: 

Use external IP check: ☒

Use HTTP secure: ☐

Cancel

Apply

WAN status: IP: 119.73.124.130 ■ Connected


DDNS status: Unchecked Check status

8. Wi-Fi

8.1 Wi-Fi Status


Displays key information such as:

- Wi-Fi SSID
- SSID Broadcast
- Security
- Channel
- Connected devices
- Gateway address
- Mac address of 2.4GHz, 5GHz

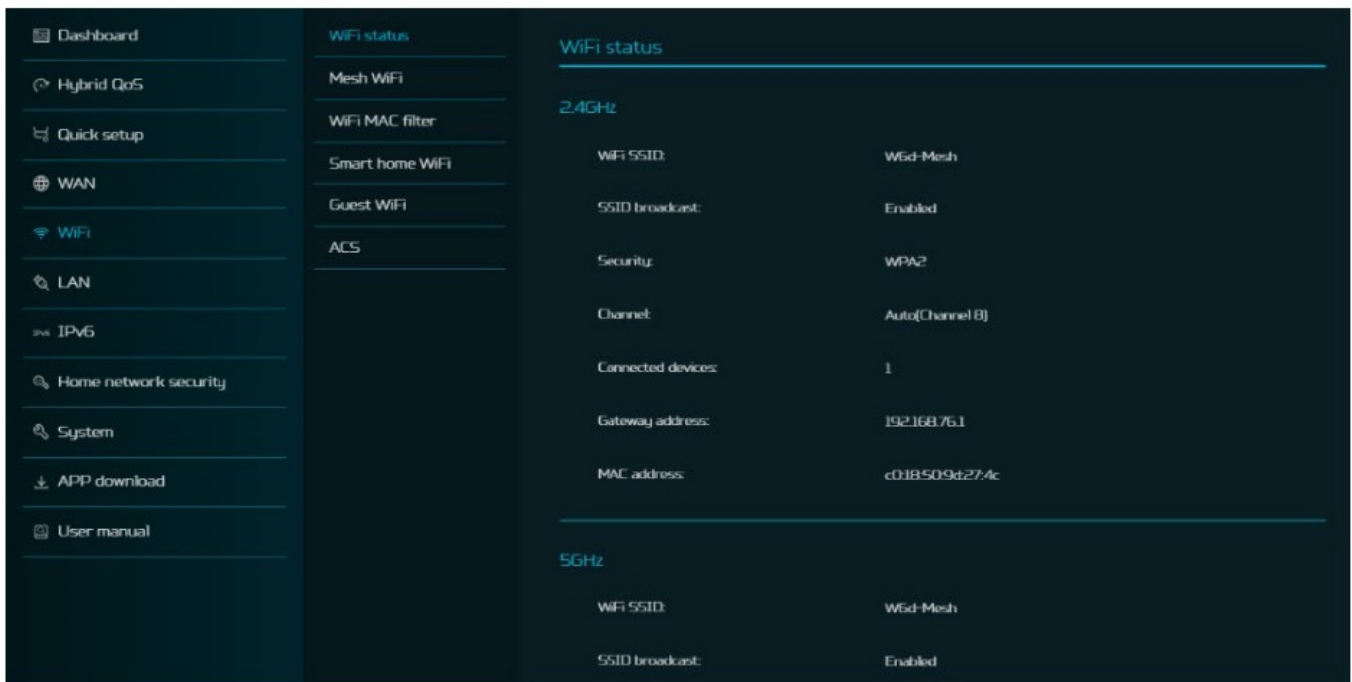

8.2 Mesh Wi-Fi (In Mesh mode)

This tab provides information about Mesh Wi-Fi SSID, security settings, encryption and Wi-Fi password. Band steering is ON by default, it automatically connects your devices to the best available Wi-Fi frequency in your surroundings.

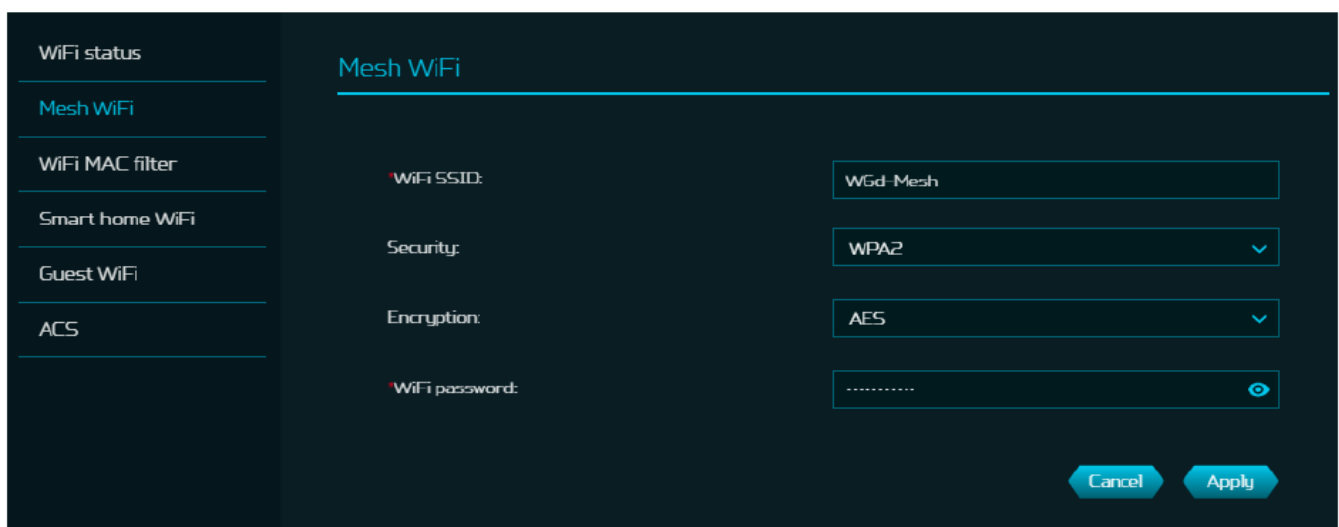

8.3 Basic Settings (Router mode)


This tab shows only when the W6m is configured in router mode.

In this page, you can edit Wi-Fi SSID and enable or disable SSID broadcast and use the following security parameters for 2.4GHz and 5GHz bands

WPA, WPA2, WPA/WPA2, WPA3 personal, WPA2/WPA3, Enhanced open;

Encryption option: AES, Auto, TKIP. Auto and TKIP are available only, when WPA, WPA/WPA2 security option applied.

The Wi-Fi band steering must be ON in the mesh mode; whereas, in the router mode, user can switch ON/OFF for band steering in the host Wi-Fi.

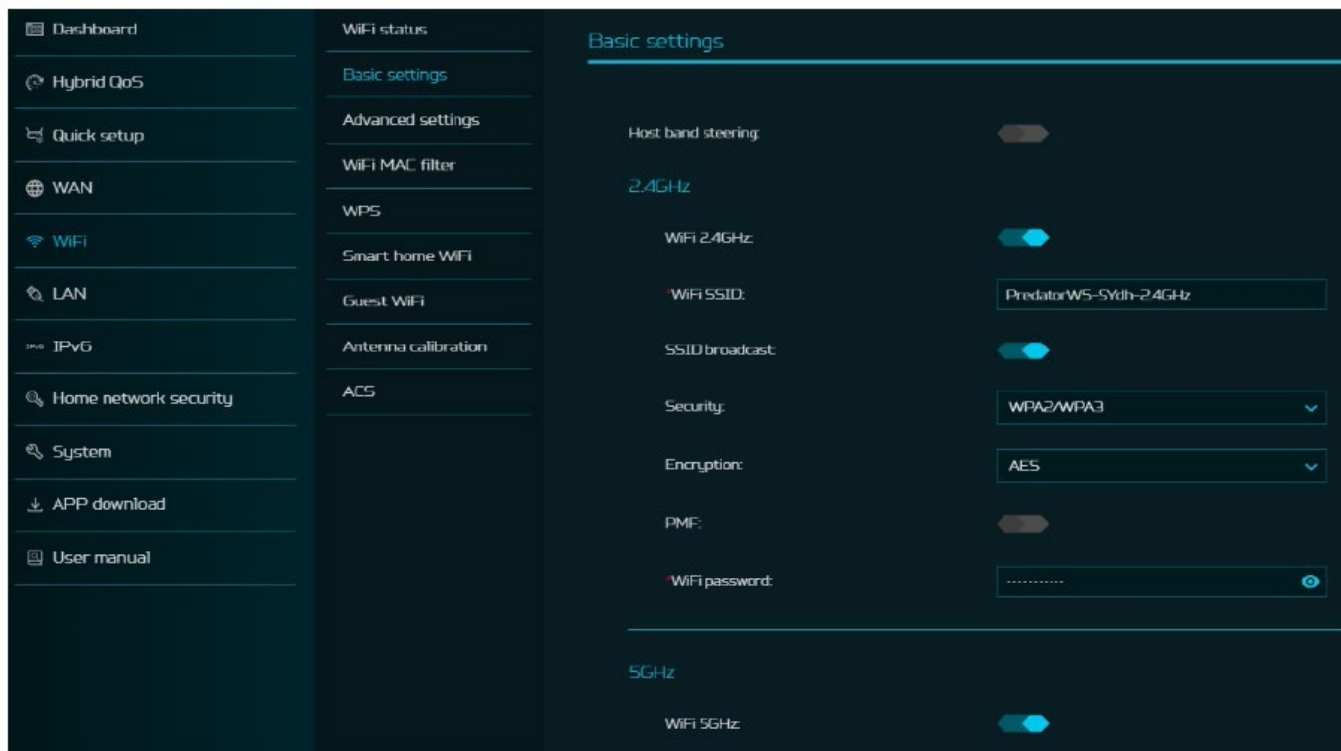


8.4 Advanced Settings

This tab will help you to set advanced Wi-Fi parameters for 2.4GHz and 5GHz bands such as channel, 802.11 mode and bandwidth selection.

2.4GHz channel ranges from 1 to 11, and it is set to “Auto” by default.

Bandwidth can be selected as 20MHz, 40MHz or auto in 2.4GHz band.

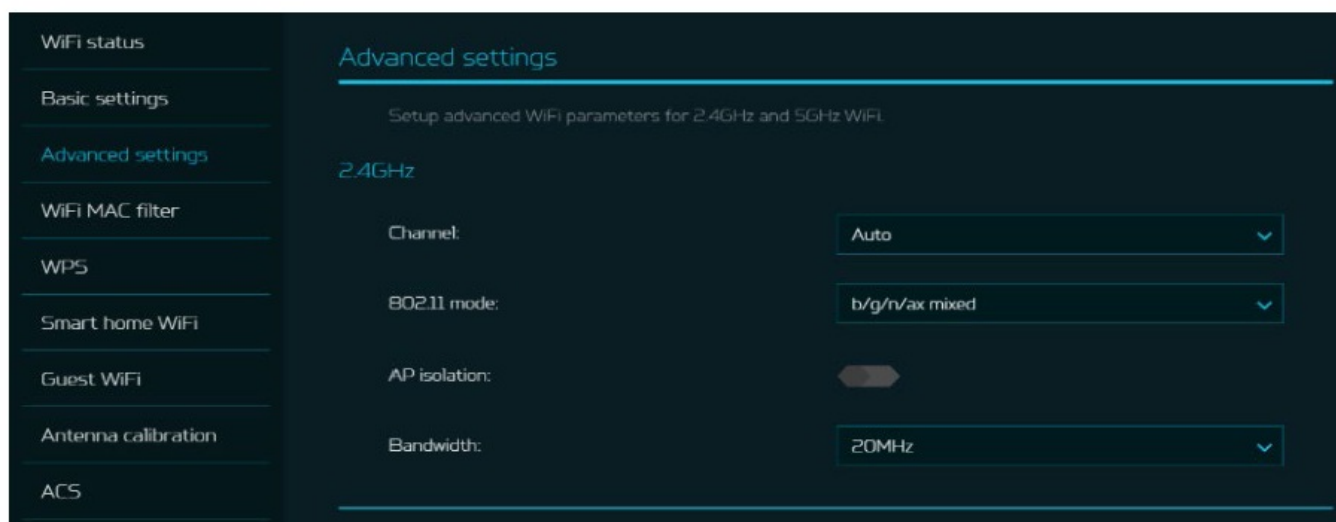

In 5GHz band, available channels are 36, 40, 44, 48, 149, 153, 157, 161 and 165. It is set to “Auto” by default. AP isolation is a feature that enables you to create a separate virtual network preventing client communicating with each other and preventing unwanted hacking. This feature is disabled by default.

5GHz

Channel: Auto

802.11 mode: a/n/ac/ax mixed

AP isolation: ☐

Bandwidth: 80MHz

DFS:

- ☒ DFS Off
DFS and Weather Radar Channels Off, no scanning.
- ☐ DFS On
DFS Channels On, Weather Radar Channels off, DFS scanning only, 1 min scanning time.
- ☐ DFS/Weather Radar On
DFS Channels On, Weather Radar Channels On, 1 min + 10 min scanning time.

Cancel Apply

DFS (Dynamic Frequency Selection) is a function of using 5GHz Wi-Fi frequencies that are generally reserved for radar, such as satellite communication, weather radar, etc. Here are some of the advantaged and disadvantages of opening DFS.

Advantages:


- If DFS is turned ON, the router can use more channels which can make it easier to avoid mutual interference with other APs.
- It can also use continuous channels at 5GHz to achieve 160MHz bandwidth.

Disadvantages:

- It takes extra time to scan for radar signals every time it is restarted, which may take 1 minute to 10 minutes. This will cause delay in 5GHz SSID appearing.
- If you encounter radar signals during the use of DFS channels, the router must avoid this channel, switch to other available channels, and this will take additional scan time.

8.5 Wi-Fi MAC filter


Devices that are added to the Wi-Fi MAC filter will be blocked from accessing the Internet. Click on the (+) icon to add the device in the filter table by entering its name & MAC address. Up to 32 devices can be added to the MAC filter.

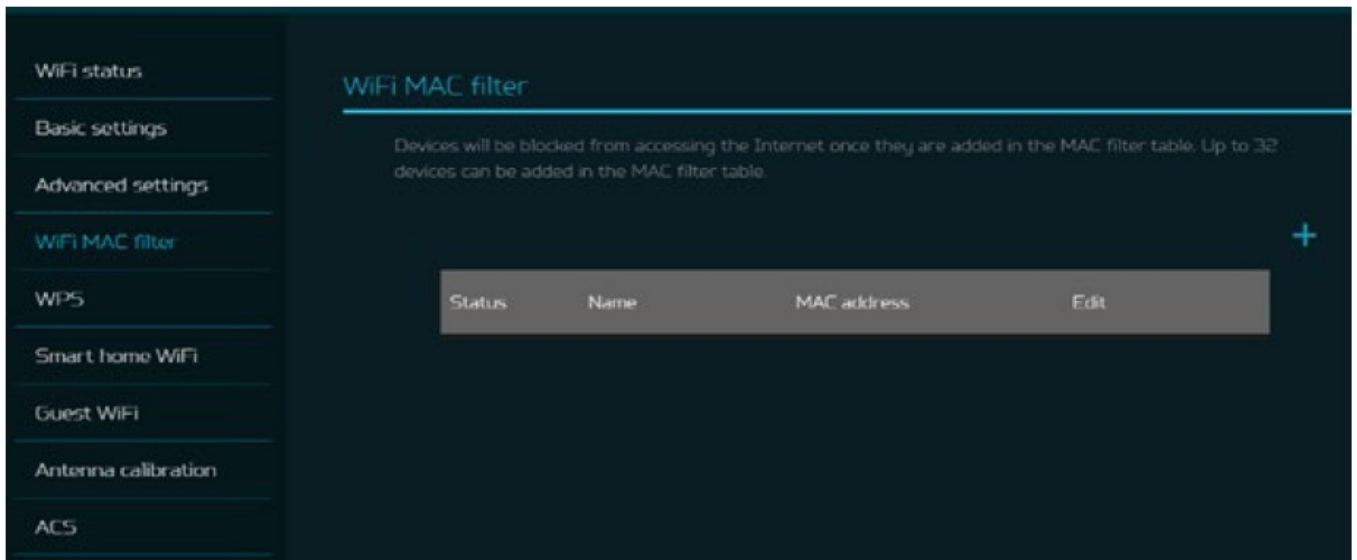

8.6 WPS

WPS (Wi-Fi Protected Setup) provides an easy way to connect your device to the network by pushing the WPS button (next to the USB port) or entering a PIN code.


On this page, you can configure the WPS settings of 2.4GHz and 5GHz bands. There are two methods to configure WPS i.e. using a PIN (client's pin or Router's pin) or you can choose a second method, in which you need to click on "Start WPS", then enable WPS on your wireless device within two minutes. WPS will be disabled, if the Wi-Fi set to WPA3, WPA or TKIP mode, or if the SSID broadcast is turned off.

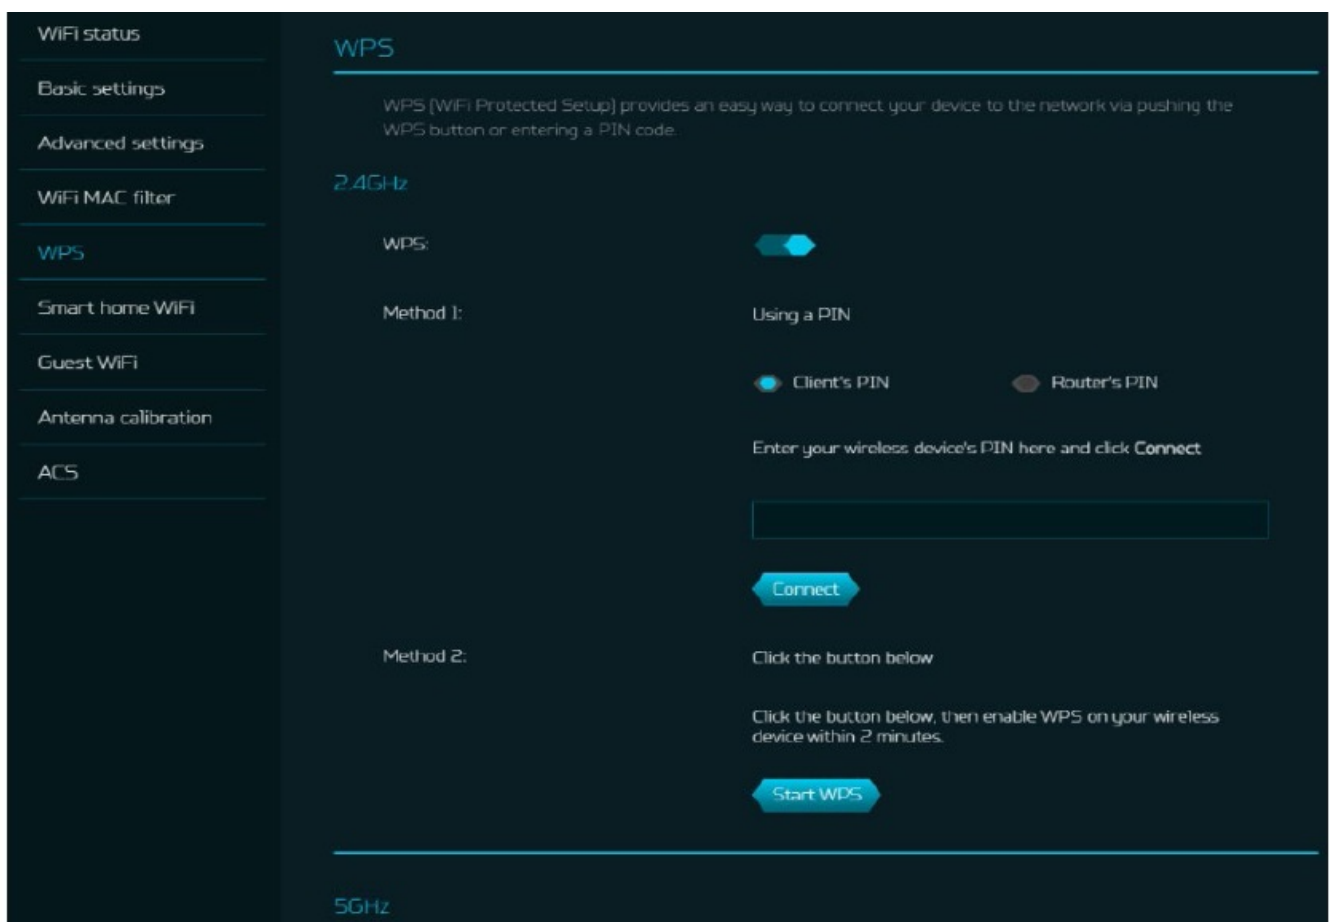

8.7 Smart Home Wi-Fi

This tab provides Internet connection for smart home Wi-Fi, but blocks access to devices on your local network. With the band steering feature enabled, it automatically connects your devices to the best available Wi-Fi frequency in your surroundings.

Smart home Wi-Fi password is set by default, so it is suggested to change the passwords for security reasons.

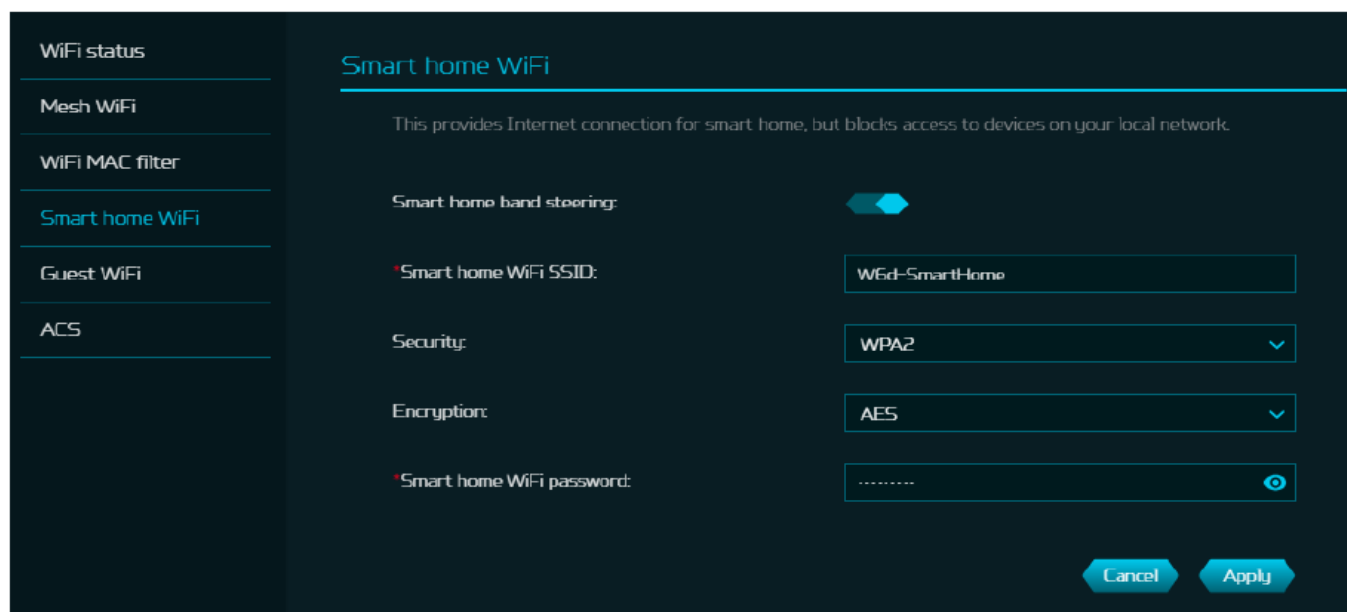


The image shows the 'Smart home WiFi' configuration page. On the left is a sidebar with a list of settings: WiFi status, Mesh WiFi, WiFi MAC filter, Smart home WiFi (highlighted), Guest WiFi, and ACS. The main content area is titled 'Smart home WiFi' and contains a description: 'This provides Internet connection for smart home, but blocks access to devices on your local network.' Below this are several configuration options: 'Smart home band steering' with a toggle switch turned on; 'Smart home WiFi SSID' with a text field containing 'WEd-Smarth-home'; 'Security' with a dropdown menu set to 'WPA2'; 'Encryption' with a dropdown menu set to 'AES'; and 'Smart home WiFi password' with a masked text field and an eye icon to toggle visibility. At the bottom right are 'Cancel' and 'Apply' buttons.

8.8 Guest Wi-Fi

This tab provides information about the Internet connection for guests and their devices accessing your network. Guest Wi-Fi and Smart home Wi-Fi only works on controller mode. It means that the client can't connect to guest/smart home Wi-Fi via mesh agents.

Guest Wi-Fi password is set by the default for all bands, so it is suggested changing the passwords for security reasons.

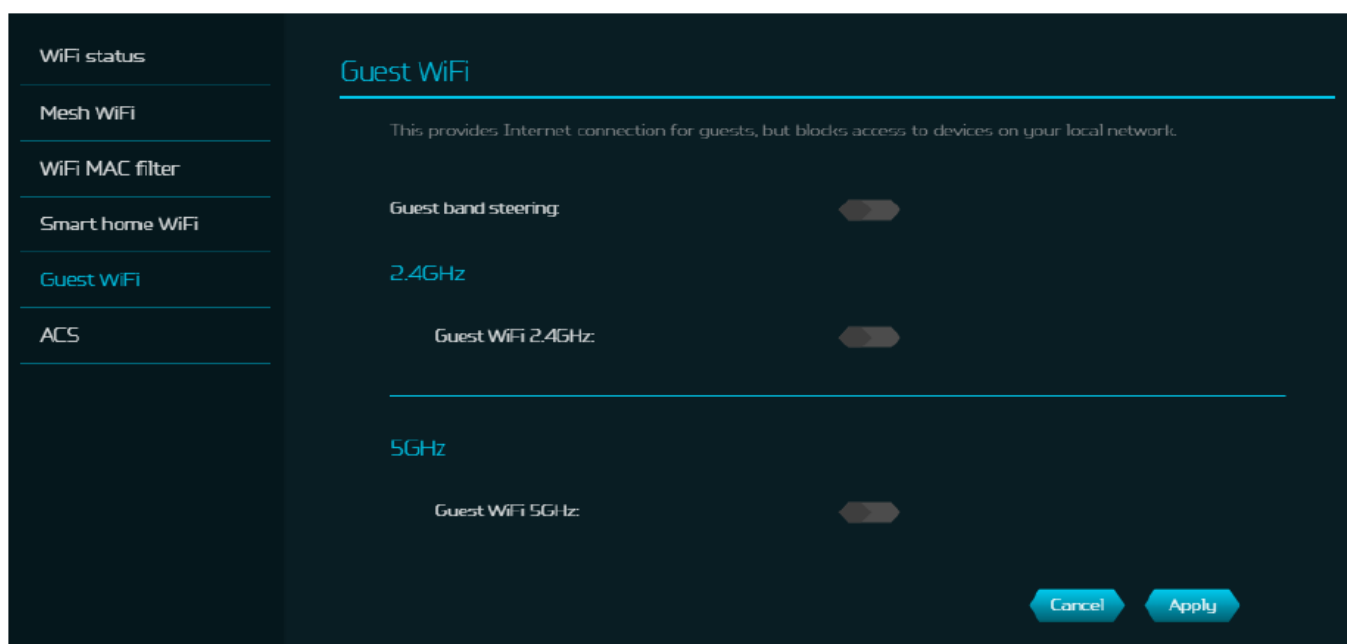

The image shows the 'Guest WiFi' configuration page. The sidebar on the left is identical to the previous page, with 'Guest WiFi' highlighted. The main content area is titled 'Guest WiFi' and has the same description: 'This provides Internet connection for guests, but blocks access to devices on your local network.' The configuration options include: 'Guest band steering' with a toggle switch turned on; '2.4GHz' band settings with a 'Guest WiFi 2.4GHz' text field; and '5GHz' band settings with a 'Guest WiFi 5GHz' text field. At the bottom right are 'Cancel' and 'Apply' buttons.

8.9 Antenna Calibration

In general, we suggest putting all four router antennas up (90 degrees vertical with surface) toward the ceiling when positioned on a flat desk. However, if you want a specific client to benefit from lower latency for a better

gaming experience,
you can follow the steps below to adjust the antenna angle accordingly.


Step 1:

Put the mobile or laptop in a position where you want the best coverage, and then enable the calibration option.

Note: Walls and floors affect the signal between the router and your device. For an optimal signal, it is recommended to put your device in the line of sight with the router.

Step 2:

LED indicators adjacent to the router antenna use color to reflect the signal strength: blue is good; green is normal; red is weak.

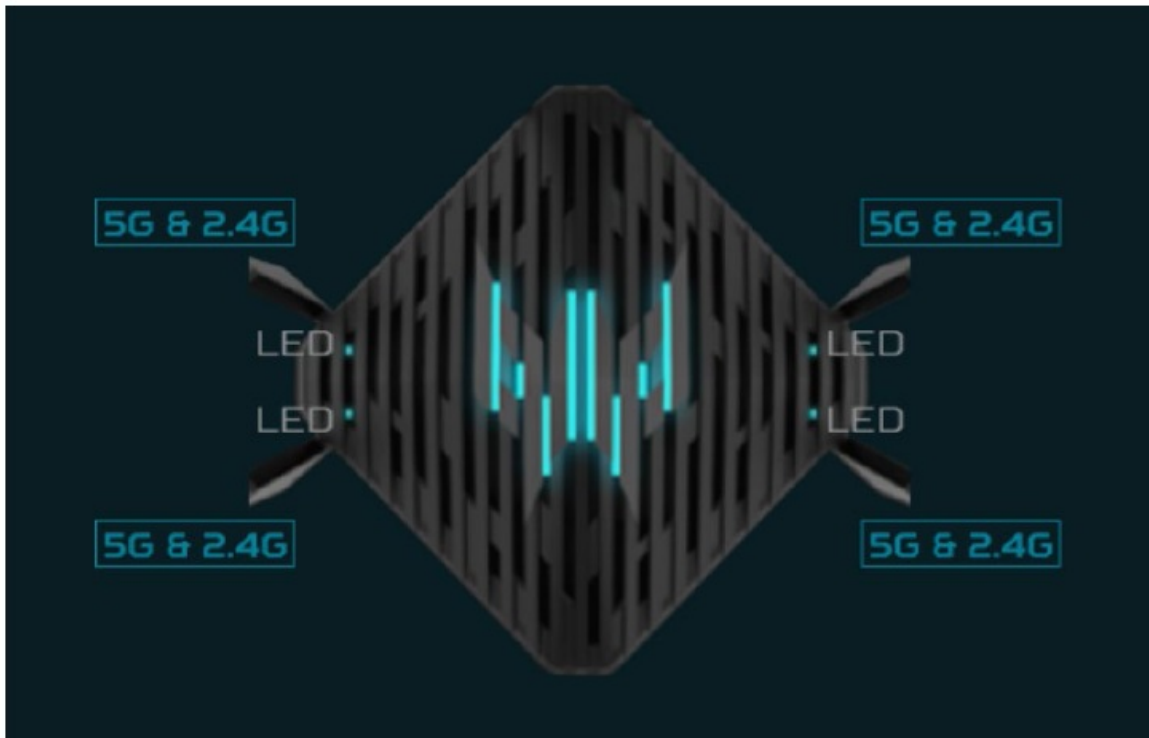

Note 1: Please make sure that your mobile device or computer is wirelessly connected to the router. The feature is not applicable when connected via Ethernet LAN.

Note 2: Four signal-strength LEDs will be ON when the client is associated with 5GHz and calibrated.

Step 3:


Adjust each antenna direction to get better performance.

8.10 ACS (Automatic Channel Selection)

ACS is a mechanism to optimize the channel assignment. It selects the best working channel dynamically. One that is clear and has the least traffic.

Note 1: There will be a small delay, rescanning, and then cycling OFF and ON if the client is associated with the ACS enablement band. Please check your device's wireless connection and select the best Wi-Fi W6 router SSID after the ACS process is completed.

Note 2: The ACS is not applicable if both bands (2.4GHz & 5GHz) are configured as fixed channels. ACS also works in a Mesh mode and when the device is in mesh mode, this will trigger channel planning.

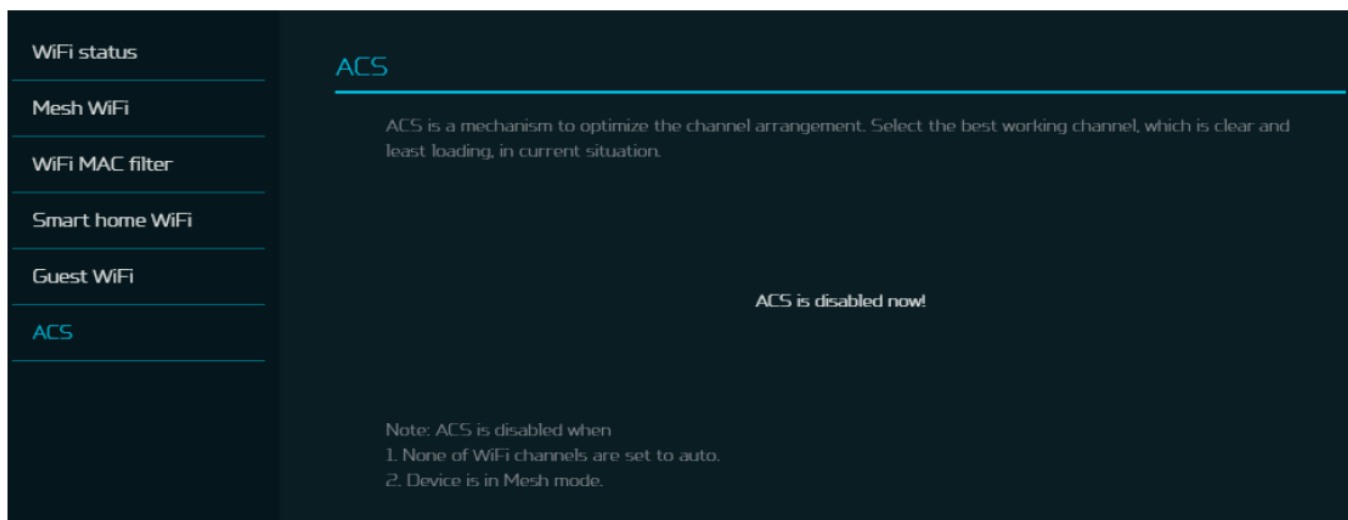


9. LAN

LAN status

On this page, you can view each LAN port status including its associated IP address, MAC address and DHCP server.

The Predator Connect W6d has one Game port and three LAN ports.

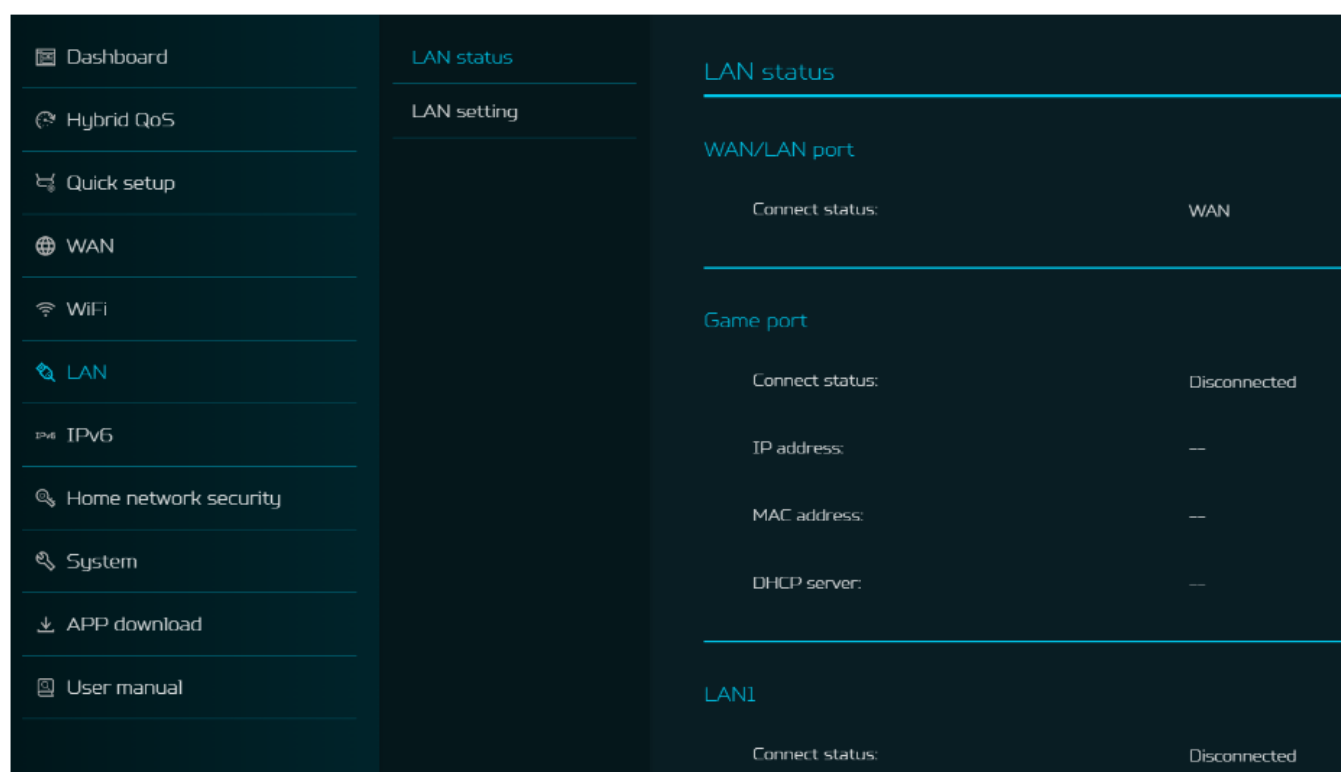

LAN Setting

This tab allows you to set up LAN IP gateway address with an option to enable or disable the DHCP server feature.

You can enter/edit the gateway address and subnet mask. DHCP server provides and assigns IP addresses, default gateways, and other network parameters to client devices. DHCP server can be enabled or disabled as per the network requirement.

The following subnets are reserved for default services. Please do not use it as a gateway address.

1. 192.168.7.x (IPsec VPN)
2. 192.168.8.x (Open VPN)
3. 192.168.10.x (Guest Wi-Fi)
4. 192.168.20.x (Smart Home Wi-Fi)

LAN status

LAN setting

LAN setting

Setup LAN IP address and DHCP server parameters.

* Gateway address: 192.168.76.1

Following subnets are reserved for default services, please do not use as gateway address.

1. 192.168.7.x: IPSec VPN
2. 192.168.8.x: OpenVPN
3. 192.168.10.x: Guest WiFi
4. 192.168.20.x: Smart home WiFi

* Subnet mask: 255.255.255.0

DHCP server: ☒

* Start IP address: 192.168.76.100

User can reserve the IP addresses as Static IP, which are less than the Start IP Address.

Ex: DHCP server start IP : 192.168.76.100.

1. The range of static IP that user can manually set to client devices is: 192.168.76.2-99.
2. The IP range that DHCP server will automatically assign to other client devices is: 192.168.76.100-254.

10. IPv6

You can setup IPv6 settings from this tab.

The Predator Connect W6d supports IPv6 mode below: DHCPv6, static IPv6, PPPoE, 464xlat, 6rd, DS-Lite. Connection mode will be disabled by default.

Dashboard

Hybrid QoS

Quick setup

WAN

WiFi

LAN

IPv6

Home network security

System

APP download

IPv6

Connection mode: Disabled

Cancel Apply

11. Home Network Security

The home network security tab includes network security settings and web and app controller within the parental


control feature. These two features must accept the Trend Micro license agreement before enablement.

11.1 Network Security Setting

This tab contains the network security-related information, powered by Trend Micro, where you can turn on/off the security engine and enable protection against malicious sites, network attacks and harmful connections coming from IoT devices.



Malicious site blocking prevents unwanted sites to open and hence protecting your computer from being infected with Trojans. There is a feature called "Trend Micro's Web Reputation Service (WRS)" that identifies malicious URLs and allow you to take action against infected URLs.

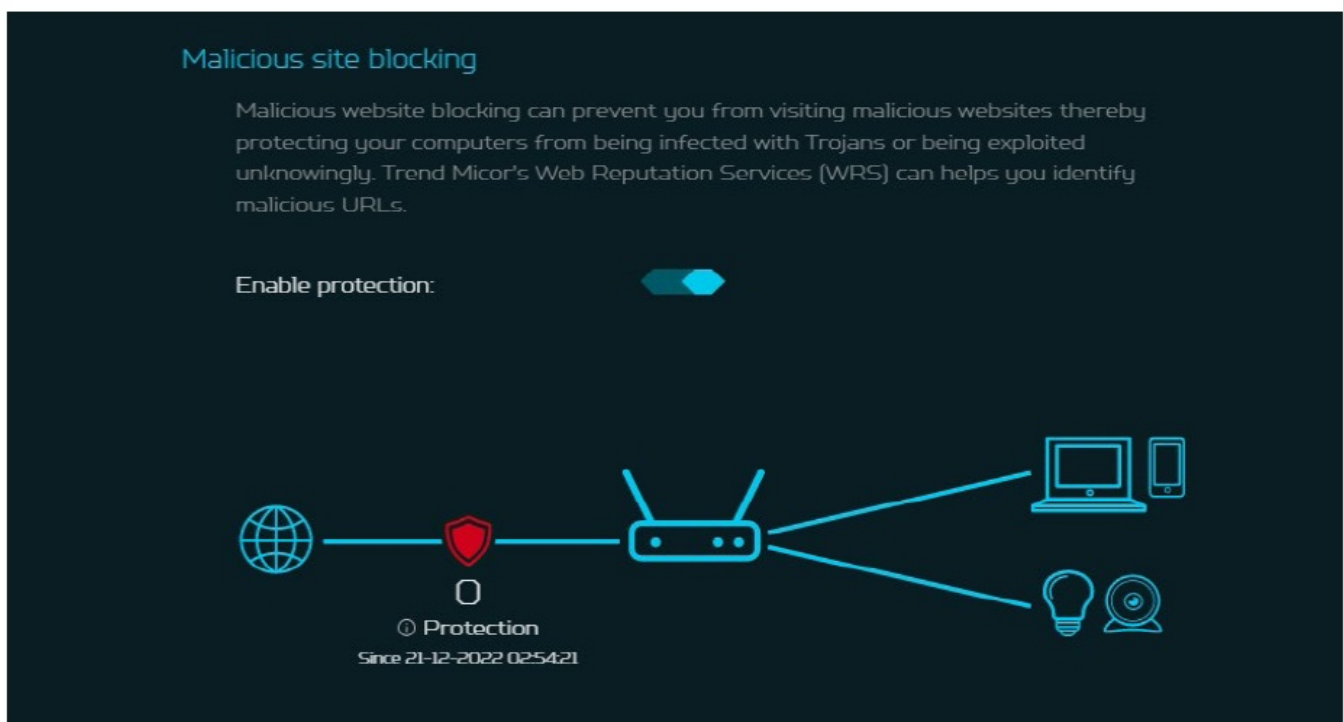


By enabling Network attack blocking feature, the router detects the infected devices and block its network behavior to prevent infection in other devices.

Network attack blocking

Network attack blocking can help prevent the exploitation of a known vulnerability even when the vulnerable systems/devices have not yet been installed with security patches. It can also detect the infected device and block its network behavior to prevent infection to other devices.

Enable protection:

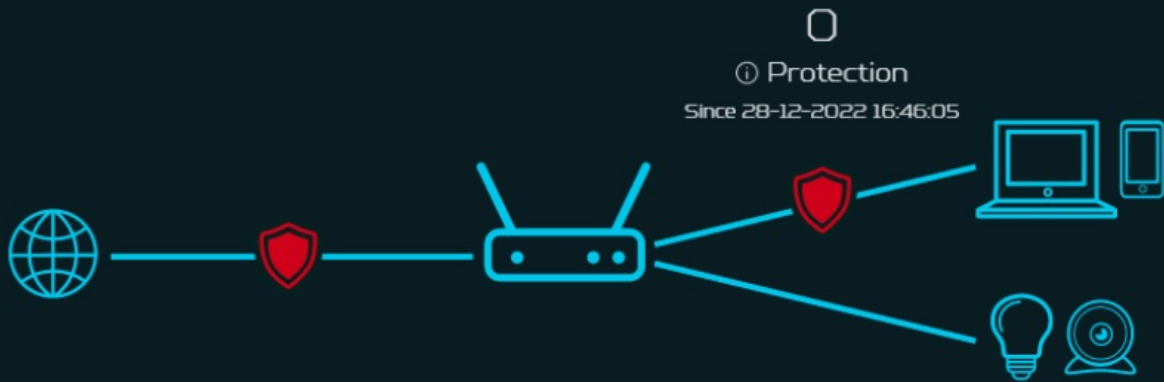


Enabling IoT security protection feature detects and blocks harmful connections from compromised IoT devices by using Trend Micro's smart protection network.

It's a continuously updated IoT device reputation database that prevents the network from false connections.

IoT security protection

IoT security protection can detect and block harmful connections from compromised IoT devices by using Trend Micro's Smart Protection Network, a continuously updated IoT device reputation database.


Enable protection:

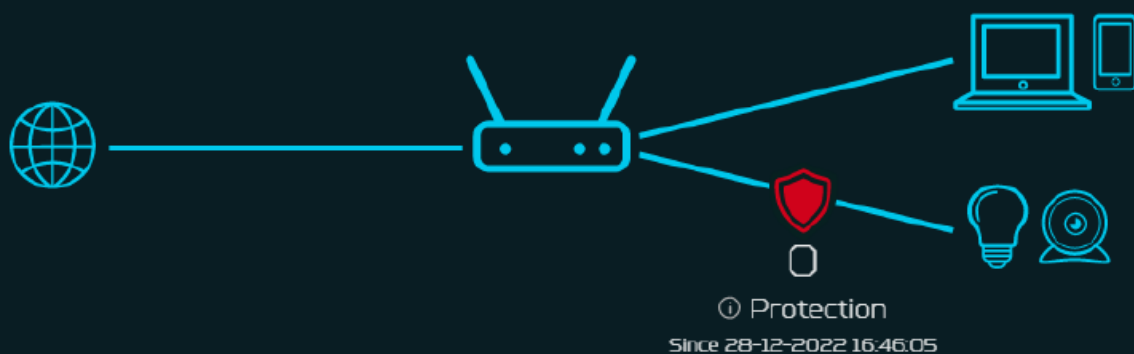

This feature allows you to control and block unwanted sites on specific devices.

You can enable/disable Web & App controller & URL controller.

Once you click on (+) icon, the following window will appear and here you can enter the device list, device name, its MAC address, status and select the following categories for blocking websites.

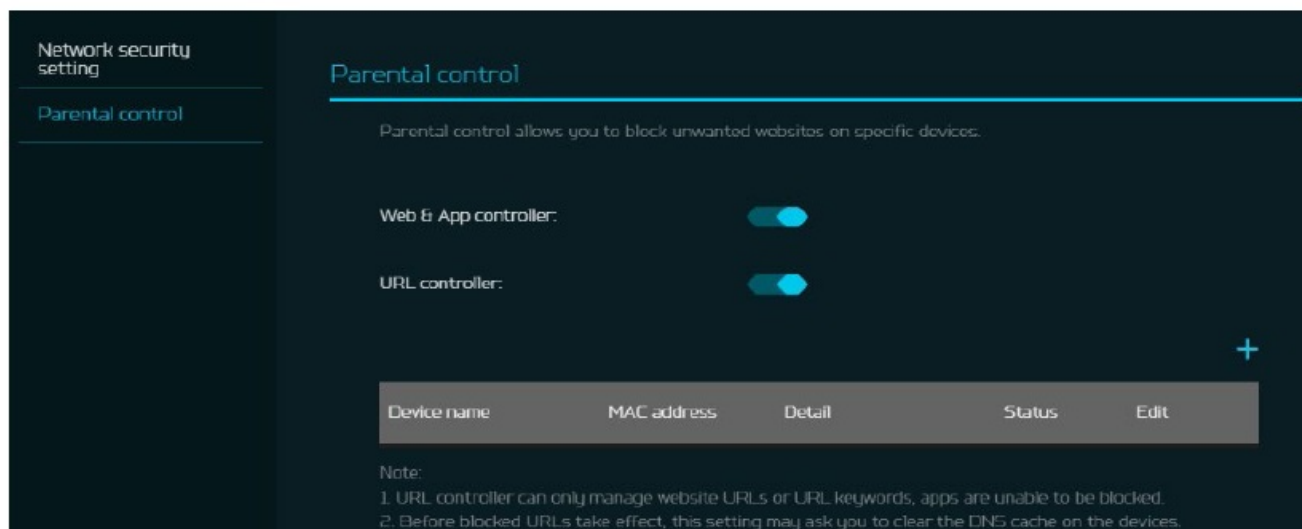

- **Adult**

Block websites and Apps which include Adult, Mature, Illegal, Prohibited, Alcohol, Tobacco, Gambling, Violence, Hate, Racism, Weapons, Illegal Drugs related content.

- **Instant Messaging and Communication**

Block websites and Apps related to Social Networking and Instant Messaging like Facebook, Instagram, Twitter etc.

- **P2P and File Transfer**

Block websites and Apps which include P2P or File transfer.

Add

Website URL

Device list:
Choose device

Device name:
e.g. ABC

MAC address:
e.g. 00:11:22:44:33:22

Status:
On

Category:

- ☐ Adult
Block websites & Apps which include Adult, Mature, Illegal, Prohibited, Alcohol, Tobacco, Gambling, Violence, Hate, Racism, Weapons, Illegal Drugs...
- ☐ Instant Messaging & Communication
Block websites & Apps related to Social Networking and Instant Messaging. Like Facebook, Instagram, Twitter...
- ☐ P2P & File Transfer
Block websites & Apps which include P2P or File transfer.
- ☐ Streaming
Block websites & Apps which include Audio and Video Streaming.

- **Streaming**

Block websites and Apps which include Audio and Video streaming.

Under the URL tab (see adjacent image) you can enter the device list, device name, its MAC address and URL, which you want to forbid access to e.g. www.aaaa.com.

Or you can add a keyword e.g. AAAA to forbid any URL containing the keyword.

You can also enter the Internet access time limit by setting the start time and end time.

Note: If the end time is earlier than the start time, the block time will cross to the next day. If the start time is the same as the end time, the block will be for a full day.

Website

URL

Device list:

Choose device

Device name:

e.g., ABC

MAC address:

e.g., 00:11:22:4C:36:22

URL:

e.g., www.AAA.com

Note:

Add a URL you want to forbid access to, e.g. www.AAAA.com. Or you can add a keyword e.g. AAAA to forbid any URL containing the keyword.

Status:

On

Internet access limit time:

Start time

End time

Note:

If the end time is earlier than the start time, the block time will cross to the next day. If the start time is the same as the end time, the block will be for a full day.

12. SYSTEM

12.1 Operation Mode

In this tab, you can view the different operation modes of the router. Currently, the Predator Connect W6d is operating as Mesh controller.

Operation mode

Login password

System time

Languages

Backup & restore

System information

Port & Bandwidth

Operation mode

This Predator Connect W6d is currently operating as Mesh controller. To change the operation mode, please perform a factory reset.

Router mode

Mesh agent

Mesh controller

Bridge mode

12.2 Login Password

You can change the login password of your Predator Connect W6d from this page. To make a new password, you need to enter the current password first. Please use a strong password to keep it secure.

Login password

System time

Languages

Backup & restore

System information

Restart & Reset default

Firmware update

System logs

USB storage

Main LED

Logout

Login password

Change the password of your Predator Connect W6d. Please use a strong password to keep it secure.

*Current password:

Please enter the current password

*New password:

*Confirm new password:

Cancel Apply

12.3 System Time

This tab allows you to synchronize the device time with the system time by enabling “Automatically set time zone”. By enabling “daylight savings time”, the device will automatically adjust the time according to the time zone.

Login password

System time

Languages

Backup & restore

System information

Restart & Reset default

Firmware update

System logs

USB storage

Main LED

Logout

System time

This allows device to synchronize the system time to the time zone selected. When the daylight savings time setting is ON, device will automatically adjust the time according to the time zone.

Automatically set time zone:

Automatically adjust to daylight savings time:

Time zone:

[UTC+05:00] Islamabad, Karachi


Current date and time:

14-02-2023 22:35:49

Cancel Apply

12.4 languages

You can select the language of your Predator Connect W6d from this tab.

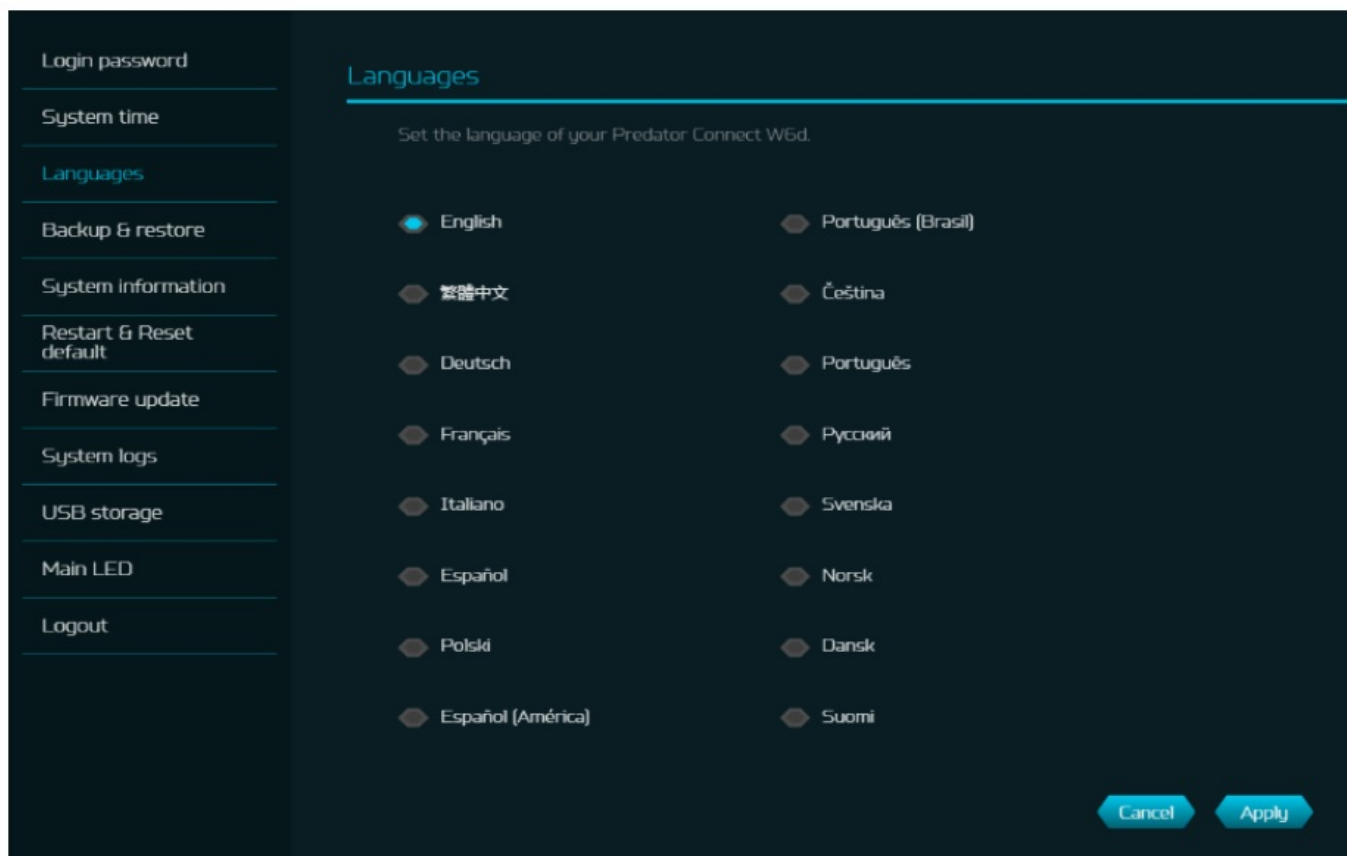


12.5 Backup and Restore

In this tab, you can check how to save the configuration:

Click on “Backup” to backup current device configuration. On both Windows and MAC OS, this is saved to your ‘Downloads’ folder.

How to restore the configuration:


- 1) Click Browse to select a file
- 2) Click Restore

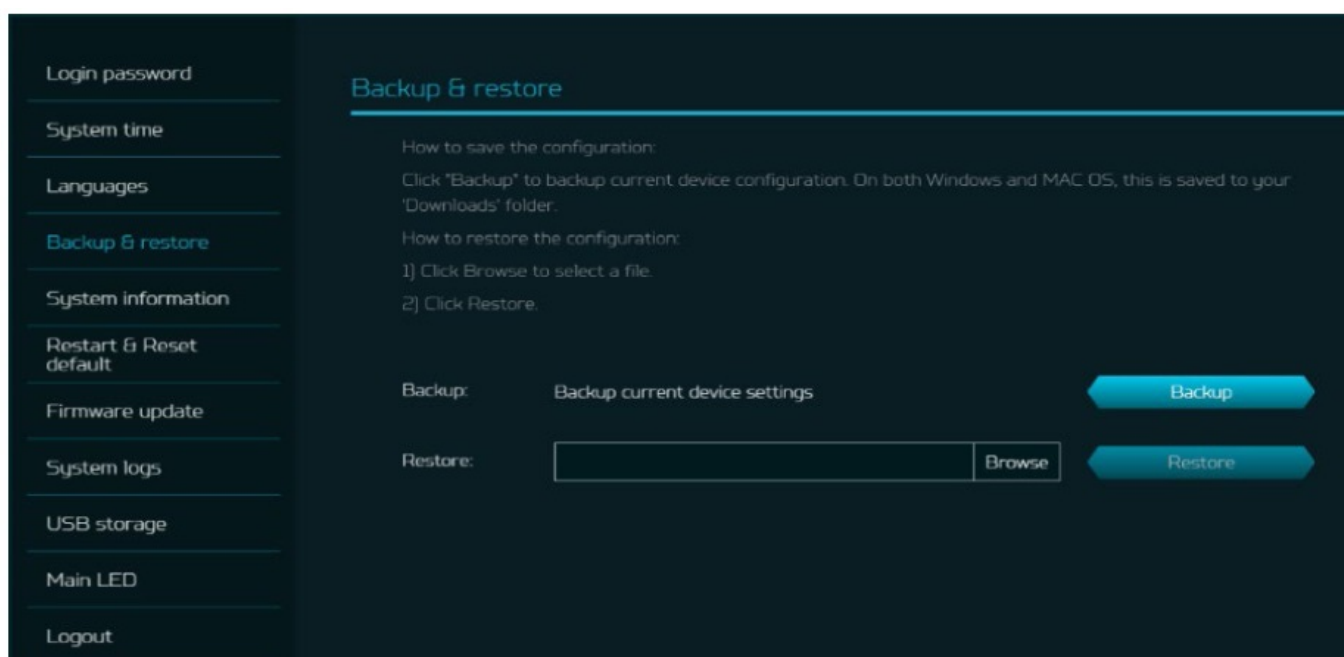

12.6 System Information

It shows key device information of Predator Connect W6d, such as:

- Device name
- Serial number
- Firmware version

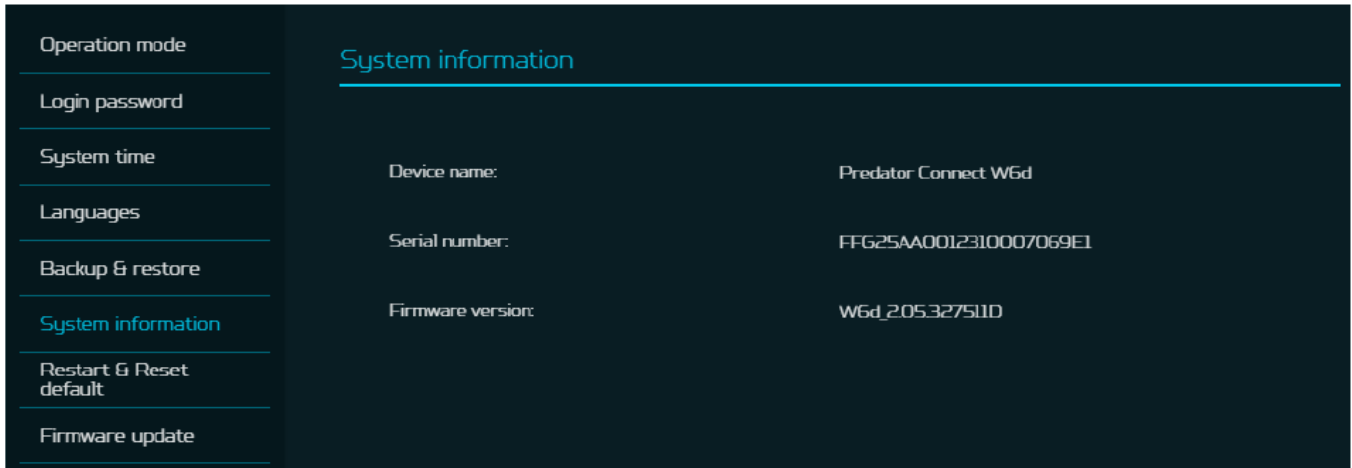


12.7 Restart and Reset Default

From this tab, you can click on “Restart device” to reboot the router and click on “Factory data reset” to restore the factory default settings.


Please check if you have bind your device with Predator Connect Mobile App.

After the factory reset, please don't forget to unbind the device from mobile App.

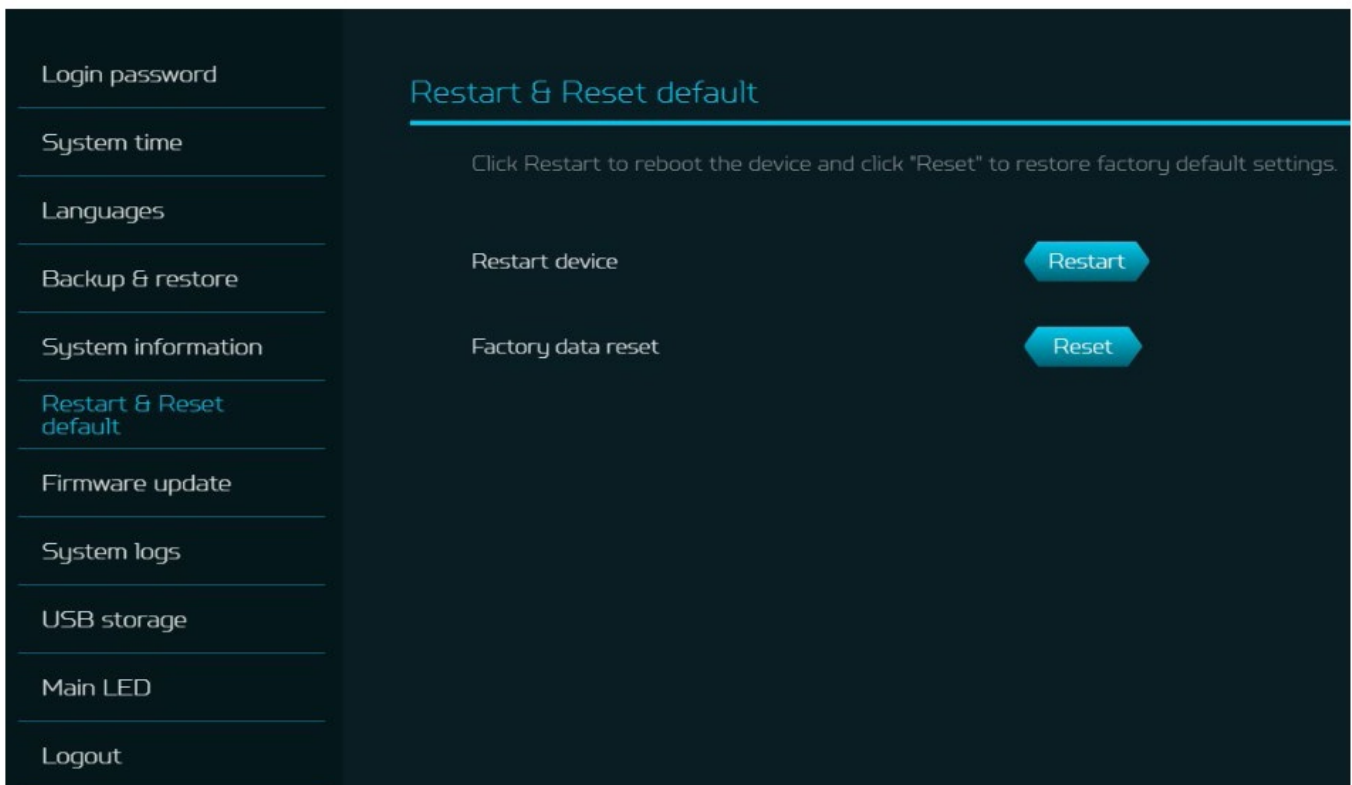


12.8 Firmware Update

In this tab, you can check the existing firmware version and also, click on “check new”, to see if there is an update available.

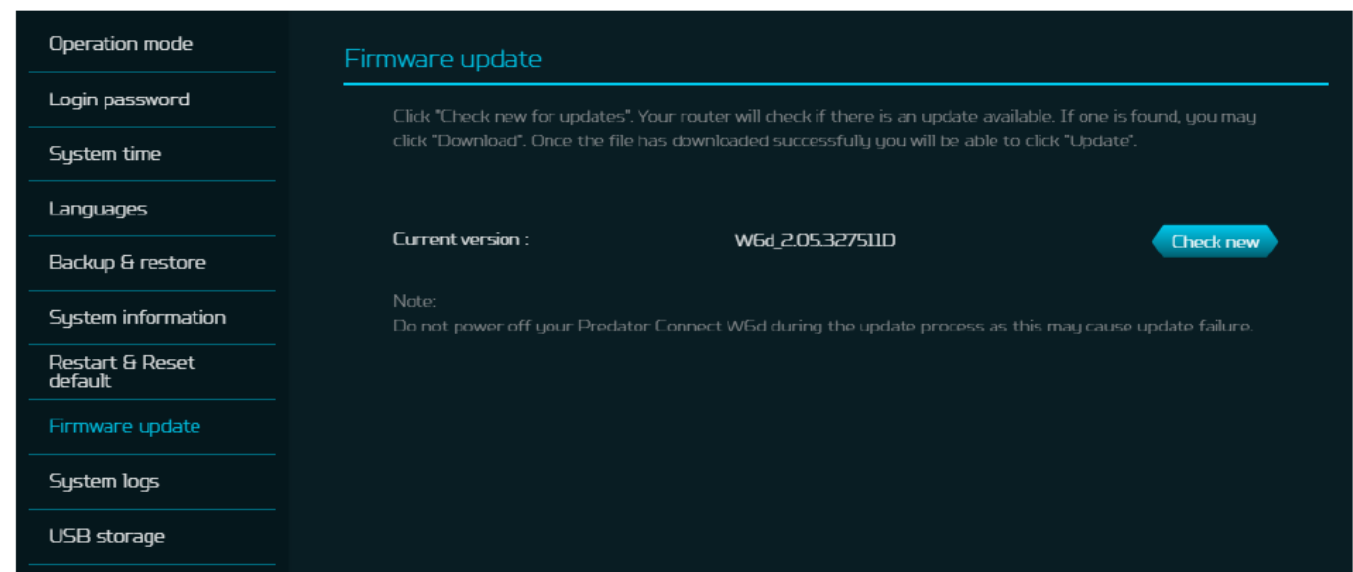

12.9 System Log

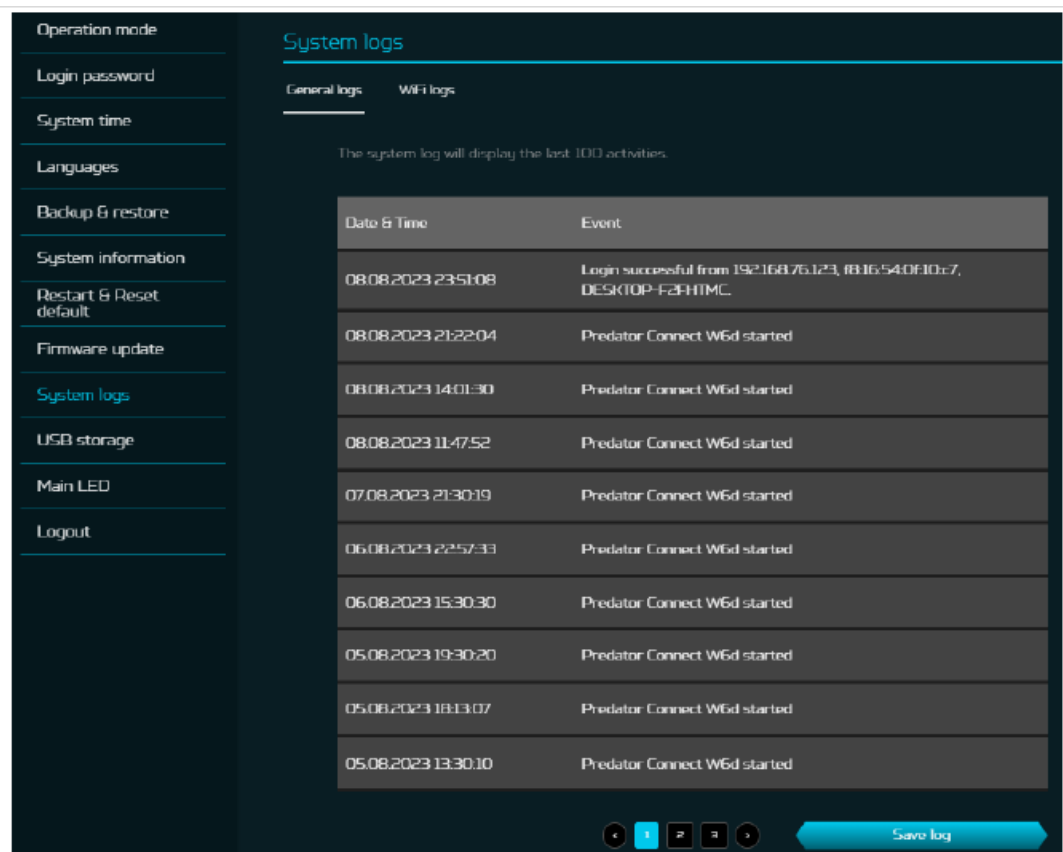

Click on Wi-Fi logs to see all the Wi-Fi-related logs.
You can save the Wi-Fi logs by clicking the “Save log” button at the bottom of the page.

System logs

General logs

WiFi logs

The WiFi logs will display WiFi status/configuration data.

[2023-08-08 23:55:49] [YX65][LOG][WiFi] Start to Collect Logs

Dump ra0:

```
=====
ra0 IEEE 802.11ax ESSID:"PredatorW5-5Gdh-2.4GHz"
Mode:Master Channel:9 Access Point: C0:18:50:9D:27:4C
Bit Rate:573 Mb/s
Link Quality:10 Signal level:0 Noise level:213
Rx invalid nwid:0 invalid crypt:0 invalid misc:0

ra0 stat:
CurrentTemperature = 51
Tx success = 26061
Tx fail count = 6060, PER=18.8%
Current BW Tx count = 32121
Other BW Tx count = 0
Rx success = 198027
Rx with CRC = 76564, PER=27.8%
Rx drop due to out of resource = 42
Rssi: -39 -35 -32 -31
CN Info: = 0
Last TX Rate = MCS2, MCS9, BW20, 0.4us GI, VHT, LDPC
Last RX Rate = MCS15, BW20, SGI, HT_MM, LDPC
proxy arp enable = 0
WNMNotify enable = 1
WNM BSS Transition Management enable = 1
GAS come back delay = 1
GAS MMPDU size = 1024
GAS enable = 1
```

12.10 USB Storage

This router has a USB port where you can plug in a USB drive and allow all authorized users to access the files on your USB drive.

Once you plug in a USB drive, it will display device type, size and free space available. Enter the server name and login credentials for shared access to USB drive.

Login password

System time

Languages

Backup & restore

System information

Restart & Reset default

Firmware update

System logs

USB storage

Main LED

Logout

USB storage

Plug in USB dongle on Predator Connect W6d and allow all users to access it as a shared file folder.
Please explore "\\192.168.761" in File Explorer to access USB storage.

USB device

Type:	---
Total size:	---
Space free:	---

Sharing setting

*Server name:

Predator

*User name:

admin

*Password:

Network neighborhood (Samba): ☐

Cancel










Apply

12.11 Main LED

This tab displays information about LED colors and its indication. These LED indicators will help you to know and understand router behavior.

Main LED

LED definition

 Blue flashing During power on	 Blue breathing WAN status: Good	 Solid red WAN status: Disconnected
 Orange flashing During image upgrade	 Green breathing WAN status: Normal	 Solid blue Device boot on success
 White flashing During factory reset	 Orange breathing WAN status: Poor	
 Green flashing WPS active		


Congestion Detection tests helps you to identify the Internet connection status; whether it is good, normal, or poor. Different LED lights will indicate differently statuses. LED is OFF if congestion detection is disabled.

Enter the host IP addresses for detection.

Congestion detection setting

Congestion detection tests the internet connection, the LED is blue when good, green when normal, orange when bad, and red when disconnected. If congestion detection is disabled, LED is turned off.

Congestion detection: ☒

Host for detection: 

* Host 1 IP:	<input type="text" value="8.8.8.8"/>
* Host 2 IP:	<input type="text" value="8.8.4.4"/>
* Host 3 IP:	<input type="text" value="4.2.2.2"/>
* Host 4 IP:	<input type="text" value="1.1.1.1"/>
* Host 5 IP:	<input type="text" value="1.0.0.1"/>

Enabling LED night mode, only dims the device's luminance.

Please check if you have already setup the correct time zone (auto/manual), before enabling this option.

You can set up the daily schedule as needed.

LED night mode setting

LED becomes breathing mode when night mode is enabled and current time is in night mode time intervals.

Night mode: ☒

*Night mode from: 00:00 ~ 23:59

Note: If the end time is earlier than the start time, the LED night mode duration will cross to the next day.

*Repeat: ☒ Mon ☒ Tue ☒ Wed ☒ Thu ☒ Fri ☒ Sat ☒ Sun

Cancel Apply

13. Troubleshooting

13.1 Quick Tips

This section describes common issues which you can encounter.

Sequence to restart the device and network:

1. Turn off and unplug the modem power plug.
2. Turn off the W6d router.
3. Plug in the modem power plug and then turn it on. Wait for two minutes till the modem LED is steady as before.
4. Turn on the W6d router and wait for the device's upper deck main LED steady breathing.

13.2 Frequently Asked Questions (FAQs)

13.2.1 What can I do if I forget my wireless password?

- Connect to the W6d router via Ethernet cable LAN.
- Visit device portal <http://acer-connect.com> and login admin.
- Go to Wi-Fi -> Basic settings/Retrieve or reset the Wi-Fi passwords.

13.2.2 What can I do if I forget the router's web portal admin password?

Reset the device by pressing and holding the reset key until the LED starts blinking white. After the device restores to factory default, please login web admin portal with admin PWD, label printed on the bottom of the device.

Note 1: The device web admin will be locked after 5 wrong password attempts. The user is required to reboot the device to disable the web admin.

Note 2: Remember to set up the device's internet connection after reset. Remember to also change the admin

password.

Note 3: If you ever bind the device via Predator Connect mobile app; remember to unbind it after the factory data reset.

13.2.3 What can I do if I can't log into the router's web admin portal?

Please follow the steps below to check on your client's device.

- Check whether the client-allocated IP and DNS server IPs both are with the same subnet and gateway.
- Clean the browser cookies or use private/Incognito mode to access the router admin.

13.2.4 What can I do if I can't surf the internet even though the configuration is finished?

Please follow the step below to check on your W6d router:

- Login to the web admin portal dashboard to check Internet status.
- Continuingly, if the Internet status is up and connect. Go to the WAN setting, manually configure the DNS server using the below IP and apply:

Primary DNS server: 8.8.8.8

Secondary DNS server: 8.8.4.4

- If the issue is still there, please restart the modem and router accordingly.

14. Appendix Factory Default Setting

Router web admin	
URL	http://acer-connect.com or http://192.168.76.1
Login Password (case-sensitive)	AcerXXXX (XXXX is randomized variables. Please check the device's bottom label)
Local Network (LAN)	
Gateway address	192.168.76.1
Subnet mask	255.255.255.0
DHCP server	192.168.76.1
DHCP range	192.168.76.100 to 192.168.76.254
Time zone	Depends on the country or region you bought the router.
DHCP starting IP address	192.168.76.100
DHCP ending IP address	192.168.76.254
Time adjusted for daylight save time	Enabled.
Wireless LAN (WLAN)	
Wi-Fi SSID (case-sensitive)	2.4GHz: PredatorW6d-YYYY-2.4GHz 5GHz: PredatorW6d-YYYY-5GHz (YYYY is randomized variables. Please check the device's bottom label)
Security	2.4GHz : WPA2/WPA3 5GHz : WPA2/WPA3
SSID Broadcast	Enabled.
Country / Region	United States in the US; otherwise, varies by region.
RF channel	2.4 GHz : Auto 5 GHz : Auto
Default operation mode (with AX enabled)	2.4 GHz: Up to 600 Mbps 5 GHz: Up to 4804 Mbps
Guest Wi-Fi	Disabled.
Smart Home Wi-Fi	Disabled.
Home Network Security	Disabled.

15. Router Basic Specification

Processor	System	MT7986AV
	CPU	Quad A53 2.0GHz
Memory	LPDDR	1GB
	Storage	4GB
Wireless LAN	IEEE standard	802.11 a/b/g/n/ac/ax
	MU-MIMO	4 X 4 streams
	Band	Dual band, 2.4/5GHz
	Throughput	AX6000
Ethernet	WAN	1 x 2.5Gbps
	LAN	4 x 1Gbps with 1 Game port
USB	Port	USB 3.0 Type-A
	Storage	FTP, Samba
Button	Power	Power-ON/OFF
	WPS	Yes
Form factor	Dimension	264.6 x 256.4 x 109.3 mm
	Weight	850g
DC Power Jack	Input Voltage	AC 100-240V, 50-60Hz, 1.6A
	Power Adapter	12V/2A 24W

Specifications

- Model: Predator Connect W6d
- Wi-Fi Bands: Dual-band
- Router Version: v2.1
- Revision Date: August 2023

FAQ (Frequently Asked Questions)

Q: What should I do if I forget my admin password?

A: If you forget your admin password, you will need to perform a factory reset on the router to regain access. Refer to the manual for instructions on resetting the router to its default settings.


Q: Can I change the Wi-Fi password after initial setup?

A: Yes, you can change the Wi-Fi password at any time through the router's web admin portal or mobile app settings. Ensure you choose a strong password to secure your network.

Q: How can I update the firmware of the router?

A: Firmware updates can typically be done through the web admin portal. Check for firmware updates regularly to ensure your router has the latest features and security patches.

Documents / Resources

 <p>Predator Connect W6 Dual-Band Wi-Fi Router User Guide v1.1</p> <p>© 2015 Acer Inc. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording, or by any information storage and retrieval system, without prior written permission from Acer Inc. Acer Inc. is not responsible for any errors or for any consequences arising from the use of the information contained in this publication. The appearance of trademarks in this publication does not constitute an endorsement or approval by Acer Inc. of the quality or value of the product advertised or of the claims made for it by its manufacturer. Acer Inc. is not responsible for any errors or for any consequences arising from the use of the information contained in this publication. The appearance of trademarks in this publication does not constitute an endorsement or approval by Acer Inc. of the quality or value of the product advertised or of the claims made for it by its manufacturer.</p>	<p>Acer W6 Predator Connect Wireless Router [pdf] User Guide</p> <p>W6 Predator Connect Wireless Router, W6, Predator Connect Wireless Router, Connect Wireless Router, Wireless Router</p>
---	---

References

- [acer-connect.com](https://www.acer-connect.com)
- [Connect, Protect and Build Everywhere | Cloudflare](#)
- [Domain Name System \(DNS\) | Oracle](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.