



acer WPS1 CastMaster Wireless Presentation System Instruction Manual

[Home](#) » [Acer](#) » acer WPS1 CastMaster Wireless Presentation System Instruction Manual 

Contents

- [1 acer WPS1 CastMaster Wireless Presentation System](#)
- [2 Introduction](#)
- [3 acer WPS1 CastMaster Wireless Presentation System](#)
- [4 Upper left Icon-CastMaster Setting](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)



acer WPS1 CastMaster Wireless Presentation System



Introduction

Thanks for choosing Acer Cast

acer WPS1 CastMaster Wireless Presentation System

Master. Acer CastMaster can support up to four mobile devices as input sources, casting the content to the same output screen simultaneously. Also, Acer CastMaster is user-friendly to heterogeneous platforms, supporting Android, iOS, Windows, and Mac, which greatly enhances the availability for business, education or meeting usage scenarios.

Configuring your CastMaster via Web

For CastMaster, the user may configure their device via a web browser interface, which greatly enhances user experience. In CastMaster's Web setting sections, customers may do custom settings including output resolution, preferred language, max connections, etc, based on different needs and usage scenarios.



Begin to set with CastMaster


To access Web settings with CastMaster, please follow the below instructions, connecting your phone or laptop to CastMaster. We provide users with two connecting methods: Direct Link or Through Wi-Fi.

Acer CastMaster


① Power On & Connection



② Mirror & Control

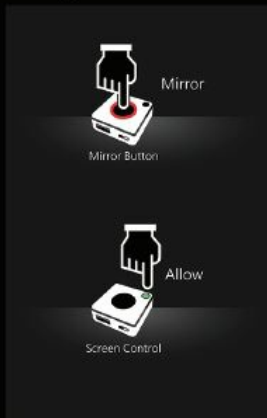

③ Display

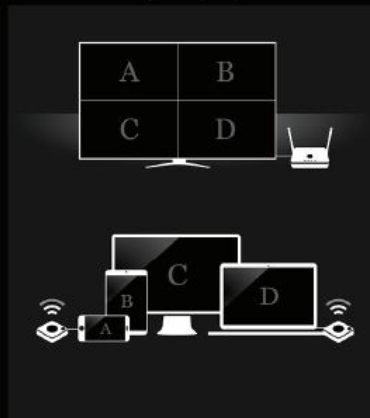

Connecting through Direct Link

Connecting CastMaster to an external power supply. Connecting CastMaster to an external display via HDMI port. Once the above steps are done, users will see the below standby screen on the external display. Users may see the required information for connection at the upper middle of the standby screen: SSID and Password.

Acer CastMaster

SSID : Quattro-BFF32E89

Password:66778899

SSID: Selecting the correct SSID in the device's Wi-Fi list

Password: Entering the password to connect your device with CastMaster. Once connected, open your web browser, and enter the IP address at the URL bar. You may see the IP address in the bottom left corner. Please note that the below IP is for reference only, which may vary depending on the device. You may see the Web Setting Page once successfully connected.

For Android users, please enable USB debug mode for USB display first.


IP:192.168.10.10

Connecting Through Wi-Fi or External AP

If CastMaster is connected to the internet, the Wi-Fi icon will be displayed at the upper right corner of the standby screen. Entering the IP address at the URL bar. You may see the IP address at the bottom left corner. Please note that CastMaster and mobile devices must facilitate the same network. You may see the Web Setting Page once successfully connected.


Web Setting Home Page

Users may see two icons on the Web Setting Home Page. Each of them serves a different purpose.

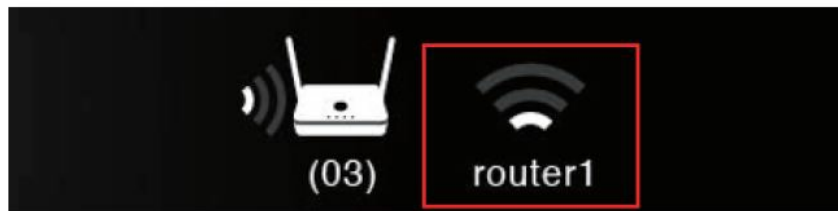


Upper Right Icon-Login as Admin

Press this icon and log in as an Admin role. Please note that the first time you log in as an Admin user, enter the default password “000000”. To provide better security for CastMaster, the user must modify the default admin password.

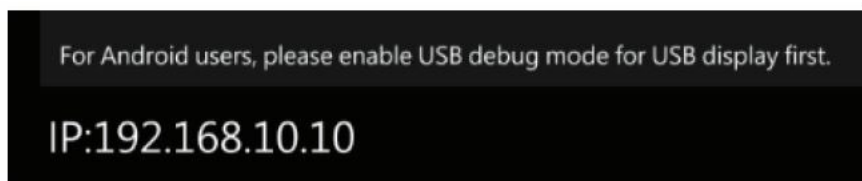

Upper left Icon-CastMaster Setting



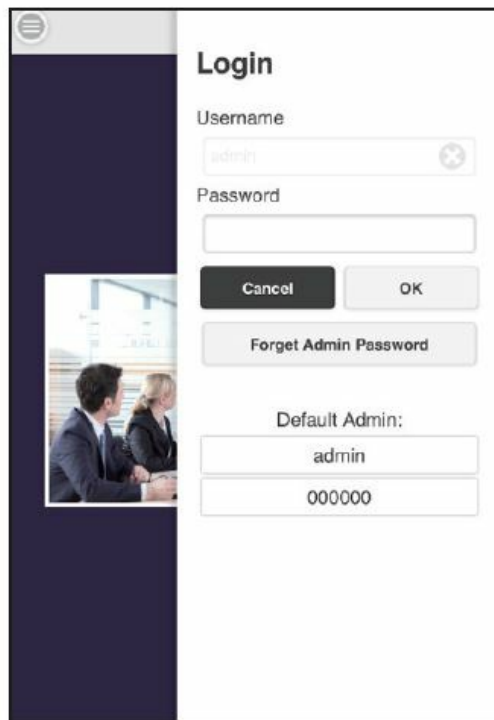


The image shows a mobile application login screen. On the left is a dark blue sidebar with a hamburger menu icon at the top and a photo of two people in business attire. The main area is white and titled 'Login'. It contains a 'Username' field with 'admin' entered, a 'Password' field, a 'Cancel' button, an 'OK' button, and a 'Forget Admin Password' button. Below these is a 'Default Admin:' section with two input fields: 'admin' and '000000'.

After pressing, the left side menu will pop out, providing the user with different options about device configuration.

CastMaster is designed with two login modes: Non-Admin and Admin .


Non-Admin User

A user is provided with normal access control rights, including Device Management, Network Management, etc.

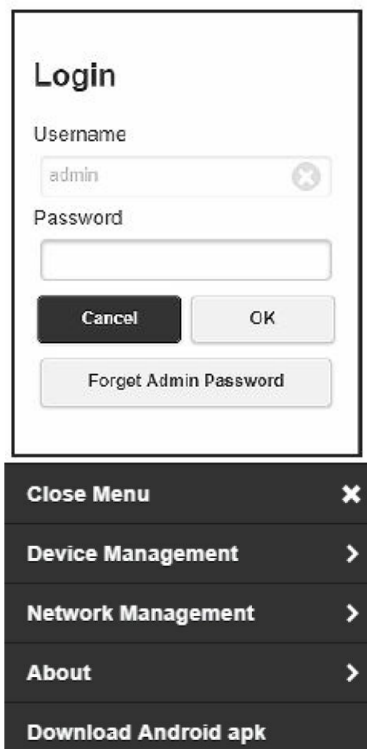

The image shows a mobile application login screen with a bottom menu. The top part is a white box titled 'Login' containing a 'Username' field with 'admin', a 'Password' field, a 'Cancel' button, an 'OK' button, and a 'Forget Admin Password' button. Below this is a dark blue bottom menu with five items: 'Close Menu' with a close icon, 'Device Management' with a right arrow, 'Network Management' with a right arrow, 'About' with a right arrow, and 'Download Android apk'.

Admin User

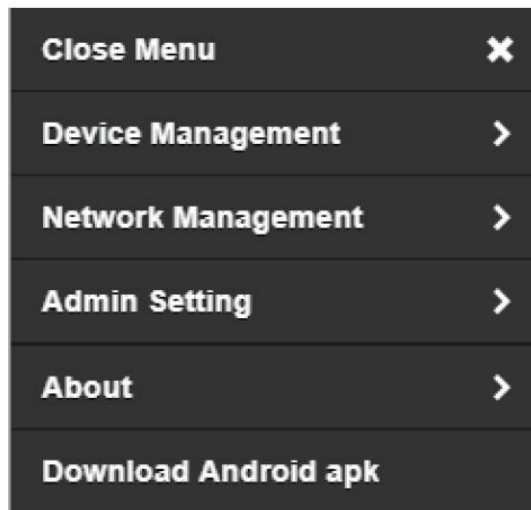


An Admin User is provided with the finer granularity of access control rights.


Start Configuring your CastMaster

In the following section, we will elaborate on the details of each configuration option.

Close Menu

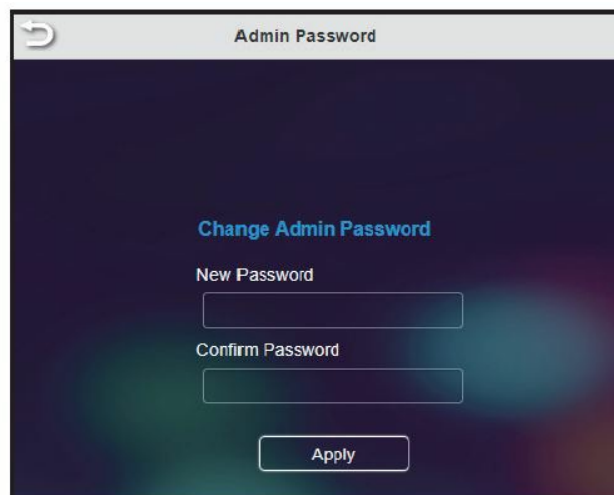


 When clicking the “X” mark, the window will return to the Web Setting Home Page.

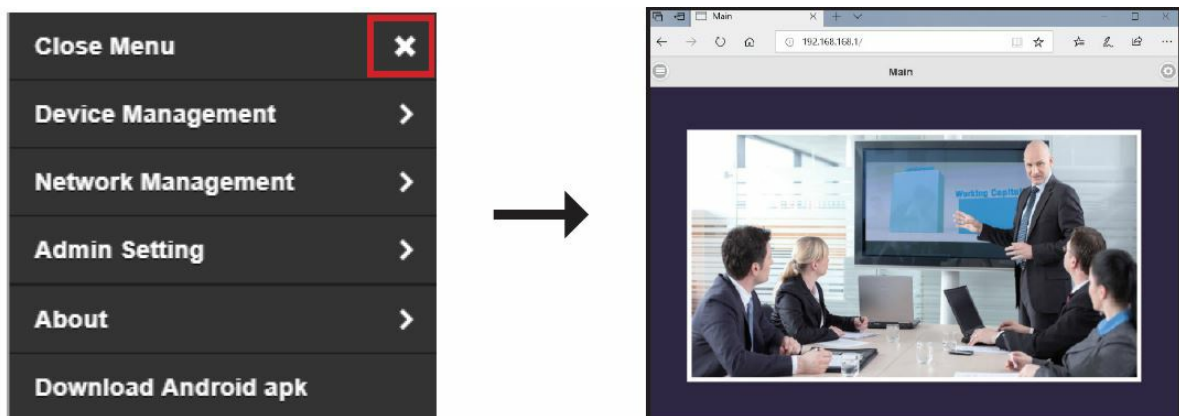


Device Management

 
CastMaster provides users with the following configuration options, including Language, Resolution, Max Connections, and Download Pairing File. Language: Supporting mainstream languages, such as English, German, French, Chinese, etc.

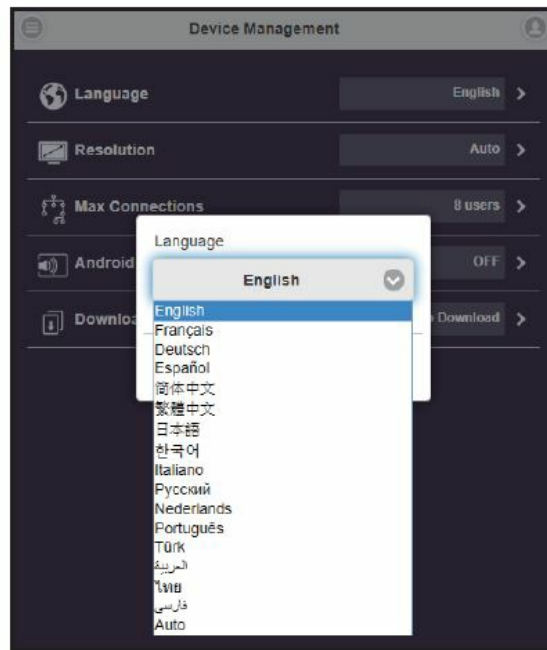


Resolution: CastMaster will select the proper output resolution automatically. Users may switch to other options based on different usage scenarios. The default output resolution will be 1920 x 1080_60P. CastMaster can support up to 4K with a frame rate of 24P.

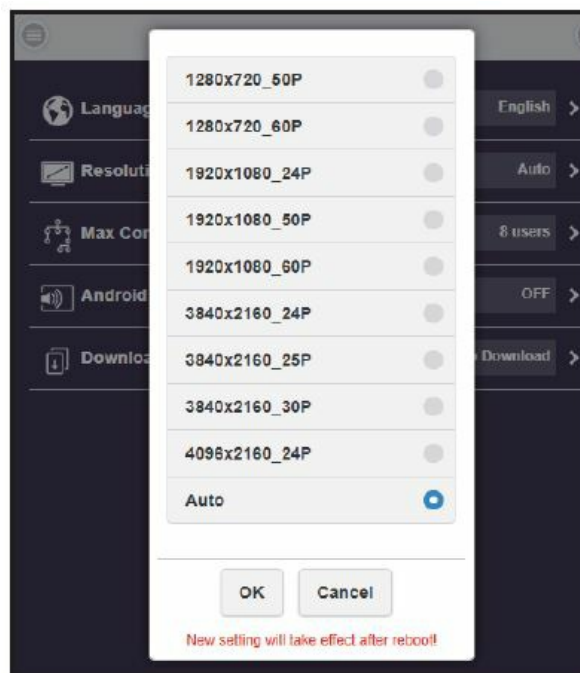

 Max Connections: The host may decide the number of devices that are allowed to connect to CastMaster. The default setting of connections is 8 users. Please note that with the rise of connected devices, the lower network bandwidth would be for each user.

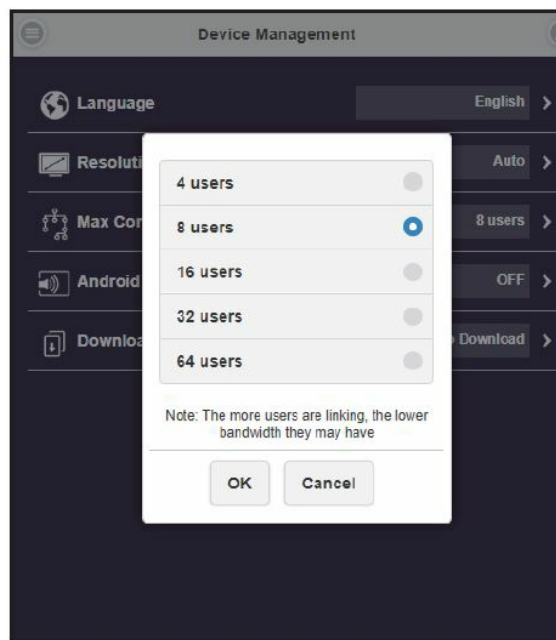


Download Pairing File: Download the required file for pairing the receiver and transmitter.

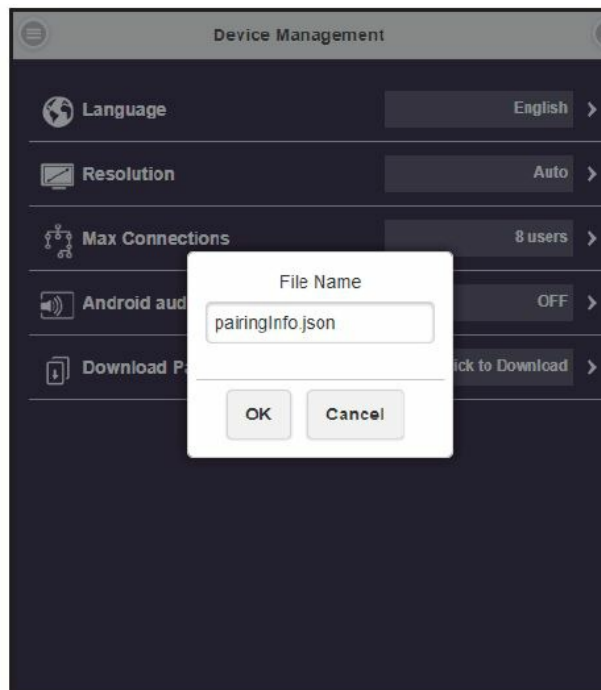


Network Management

 Connecting CastMaster to the internet through external Wi-Fi or LAN. Connect to 5Ghz Wireless Access Point:
Once your device is connected to CastMaster, enter the required password to access an external Wi-Fi.

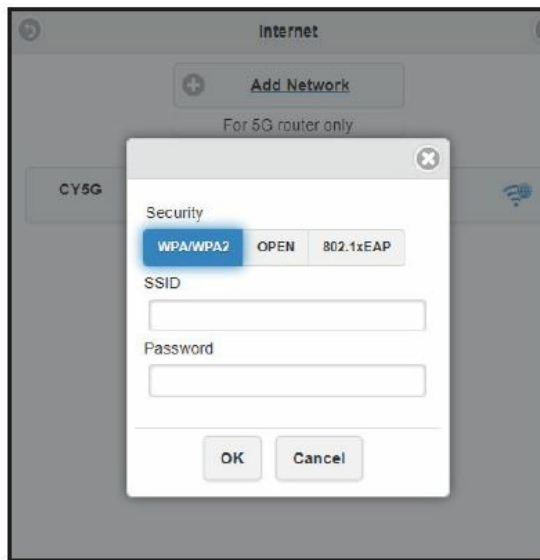

Remember Wi-Fi


Remember Wi-Fi On CastMaster will remember the previous Wi-Fi configuration. Remember Wi-Fi Off: CastMaster will erase the Wi-Fi configuration once disconnected.

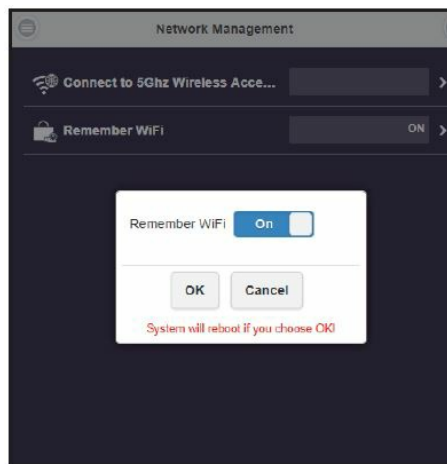


Admin Setting

Admin Setting is designed for advanced users, including MIS engineers, IT specialists, Network admin, etc. In the Admin Setting section, CastMaster provides users with various custom configurations. Wi-Fi Channel: Setting up Wi-Fi Channel. CastMaster provides the below three options:


1. Country
2. Channel
3. Bandwidth

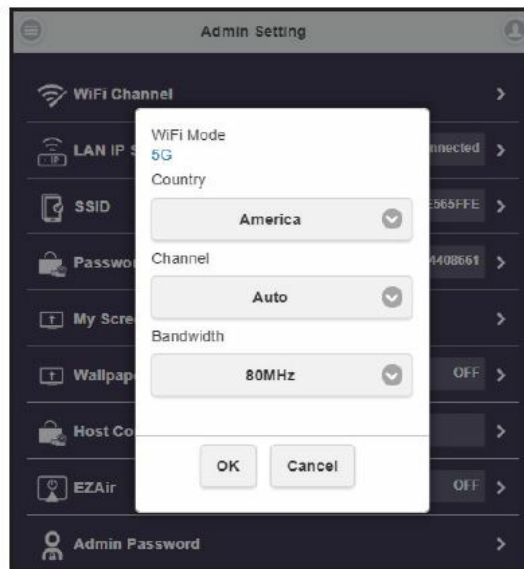


Please note that the user can only configure the Wi-Fi Channel while CastMaster is not connected to Wi-Fi.

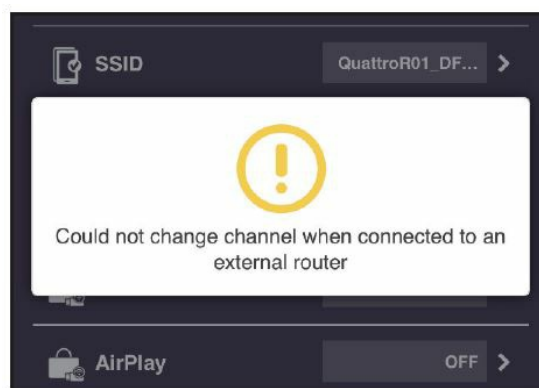

 
LAN IP Setting: Configuring LAN network, including IP address, Gateway, Netmask, DNS, etc.

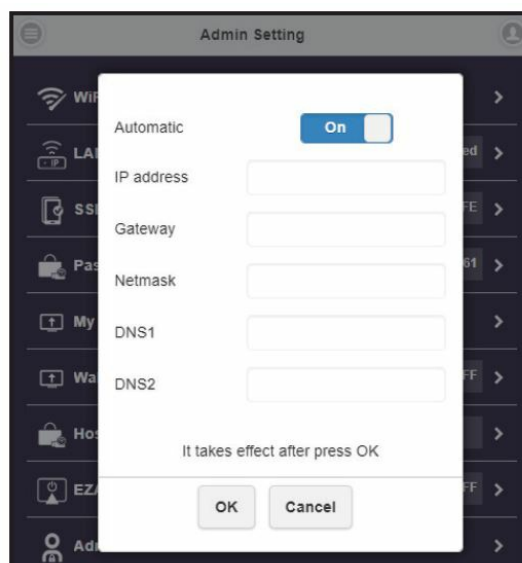


SSID: Custom setting for SSID, including renaming, Hide SSID or turning off SSID. Hide SSID: Hide SSID from the standby screen. Please make sure you've written it down.

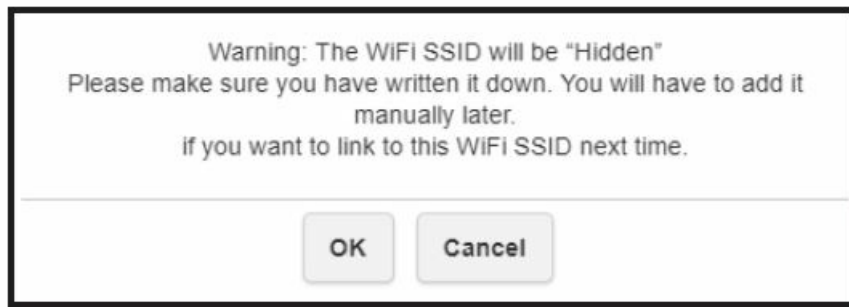


Turn Off SSID: Deactivating CastMaster's SSID function. Please make sure that the device is already connected to the LAN.

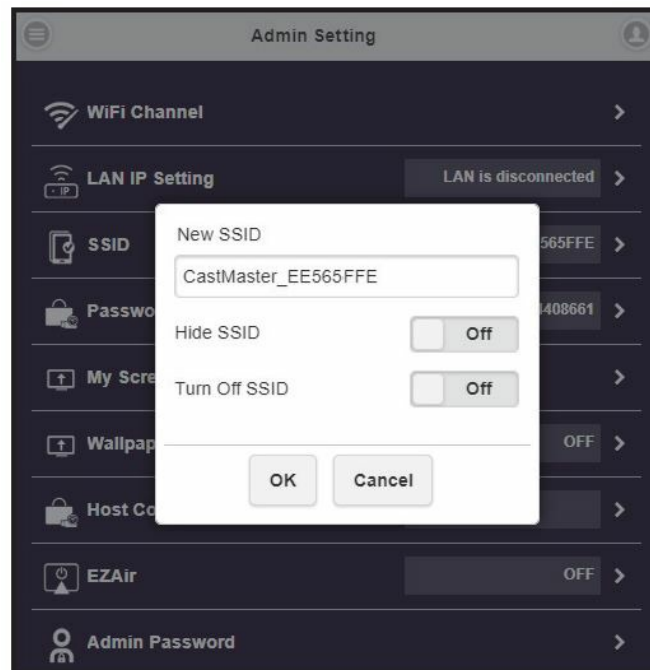


Password: Change CastMaster's Wi-Fi connection password. To provide better connection security, an admin may hide the Wi-Fi password from the standby screen.

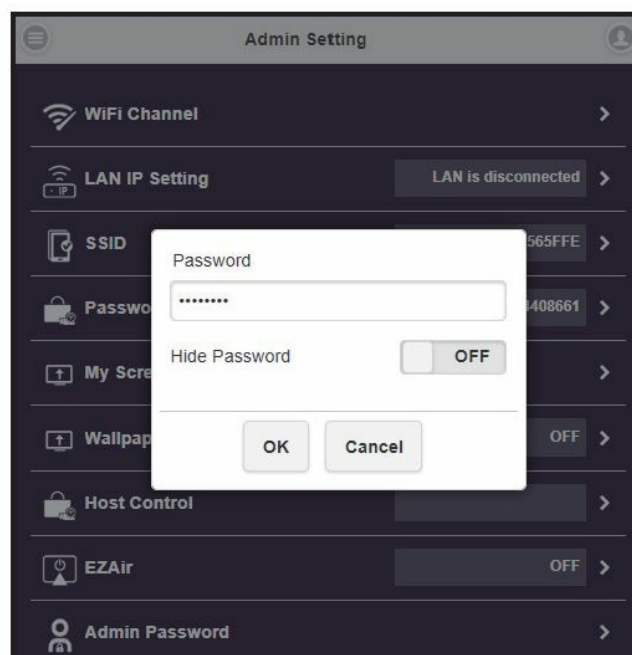


My Screen: The user may replace the default theme of the standby screen by uploading photos. Please make sure the image format is JPEG in 1920 x 1080 and smaller than 3MB

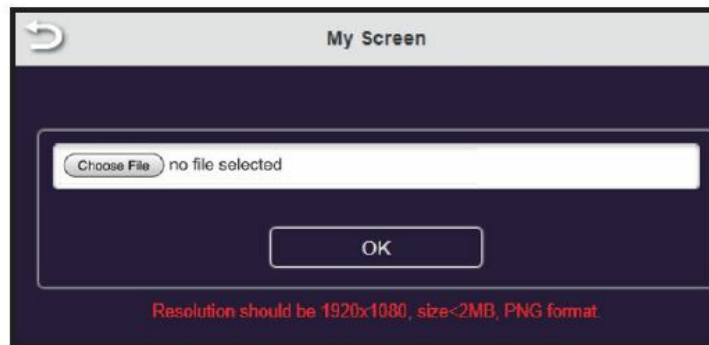


Host Control: The Admin can control other casting devices. Auto Allow Request: Once turned on, other devices can cast content to the output screen directly.

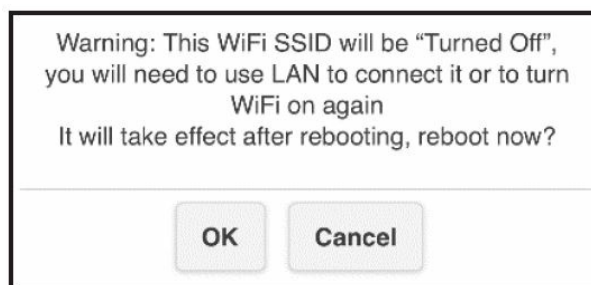

Share Screen: Once turned on, based on the number of connected devices, the output screen will be split into one-half or one-quarter. **AirPlay:** The AirPlay function is turned off by default. iOS and OSX users may turn on to utilize AirPlay, a native casting function provided by iOS or Mac OS. **Admin Password:** To provide better security, we suggest that users change an Admin Password regularly.

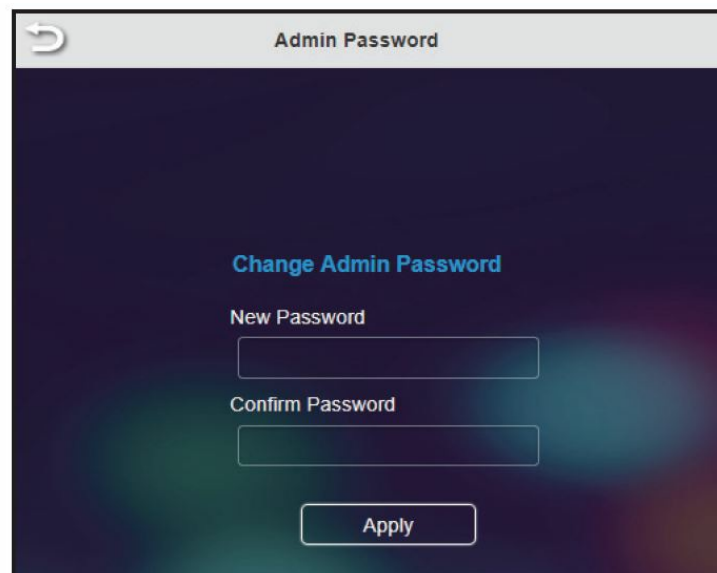

Screen Saver: Specifies how much user idle time must elapse before the screen saver is launched

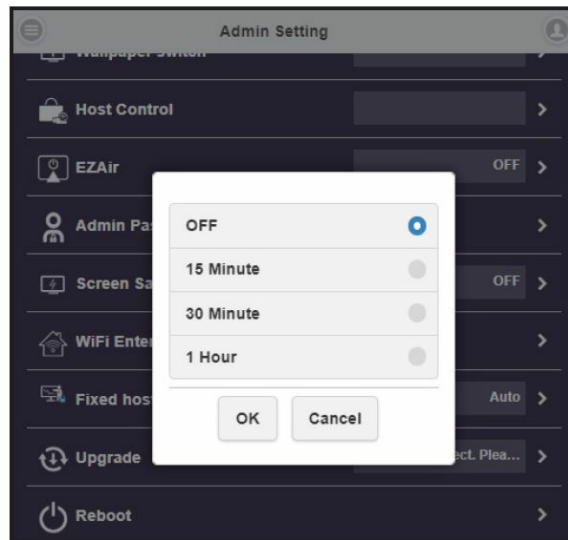


WiFi Enterprise: The Wi-Fi Enterprise function allows a user to upload a Digital certificate. This function is designed for the advanced user, including MIS Engineer, Network Admin, etc. Upgrade: Upgrade your CastMaster receiver and transmitter's firmware to the latest version. Please make sure CastMaster is connected to the internet during the updating process.




To better enhance user experience, it is highly recommended that maintain the consistency of devices' firmware versions, both CastMaster receiver and transmitter. The following section elaborates on the details process of firmware update.

 1. Please make sure the CastMaster receiver is connected to the internet.
2. Connect the CastMaster transmitter to an external power supply. Please make sure your transmitter has been paired with a receiver.
3. Click "Select All", allowing the user to update all CastMaster devices at once.
4. Press the "Update" button to activate the download process. The whole process will be done within a few minutes, please be patient.
5. Reboot: The user may reboot the device when a new configuration is applied to CastMaste

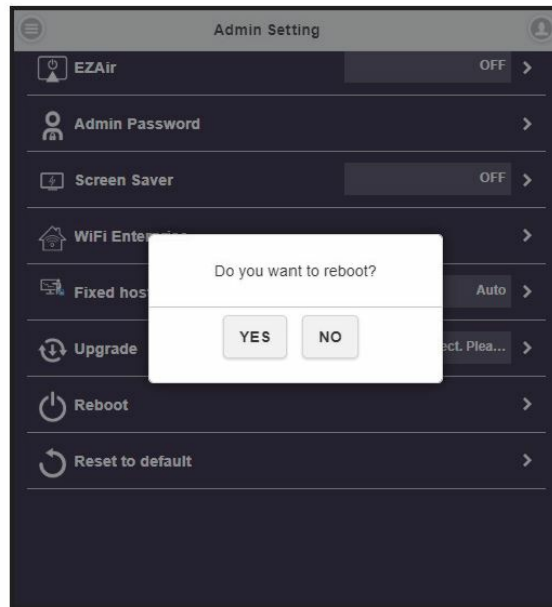

Reset to default: Reset CastMaster to factory defaults. Please note that all the custom configurations will be cleared.

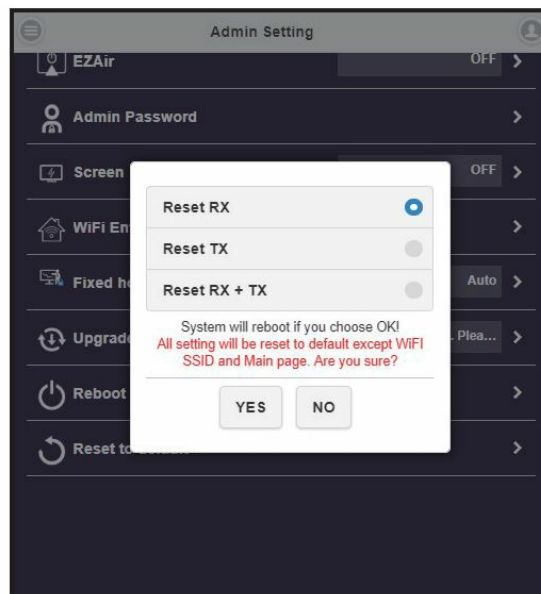

1. Reset RX: Reset CastMaster receiver only.
2. Reset TX: Reset CastMaster transmitter only.
3. Reset RX + TX: Reset both the CastMaster receiver and transmitter.


About

Showing details device information about CastMaster, including SSID, Firmware Version, Wi-Fi Channel, etc.



Download Android APP

For Android users, please enable USB debugging mode for USB display first, or you can download CastMaster APK from CastMaster’s webpage or Google Play.

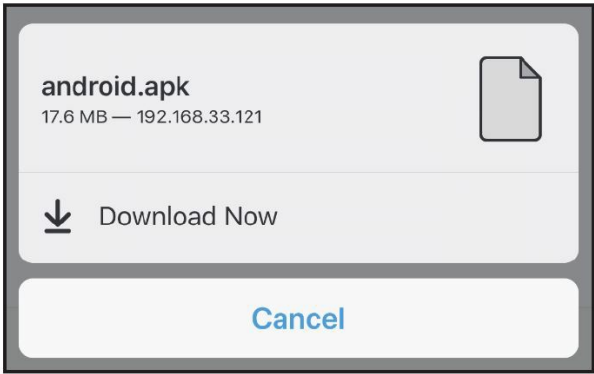

Users who download the APK from the CastMaster receiver’s webpage, CastMaster may need your further authorization and trust to install the APK file since this APK is not directly downloaded from Google Play.

Documents / Resources

<div><div>Acer CastMaster WPS1 Web Setting Manual</div><div></div></div>	<div>acer WPS1 CastMaster Wireless Presentation System [pdf] Instruction Manual WPS1, WPS1 CastMaster Wireless Presentation System, CastMaster Wireless Presentation S ystem, Wireless Presentation System, Presentation System, System</div>
--	---

References

- ^{MH} [Search - Manual-Hub.com](#)

Manuals+.