




AcraDyne LIT-MAN177 Gen IV Controller Ethernet Instructions


[Home](#) » [AcraDyne](#) » AcraDyne LIT-MAN177 Gen IV Controller Ethernet Instructions 




From the main menu, select Controller.

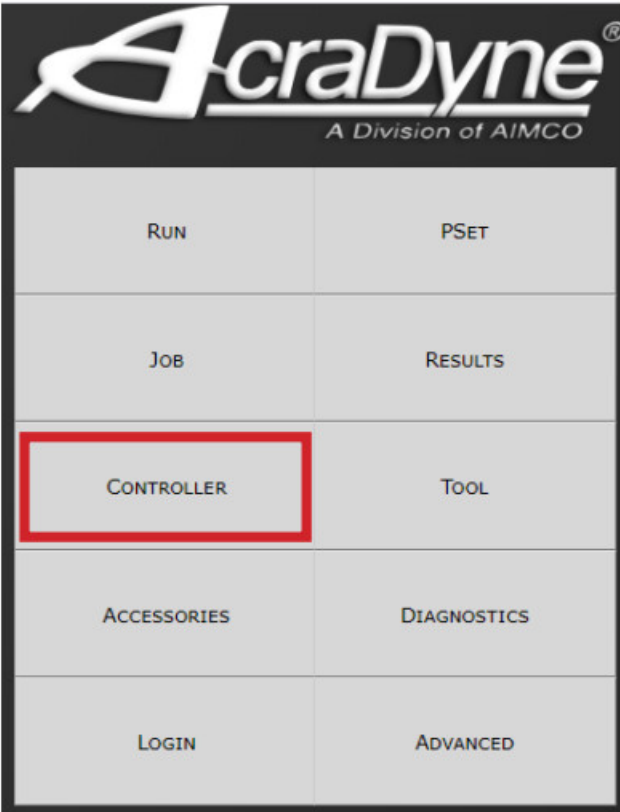

Select Communication Interfaces.

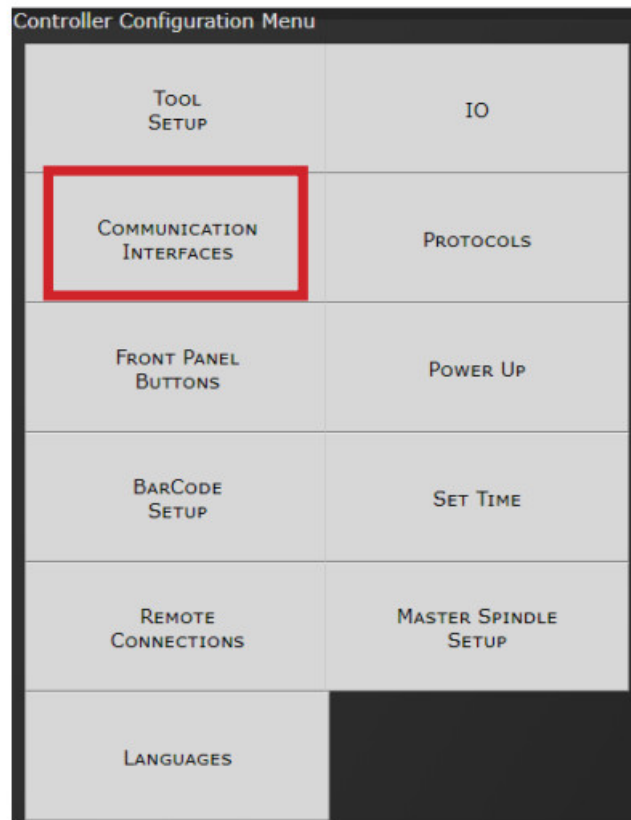

Then select Ethernet or Second Ethernet.

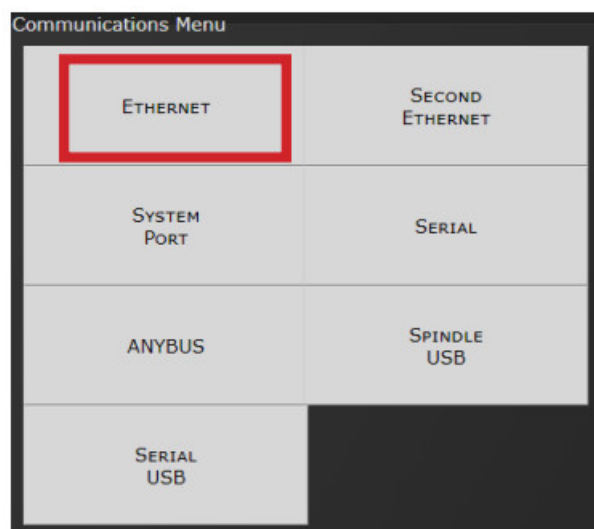

Ethernet	
Ethernet 1	
IP Address	10.10.20.10
Subnet Mask	255.255.224.0
MAC	1a:a1:34:d8:e6:04
Ethernet 2	
IP Address	192.168.0.25
Subnet Mask	255.255.255.0
MAC	5a:6d:99:cc:ad:d8
Gateway	
IP Address	10.10.0.1

✓
✗

IP Address:

IP address of controller's Ethernet port.

Subnet Mask:

Subnet mask of the controller.

Gateway: Gateway is the IP address of the gateway computer that provides access beyond the local network.

NOTE: Consult your local System Administrator to connect the controller to your Network and assign IP addresses.

QUALITY • INNOVATION • SERVICE




CORPORATE HEADQUARTERS
 10000 SE Pine Street
 Portland, Oregon 97216
 Phone: (503) 254-6600
 Toll Free: 1-800-852-1368 LIT
 AIMCO CORPORATION DE MEXICO SA DE CV
 Ave. Cristobal Colon 14529
 Chihuahua, Chihuahua. 31125
 Mexico
 Phone: (01-614) 380-1010

Contents

- 1 Documents / Resources
- 2 Related Posts

Documents / Resources

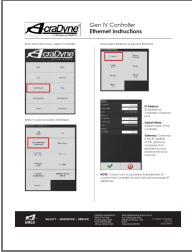	AcraDyne LIT-MAN177 Gen IV Controller Ethernet [pdf] Instructions LIT-MAN177 Gen IV Controller Ethernet, LIT-MAN177, Gen IV Controller Ethernet
---	---