



ACURITE 00280 Digital Rotary Timer Instructions

[Home](#) » [Acurite](#) » ACURITE 00280 Digital Rotary Timer Instructions 

Contents

- [1 ACURITE 00280 Digital Rotary Timer](#)
- [2 Counts Up or Down](#)
- [3 Instructions for Use](#)
- [4 Product Facts](#)
 - [4.1 Batteries](#)
 - [4.2 Measurement Range](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)

ACURITE®

ACURITE 00280 Digital Rotary Timer



Counts Up or Down

Digital timer sounds an alarm when it counts down to 00:00:00 or counts up to your desired time limit. Timer remains always on, and features a sleep mode. In sleep mode, display reads 00:00:00. This does not drain the battery.

Instructions for Use

- **Set Time:** Turn dial right to advance time, turn dial left to reverse time. Turn dial until desired time is reached.
- **Start Count Down:** Enter desired time limit and press "START/STOP" button.
- **Start Count Up:** Press "START/STOP" button without entering a time.
- **Pause Timer:** Press "START/STOP" button during count down/up.
- **Reset Time:** Press "RESET" buttons on the sides of the timer to clear the time displayed.
- **Care Instructions:** Wipe with damp cloth.

Product Facts

Batteries

- Batteries: 1 "AAA" (not included)

Measurement Range

- Time: 9 hours, 59 minutes, 59 Seconds
- Alarm: 1 min at 75 db

Limited 1-Year Warranty
Register your product on AcuRite.com

Documents / Resources

	<p>ACURITE 00280 Digital Rotary Timer [pdf] Instructions 00280, Digital Rotary Timer</p>
---	--

References

- ▶ [AcuRite Weather Monitoring | #1 Weather Station Brand in North America](#)
- ▶ [AcuRite Weather Monitoring | #1 Weather Station Brand in North America](#)