

ACURITE 00291E Red Digital Timer Instructions

Home » Acurite » ACURITE 00291E Red Digital Timer Instructions



Contents

- 1 Instructions for use:
- **2 Product Facts**
- 3 Limited 1-Year

Warranty

4 Documents /

Resources

- 4.1 References
- **5 Related Posts**

Instructions for use:

- 1. The timer is "always on".
- 2. In sleep mode, the LCD will display 00:00. This will not drain the battery.
- 3. MINUTES: Press the "MINUTES" button until the desired number is reached. Hold the "MINUTES" button down to activate "rapid advance".
- 4. SECONDS: Press the "SECONDS" button until the desired number is reached. Hold the "SECONDS" button down to activate "rapid advance".
- 5. START/STOP: Pressing the "START/STOP" button without entering a time causes the timer to start counting up. Pressing the "START/STOP" button after entering a time will cause the timer to start counting down from the time entered.
- 6. CLEAR: Press the "CLEAR" button to clear the time displayed.

When the timer is set but NOT running: Press the "START/STOP" button to begin counting down from the time entered. When the timer is running: Press the "START/STOP" button to stop the countdown.

General Timer Description: This is a countdown timer (this means that when the timer reaches 00:00 it will sound an alarm). The alarm will sound for 1 minute at 75 dB.

Product Facts

Battery: 1 AAA (not included)

Measurement Range

Time:	99 minutes, 59 seconds
Time:	99 minutes, 59 seconds



DO NOT place the unit on a hot surface or grill. **DO NOT** submerge in water.

Limited 1-Year Warranty

Register your product on **AcuRite.com**



www.AcuRite.com

AcuRite is a registered trademark of Chaney Instrument Co. 965 Wells St. • Lake Geneva, WI 53147

Documents / Resources



ACURITE 00291E Red Digital Timer [pdf] Instructions 00291E, Red Digital Timer

References

AcuRite Weather Monitoring | #1 Weather Station Brand in North America

