



AcuRite 00534 Digital Timer Instruction Manual

[Home](#) » [Acurite](#) » AcuRite 00534 Digital Timer Instruction Manual 

ACURITE®
DESIGNED TO WORK FOR YOU™

Digital Timer
#00534
Instruction Manual



Thank You for purchasing this ACURITE® product. Please read this manual in it's entirety to fully enjoy the

benefits and features of this product. Please keep this manual for future reference.

NOTE: A clear film is applied to the display at the factory that must be removed prior to using this product. Locate the clear tab and simply peel to remove.

Contents

[1 OVERVIEW OF FEATURES](#)

[2 INSTRUCTIONS FOR USE](#)


[3 WARNING](#)

[4 Documents / Resources](#)

[4.1 References](#)

[5 Related Posts](#)

OVERVIEW OF FEATURES

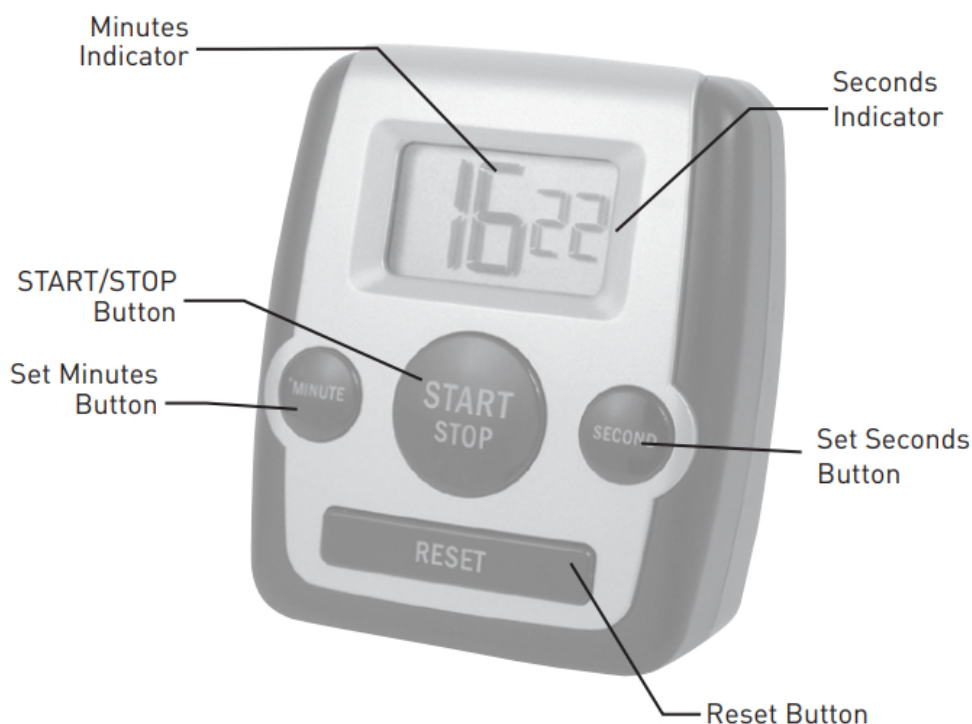

General Timer Description:

This is a countdown timer (this means that when the timer reaches 00:00 it will sound an alarm). The alarm will sound for 1 minute at 75 db.

INSTRUCTIONS FOR USE

1. The timer is "always-on".
2. In sleep mode, LCD will display 00:00:00. This will not drain the battery.
3. **MINUTES:** Press the "SET MINUTES" button until the desired number is reached. Hold the "MINUTES" button down to activate "rapid advance".
4. **SECONDS:** Press the "SET SECONDS" button until the desired number is reached. Hold the "SECONDS" button down to activate "rapid advance".
5. **START/STOP:** Pressing the "START/STOP" button without entering a time causes the timer to start counting up. Pressing the "START/STOP" button after entering a time will cause the timer to start counting down from the time entered.

6. **CLEAR:** Press the “CLEAR” button to clear the time displayed.

When the timer is set but NOT running:


Press the “START/STOP” button to begin counting down from the time entered.

When the timer is running:

Press the “START/STOP” button to stop the countdown. General Timer Description: This is a countdown timer (this means that when the timer reaches 00:00 it will sound an alarm). The alarm will sound for 1 minute at 75 db.

WARNING

WARNING: Do not place on or near hot surfaces. Do not immerse unit in water .

	<p>Please DO NOT return the product to the retail store.</p> <p>For technical assistance and product return information, please call Customer Care: 877- 221 -1252 Mon. – Fri. 8:00 A.M. to 4:45 P.M. (CST) www.chaneyinstrument.com</p>
---	---

LIMITED ONE YEAR WARRANTY

Chaney Instrument Company warrants that all products it manufactures be of good material and workmanship and to be free of defects if properly installed and operated for a period of one year from the date of purchase. REMEDY FOR BREACH OF THIS WARRANTY IS EXPRESSLY LIMITED TO REPAIR OR REPLACEMENT OF DEFECTIVE ITEMS. Any product which, under normal use and service, is proven to breach the warranty contained herein within ONE YEAR from the date of sale will, upon examination by Chaney, and at its sole option, be repaired or replaced by Chaney. In all cases, transportation costs and charges for returned goods shall be paid for by the purchaser. Chaney hereby disclaims all responsibility for such transportation costs and charges. This warranty will not be breached, and Chaney will give no credit for products it manufactures which shall have received normal wear and tear, been damaged, tampered with, abused, improperly installed, damaged in shipping, or repaired or altered by others than authorized representatives of Chaney.

THE ABOVE-DESCRIBED WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, AND ALL OTHER WARRANTIES ARE HEREBY EXPRESSLY DISCLAIMED, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTY OF MERCHANTABILITY AND THE IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE. CHANEY EXPRESSLY DISCLAIMS ALL LIABILITY FOR SPECIAL, CONSEQUENTIAL OR INCIDENTAL DAMAGES, WHETHER ARISING IN TORT OR BY CONTRACT FROM ANY BREACH OF THIS WARRANTY. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. CHANEY FURTHER DISCLAIMS ALL LIABILITY FROM PERSONAL INJURY RELATING TO ITS PRODUCTS TO THE EXTENT PERMITTED BY LAW. BY ACCEPTANCE OF ANY OF CHANEY’S EQUIPMENT OR PRODUCTS, THE PURCHASER ASSUMES ALL LIABILITY FOR THE CONSEQUENCES ARISING FROM THEIR USE OR MISUSE. NO PERSON, FIRM OR CORPORATION IS AUTHORIZED TO ASSUME FOR CHANEY ANY OTHER LIABILITY IN CONNECTION WITH THE SALE OF ITS PRODUCTS. FURTHERMORE, NO PERSON, FIRM OR CORPORATION IS AUTHORIZED TO MODIFY OR WAIVE THE TERMS OF THIS PARAGRAPH, AND THE PRECEDING PARAGRAPH, UNLESS DONE IN WRITING AND SIGNED BY A DULY AUTHORIZED AGENT OF CHANEY. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

For in-warranty repair, please contact:

Customer Care Department Chaney Instrument Company
965 Wells Street
Lake Geneva, WI 53147

Chaney Customer Care

877-221-1252

**Mon-Fri 8:00 a.m. to 4:45 p.
m. CST**

www.chaneyinstrument.com



If at any time in the future you need to dispose of this product please note that: Waste electrical products should not be disposed of together with household waste. Please recycle where facilities exist. Check with your local Authority or retailer for recycling advice

ACURITE®
DESIGNED TO WORK FOR YOU™

Product Registration

To receive product information, register your product online. It's quick and easy!

Log on to http://www.chaneyinstrument.com/product_reg.htm

Documents / Resources



[AcuRite 00534 Digital Timer](#) [pdf] Instruction Manual
00534, Digital Timer

References

- [AcuRite Weather Monitoring | #1 Weather Station Brand in North America](#)