



ACURITE 00665DIX Digital Instant Read Thermometer Instructions

[Home](#) » [Acurite](#) » ACURITE 00665DIX Digital Instant Read Thermometer Instructions 

Contents

- [1 ACURITE 00665DIX Digital Instant Read Thermometer Instructions](#)
- [1.1 USE INSTRUCTIONS](#)
- [2 Documents / Resources](#)
- [2.1 References](#)
- [3 Related Posts](#)

ACURITE 00665DIX Digital Instant Read Thermometer Instructions

BATTERY REQUIREMENTS: This product requires 1 “AAA” standard alkaline battery (not included). We do NOT recommend the use of heavy duty or rechargeable batteries.

INSTALL BATTERY: Locate the slot on the edge of the back cover and gently pry open to remove the back cover. Insert 1 “AAA” alkaline battery. Replace the back cover.

AUTO OFF: To conserve battery power, this product will automatically turn off after one hour of no use or button activity.

USE INSTRUCTIONS

1. Push the POWER button. Push “°F/°C” button to select degree scale.

2. Flip open the probe completely and insert probe into thickest part of meat or fowl near the end of cooking time.
Be sure the probe tip is not touching bone, gristle, the pan or inserted into hollow cavity of fowl.
3. To obtain accurate temperature reading, wait until numbers stop moving, approximately 5-10 seconds.
The thermometer will beep when a STABLE temperature is observed:
 - Measured temperature must be rising at a rate of +3.3°C or more in 3 seconds
 - Beep will only sound when temperature is above 48.8°C
 - Temperature reading must be stable within 1.1°C for 2 seconds
 - Beep will automatically reset after the temperature falls 8.3°C from high mark
4. Wash the probe with hot, soapy water after each insertion to prevent cross-contamination.

CARE INSTRUCTIONS: Wash the probe with hot, soapy water after each use. The housing and display area are **NOT WATERPROOF. DO NOT SUBMERGE IN WATER OR PLACE IN DISHWASHER.** Wipe the housing and display area with a soft, damp cloth. Use a VERY small amount of dishwashing soap if necessary to degrease the housing.



www.AcuRite.com



(877) 221-1252

Chaney Instrument Co. · Lake Geneva, WI 53147 · MADE IN CHINA

051413

Documents / Resources

| | |
|--|---|
| <p>ACURITE 00665DIX Digital Instant Read Thermometer</p> <p>BATTERY REQUIREMENTS: This product requires 1 "AAA" alkaline battery (not included). Insert the battery into the back of the thermometer. The battery cover will flip open. Insert the battery with the positive (+) end facing the same direction as the arrow on the inside of the cover. Close the cover. The thermometer will not operate without the battery.</p> <p>USE INSTRUCTIONS:</p> <ol style="list-style-type: none"> 1. Turn the THERMISTOR switch from "OFF" to "ON" to power the device. 2. Insert the probe into the food. The probe will beep when the temperature is stable. 3. The display will show the temperature in degrees Fahrenheit (°F) or degrees Celsius (°C). 4. The display will show the temperature in degrees Fahrenheit (°F) or degrees Celsius (°C). <p>The thermometer will beep when a STABLE temperature is observed. The display will show the temperature in degrees Fahrenheit (°F) or degrees Celsius (°C).</p> <p>CARE INSTRUCTIONS: Wash the probe with hot, soapy water after each insertion to prevent cross-contamination.</p> <p>DO NOT SUBMERGE IN WATER OR PLACE IN DISHWASHER. Wipe the housing and display area with a soft, damp cloth. Use a VERY small amount of dishwashing soap if necessary to degrease the housing.</p> <p>www.AcuRite.com (877) 221-1252</p> | <p>ACURITE 00665DIX Digital Instant Read Thermometer [pdf] Instructions</p> <p>00665DIX, Digital Instant Read Thermometer</p> |
|--|---|

References

- [AcuRite Weather Monitoring | #1 Weather Station Brand in North America](#)