




ACURITE 00887 Digital Thermometer with 10-foot Temperature Sensor Probe and Humidity Instructions

[Home](#) » [Acurite](#) » ACURITE 00887 Digital Thermometer with 10-foot Temperature Sensor Probe and Humidity Instructions 

ACURITE®

00887/0089ISBCA Digital Thermometer

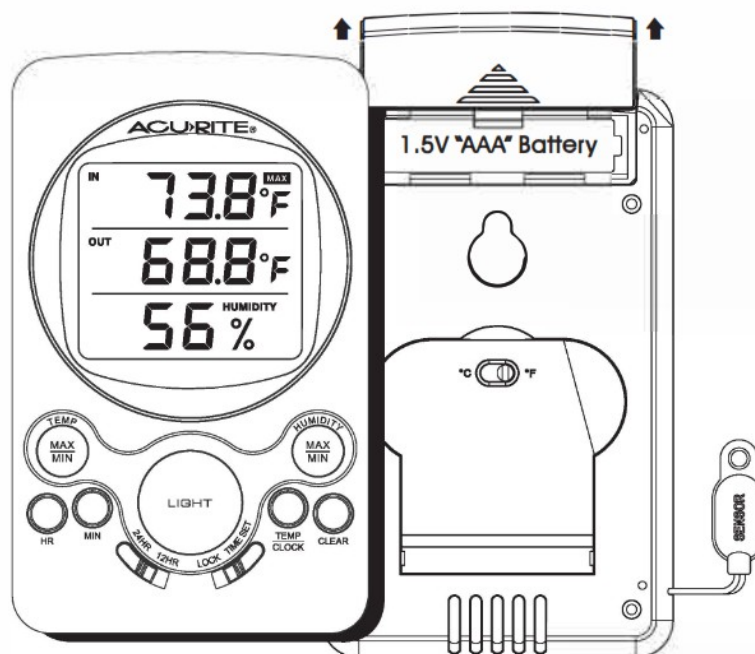

Do not return product to retail store. For Technical Assistance and product return information, please call Chaney Instrument Co. direct at 877-221- 1252

LIMITED WARRANTY – INTERNATIONAL

Consumer may have more remedies at law than follows. Chaney Instrument Company warrants to the owner, this product to be free from defect in material and workmanship for one year from date of purchase. CHANEY

INSTRUMENT SHALL NOT BE LIABLE FOR ANY INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, WHETHER ARISING IN CONTRACT OR TORT. Chaney Instrument's obligation (at its option) is limited to repair or replace this product. For in-warranty repair, send clock, accompanied by Guarantee, bearing Dealer's name and date of purchase, with \$5.00 to cover handling and postage, to:

www.chaneyinstrument.com Tel: 877-221-1252 Made in China	Chaney Instrument Company 965 Wells Street Lake Geneva, Wisconsin 53147
--	---

Contents

1 BATTERY

INSTALLATION:

2 TEMP./CLOCK DISPLAY:

3 SETTING THE CLOCK:

4 °F /0 c DISPLAY

5 BACK-LIGHT:

6 RANGES:

7 OUT OF RANGE:

8 Documents / Resources

8.1 References

9 Related Posts

BATTERY INSTALLATION:

Slide the battery door open at the back of the unit and insert one "AAA" size Alkaline battery as indicated.

TEMP./CLOCK DISPLAY:

Press the "TEMP/CLOCK" button to switch between clock and indoor thermometer.

SETTING THE CLOCK:

1. Slide the "TIME SET LOCK" switch on the front of the unit to "TIME SET" position.e
2. Depress the "HR" button to set the correct hour.e
3. Depress the "MIN" button to set the correct minute.e
4. Slide the switch back to "LOCK" position.e

°F /0 c DISPLAY

Use the slide switch (°F /° C) on the back to select between Fahrenheit/Celsius display.

Maximum/Minimum Temperature:

1. Press the "TEMP MIN/MAX" button once to display the maximum and minimum indoor recorded temperature.
2. Press the "CLEAR" button to reset the recorded indoor temperatures
3. Press the "TEMP MIN/MAX" button twice to display the maximum and minimum outdoor recorded temperature.
4. Press the "CLEAR" button to reset the recorded outdoor temperaturese

Maximum/Minimum Humidity:

1. Press the "HUMIDITY MIN/MAX" button once to display the maximum recorded humidity.
2. Press "CLEAR" to reset the recorded maximum humidity.
3. Press the "HUMIDITY MIN/MAX" button twice to display the minimum recorded humidity.
4. Press "CLEAR" to reset the recorded minimum humidity

BACK-LIGHT:

Press the "LIGHT" button for Illumination. (Note: frequent use of back-light will shorten battery life)

RANGES:

Indoor: -4°F to 122°F (-20°C to 50°C)

Outdoor: -58°F to 158°F (-50°C to +70°C)


Humidity: 20% • 90%

OUT OF RANGE:

The thermometer will display a "LO" or "HI" when the temperature or humidity reach a level out of the ranges stated above.

PLEASE DISPOSE OF OLD OR DEFECTIVE BATTERIES IN AN ENVIRONMENTALLY SAFE WAY AND IN ACCORDANCE WITH YOUR LOCAL LAWS AND REGULATIONS. BATTERY SAFETY: Follow the polarity(+/-) diagram in the battery compartment. Promptly remove dead batteries from the device. Dispose of used batteries properly. Only batteries of the same or equivalent type as recommended are to be used. DO NOT incinerate used batteries. DO NOT dispose of batteries in fire, as batteries may explode or leak. DO NOT mix old and new batteries or types of batteries (alkaline/standard). DO NOT use rechargeable batteries. DO NOT recharge non-rechargeable batteries. DO NOT

Documents / Resources

	<p>ACURITE 00887 Digital Thermometer with 10-foot Temperature Sensor Probe and Humidity [pdf] Instructions</p> <p>00887, Digital Thermometer with 10-foot Temperature Sensor Probe and Humidity</p>
---	---

References

- [AcuRite Weather Monitoring | #1 Weather Station Brand in North America](#)