#### Skip to content

#### Manuals+

User Manuals Simplified.



# AcuRite 06000RM 3-in-1 Sensor Wind Cup Assembly Instruction Manual

Home » Acurite » AcuRite 06000RM 3-in-1 Sensor Wind Cup Assembly Instruction Manual

Contents hide

1 AcuRite 06000RM 3-in-1 Sensor Wind Cup Assembly

2 Documents / Resources

2.1 References

3 Related Posts



#### AcuRite 06000RM 3-in-1 Sensor Wind Cup Assembly



3-in-1 Sensor Wind Cup Assembly model 06000RM

If you're experiencing problems with your 3-in-1 sensor such as no wind speed readings or lower than expected wind speed readings and your 3-in-1 sensor is mounted properly, the bearings of the wind cup assembly may be worn and will require replacement.

NOTE: A 3-in-1 sensor is required to install the Replacement Wind Cup Assembly. You will need to remove your 3-in-1 sensor from it's mounting location to install the new assembly.

### WHAT YOU NEED:

- 3-in-1 sensor
- · Phillips head screwdriver



#### REMOVE BATTERIES FROM SENSOR TO ELIMINATE ERRONEOUS READINGS WHEN HANDLING AND TRANSPORTING SENSOR:

- 1. Press the release lever and pull off the lower housing of the sensor.
- Remove the battery compartment cover and remove the batteries.
- 3. After the sensor bearing is replaced, reinsert the batteries.
  Follow the polarity (+/-) diagram in the battery compartment.
  Replace the battery compartment cover and the lower housing of the sensor.



1. Remove 4 LONG screws and separate the upper portion from the lower portion of the sensor.



2. Remove the old assembly and discard.



3. Line up the screw holes on the wind cup assembly with the 3-in-1 sensor.



4. Reinstall 4 LONG screws to con the wind cup assembly with the sensor. Installation is complete!

www.AcuRite.com



## Documents / Resources



AcuRite 06000RM 3-in-1 Sensor Wind Cup Assembly [pdf] Instruction Manual 06000RM, 3-in-1 Sensor Wind Cup Assembly

#### References

AcuRite Weather Monitoring | #1 Weather Station Brand in North America

#### Manuals+,

- homeprivacy