




ACURITE 06075M Lightning Sensor Installation Guide

[Home](#) » [Acurite](#) » ACURITE 06075M Lightning Sensor Installation Guide 

ACU RITE®

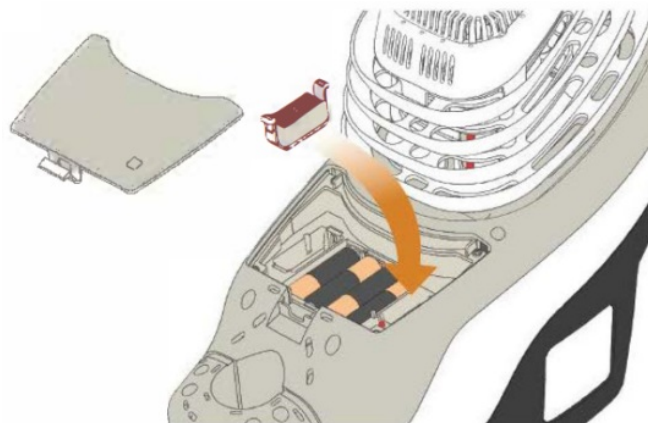

Installation Guide

Contents

- [1 INSTALLATION](#)
- [2 Documents / Resources](#)
 - [2.1 References](#)
- [3 Related Posts](#)

INSTALLATION

1. Remove the battery compartment cover.
2. Align the sensor notch with the module slot.
3. Press the lightning sensor downward firmly (until the clips click into place).
4. Replace battery compartment cover.

Model Number 06075M

Documents / Resources



[ACURITE 06075M Lightning Sensor](#) [pdf] Installation Guide
06075M, 06075M Lightning Sensor, Lightning Sensor, Sensor

References

- [▶ AcuRite](#)
- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.